

# **EPower Controller**

## **User Guide**

HA179769 Issue 16

December 2025





# **Table of Contents**

Table of Contents	3
Safety Notes	7
Introduction	15
Unpacking the Units	. 15
Installation	17
Mechanical Installation	. 18
Fixing Details	. 18
Dimensional Details	
Electrical Installation	
Driver Module	
Power Modules	. 38
Operator Interface	59
Display	
Pushbuttons	
Configuration	
Operation	
Menu Item Value Selection	
BeaconsFront Panel Messages	
Instrument Events	
Indication Alarms	
System Alarms	
Process alarms	
Configuration Errors	
Standby Errors	
Power Module Errors	. 61
General Errors	
Reset Errors	
Fatal Errors	. 62
QuickStart	63
Quickstart Menu Parameters	. 64
Some Definitions	. 66
Firing Modes	
Feedback Type	
Transfer Mode	
Limitation Features	. 69
Operator Menu	73
Summary Pages	
Single Phase Summary Page	
Two or Three Phase Summary Page	
Two by Two Phase Summary Page	
Top Level Operator (User) MenuAlarm Summary Pages	
Event Log	
Strategy Standby Mode	
Engineer and Configuration Level Menus	77
Access to the Engineer and Configuration Menus	
Engineer Level Menu	
Configuration Level Menu	
Top Level Menu	
Access Menu	
Engineer Level Menu	

Configuration Level Access Menu	81
Analogip Menu	83
Analogue Input Parameters	83
Analogop Menu	
Analogue Output 'Main' Submenu Parameters	84
Analogue Output 'Alm' Parameters	
Comms Menu	
Communications User Menu Parameters	
Comms Remote Panel Parameters	
Control Menu	89
Control Setup Parameters	91
Control Main Parameters	92
Control Limit Parameters	
Control Diag Parameters	
Control Alarm Disable Parameters	
Control Alarm Detection Parameters	
Control Alarm Signalling Parameters	
Control Alarm Latch Parameters	
Control Alarm Acknowledgement Parameters	97
Control Alarm Stop Parameters	98
Counter Menu	98
Counter Configuration Menu	99
Cascading Counters 1	
Digital I/O Menu	
Energy	
Energy Counter Parameters1	
Resolution1	
Event Log Menu1	
Fault Detection Menu1	05
Firing Output Menu 1	06
nstrument Menu1	
Instrument Display Parameters1	
Instrument Config Parameters	
p Monitor Menu	
I e e e e e e e e e e e e e e e e e e e	
_gc2 (Two Input Logic Operator) Menu1	
Lgc2 Parameters1	
_gc8 (Eight-Input Logic Operator) Menu1	
Math2 Menu1	
Modulator Menu1	118
Network Menu1	119
Meas Submenu1	
Network Setup Submenu1	
Network Alarms	
PLM (Station and Network LM Parameters) Menu	
Main	
Predictive Load Management 'Station' Menu 1	
Predictive Load Management 'Network' Menu1	
Predictive Load Management 'Alarm' Menus 1	32
PLMChan (Load Management Option Interface) Menu	32
Load Tap Changer (LTC) Option1	
MainPrm Parameters 1	
LTC Alarm 1	
LTC Application Wiring	
Relay Menu	
Relay Parameters	
SetProv Menu1	
Setpoint Provider Parameters1	
Гimer Menu 1	41
Timer Configuration 1	
Timer Examples 1	
Fotaliser Menu	
Jser Value Menu	
2001 YAINO IVIOLIA	70

3	145
ITools Connection	
Serial Communications	
Ethernet (Modbus TCP) Communications	
Direct Connection	
Scanning for Instruments	
Graphical Wiring Editor	
Toolbar	
Wiring Editor Operating Details	
Parameter Explorer	. 161
Parameter Explorer Detail	
Explorer Tools	. 163
Fieldbus Gateway	. 164
Device Panel	
Watch/Recipe Editor	
Creating a Watch List	
Watch Recipe Toolbar Icons	
Watch/Recipe Context Menu	
User Pages	
User Page Creation	
Style Examples	. 173
User Pages Tools	. 174
Parameter Addresses (Modbus)	175
Introduction	
Parameter Types	. 175
Parameter Scaling	. 175
Conditional Scaling	. 176
Parameter Table	. 177
Predictive Load Management Option	210
General Description	
Load Management Layout	
Power Modulation and Accuracy	
Load Sequencing	
Incremental Control Type 1	
Incremental Control Type 2	
Rotating Incremental Control	
Distributed Control	
Incremental/Distributed Control	
Rotating Incremental Distributed Control	
Load Sharing	
Total Power Demand	. 225
Sharing Efficiency Factor (F)	
Sharing Algorithm	
Load Shedding	
Definitions	
Reduction of Power Demand	. 227
Load Shedding Comparisons	
Configuration	. 232
iTools Graphical Wiring	. 232
Predictive Load Management Function Block Details	
Master Election	
Master Election Triggers	. 239
Alarm Indication	. 239
Trouble Shooting	. 239
Wrong Station Status	. 240
Alarms	241
System Alarms	
Missing Mains	
Thyristor Short Circuit	. 44 I

Thyristor Open Circuit	
Fuse Blown	
Over Temperature	
Network Dips	
Mains Frequency Fault  Power Board 24V Fail	
Process Alarms	
Total Load Failure (TLF)	
Analogue Output Fault	
Chop Off	
Mains Voltage Fault	
Temperature Pre-Alarm	
Closed Loop Break	
Partial Load Failure (PLF)	
Partial Load Unbalance (PLU)	
Indication Alarms	
Process Value Transfer Active	
Limitation Active	
Load Over-Current	
Over Load Shedding (Ps over Pr) Alarm	
- ,	
Technical Specification	247
Maintenance	257
Safety	257
Preventive Maintenance	
Thyristor Protection Fuses	
•	
Appendix A: Remote Display Unit	262
Appoinant / a remote Biopiay offic	203
Introduction	263
Introduction	263
IntroductionSafety and EMC Information Notes	
Introduction	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options Home Page Timeout	263 268 269 269 270 272 272 274 274 276 279 282 286 286 288 289 290 290
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options	263 268 269 269 270 272 272 274 274 276 279 282 286 286 288 289 290 290
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options Home Page Timeout  Appendix B Three Phase Feedback	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options Home Page Timeout	
Introduction Safety and EMC Information Notes Mechanical Installation Electrical Installation Pinout Wiring Over Temperature Application Wiring First Switch On Operating Mode Front Panel Layout Level 1 Operation Level 2 Operation Level 3 and Conf Level Operation Other Features Alarms and Errors Recipes Epower SetProv Configurations PV Retransmission Digital Alarm Options Home Page Timeout  Appendix B Three Phase Feedback Transformer Representation and Labelling	

EPOWER CONTROLLER Safety Notes

## **Safety Notes**

## **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- 1. If the product (EPower) is used in a manner not specified by the manufacturer, the protection provided by the product might be impaired.
- 2. Any adjustment, maintenance and repair of the opened apparatus under voltage, is forbidden for safety reasons.
- 3. The product must be installed and maintained by suitably qualified personnel, authorized to work in an industrial low voltage environment.
- 4. The product is not suitable for isolation applications, within the meaning of EN60947-1.
- 5. Do not exceed the device's ratings.
- 6. The product is designed to be installed in a cabinet connected to the protective earth ground
  - CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards
  - U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards
- 7. The product has been designed for pollution degree 2 according to IEC60947-1 definition: Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation may be expected.
  - Electrically conductive pollution must be excluded from the cabinet in which the product is mounted. To ensure a suitable atmosphere in conditions of conductive pollution, fit adequate air conditioning/filtering/cooling equipment to the air intake of the cabinet, e.g. fitting fan-cooled cabinets with a fan failure detection device or a thermal safety cut-out.
- 8. Before carrying out any wiring to the product, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.
- 9. Before any other connection is made, the protective earth ground terminal shall be connected to a protective conductor. The protective earth ground connection must be made by using a lug terminal of size as given in table 2.2.1.
  - The cables must be rated 90°C stranded copper only CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards
  - U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards. The protective earth ground connection must be made using a UL-listed lug terminal.
- 10. The protective earth ground connection must be tightened according to the torque values defined in table 2.2.1. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.
- 11. Any interruption of the protective earth ground conductor inside or outside the product, or disconnection of the protective earth ground terminal is likely to make the product dangerous under some conditions. Intentional interruption is prohibited. Whenever it is likely that protection has been impaired, the unit shall be made inoperative, and secured against accidental operation. The manufacturers nearest service centre must be contacted for advice.

Failure to follow these instructions will result in death or serious injury.

Safety Notes EPOWER CONTROLLER

### **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- 12. According to the CE and UL certifications, high speed fuses (supplemental fuses) are mandatory for compliant installation and protection of the EPower controller against short circuit. See paragraph 12.3 for details.
- 13. The EPower's rated short-circuit conditional current is defined for co-ordination type 1. If opening of either the branch circuit protective or the supplemental (high speed) fuses occurs, the product shall be examined by suitably qualified personnel and replaced if damaged.
- 14. To achieve IP10 rating according to IEC60529, power connections must be made by using lug terminals of size as given in Table 4. U.L.: Power connections connection must be made using UL-listed lug terminals.
- 15. The mains supply fuse within the Driver Module is not replaceable. If it is suspected that the fuse is faulty, the manufacturer's local service centre should be contacted for advice.
- 16. The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.
- 17. The relays outputs are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:300V).

Failure to follow these instructions will result in death or serious injury.

EPOWER CONTROLLER Safety Notes

## **A** DANGER

#### **HAZARD OF FIRE**

- 1. This product does not contain any branch-circuit protection or internal safety overload protection. The installer must add branch-circuit protection upstream of the unit, and provide external or remote safety overload protection to the end installation. Branch circuit shall be rated according to maximum current in each phase.
  - CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
  - UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.
- Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.
  - CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards
  - U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.
- 3. Power terminals must be tightened according to the torque values defined in Table 4. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.
- 4. The tightening torques for supplemental (high speed) fuses should be checked according to value defined in table 12.3. Ceramic fuse bodies should be checked for visible cracks. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.
- 5. Neutral cross-sectional area when neutral is connected to the star point of the load (4S load type):
  - Without current limit activated, maximum neutral current is not upper than maximum current in each phase. The cross-sectional area of the neutral conductor, shall be sized to carry the maximum phase current.
  - With current limit activated, maximum neutral current may reach  $\sqrt{3}$  x current limit setting. The cross-sectional area of the neutral conductor shall be sized to carry up to  $\sqrt{3}$  x current limit setting.
  - CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards
  - U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.
- 6. The cables used to connect the remote voltage sensing inputs (if fitted) and the cable used to connect the reference input in 4S, 6D and two-leg configurations must be correctly protected by branch-circuit protection. It is the responsibility of the user to add branch-circuit protection. Such branch-circuit must comply with applicable local regulations. UL: The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

Safety Notes EPOWER CONTROLLER

## **A** DANGER

#### **HAZARD OF FIRE**

- 7. The cables used to connect the EPower auxiliary/fans supply must be correctly protected by 3A branch-circuit protection. (3A rating selected to protect AWG18 fan supply wiring). It is the responsibility of the installer to add branch-circuit protection. Such branch-circuit protection must comply with applicable local regulations.
  - UL: The Auxiliary (Fan) supply is Installation category II. Supply to Auxiliary (Fan) supply shall be provided by isolated transformer secondary grounded protected by a Listed 3A branch circuit fuse. The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.
- 8. EPower alarms protect thyristors and loads against abnormal operation, and provide the user with valuable information regarding the type of fault. Under no circumstances must these alarms be regarded as a replacement for proper personnel protection. It is strongly recommended that the installing authority include independent, system-safety mechanisms to protect both personnel and equipment against injury or damage, and that such safety mechanisms be regularly inspected and maintained. Consult the EPower supplier for advice.

Failure to follow these instructions will result in death or serious injury.

### Reasonable use and responsibility

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

EPower is an "AC semiconductor controllers for non-motor loads" designed according to IEC60947-4-3 & UL60947-4-1, it meets the requirements of the Low voltage and EMC European Directives which covers safety and EMC aspects

Use in other applications, or failure to observe the installation instructions of this manual may impair safety or EMC.

The safety and EMC of any system incorporating this product is the responsibility of the assembler/installer of the system.

Failure to use approved software/hardware with our hardware products may result in injury, harm, or improper operating results

Eurotherm shall not be held responsible for any damage, injury, losses or expenses caused by inappropriate use of the product (EPower), or failure to comply with these instructions.

EPOWER CONTROLLER Safety Notes

### **MARNING**

#### **HAZARD OF FIRE**

1. EPower has been designed for a maximum temperature of 40°C at 1000m altitude at nominal current (35°C at 2000m altitude at nominal current), refer to derating curve for upper temperature. At commissioning ensure that the ambient temperature inside the cabinet does not exceed the limit under maximum load condition.

- 2. The product is designed to be mounted vertically. There must be no obstructions (above or below) which could reduce or hamper airflow. If more than one instance of the product is located in the same cabinet, they must be mounted in such a way that air from one unit is not drawn into another.
- 3. To reach the thermal performance the gap between two EPower must be at minimum 10mm.
- 4. The Driver Module power supply can work from any supply voltage between 85V ac and 265V ac. The fans (if fitted) on the power modules are specified for use at 115V ac or 230V ac, as defined at time of order. It must therefore be ensured that the fan voltage matches the supply voltage, or the fan will either fail within a short period, or it will be ineffective at cooling.
- 5. To maintain maximum cooling efficiency, the heat-sink and fans must be cleaned regularly and fan operation need to be checked. Periodicity depends on the local environment, but should not exceed 1 year.
- 6. Product current rating must be upper or equal to the maximum current of the load. The maximum current of the load shall be calculated taking account of load resistive tolerance (tolerance and variation due to temperature) and voltage tolerance. Failure to follow these instructions may result in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload.
- 7. Current limit function by phase angle reduction may be selected to limit the inrush current of the load and reduce the current rating of the product. With Current limit function by phase angle reduction the product rating must be greater than or equal to the nominal current of the load and to Current limit function by phase angle reduction setting.
- 8. With External current feedback, Current limit function by phase angle reduction will limit the inrush current in the load which may not be the current in the product (ie resistive load at the secondary side of a transformer).
  - Ensure that the current in the product does not exceed the product current rating with the setting of Current limit function by phase angle reduction.
- 9. The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC), The product rating shall be selected to cope with inrush current according to warning 6. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload.
- 10. Duty cycle current limiting features (in burst mode), does not limit the peak current value. The product rating shall be selected to cope with the peak current value according to warning 6. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Safety Notes EPOWER CONTROLLER

### **WARNING**

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

 The product shall have one of the following as a disconnecting device, fitted within easy reach of the operator, and labelled as the disconnecting device: A switch or circuit breaker which complies with the requirements of IEC60947-1 and IEC60947-3.

A separable coupler which can be disconnected without the use of a tool.

2. In 4S, 6D and two-leg configurations do not use the reference terminal to replicate voltage signals (in a 'daisy chain'), as the PCB track between the two poles is not designed to withstand short-circuit.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **WARNING**

#### UNINTENDED EQUIPMENT OPERATION

- 1. External feedback connections must be correctly phased (figure 2.2.2b) or the unit might switch to full conduction at start-up.
- 2. With external feedback: The current transformer should be chosen such that its full-scale output is 5 amps.
- 3. Signal and power voltage wiring must be kept separate from one another. Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.
- 4. This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the installer may be required to take adequate mitigation measures.
- 5. To ensure that EPower complies with Electromagnetic Compatibility requirements, ensure that the panel to which it is attached is correctly grounded. The ground connection, designed to ensure ground continuity, is not in any way a substitute for the protective earth ground connection.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **A** CAUTION

#### **HAZARD OF BURNS**

 Under some circumstances, the EPack heatsink temperature may rise by more than 50°C and it can take up to 15 minutes to cool after the product is shut down.

Ensure that any contact with hot surfaces is avoided.

Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.

Give consideration to additional warnings and barriers to prevent injury.

Failure to follow these instructions can result in injury or equipment damage.

EPOWER CONTROLLER Safety Notes

### **A CAUTION**

### UNINTENDED EQUIPMENT OPERATION

1. In burst mode and primary of transformer load, the star-star configuration is not recommended as it may become unstable, high speed fuse may blow.

2. Fans have limited lifetime which depends on environment. As preventive maintenance their periodic replacement need to be considered.

Failure to follow these instructions can result in injury or equipment damage.

#### **NOTICE**

#### **EQUIPMENT PROTECTION**

- 1. For software versions prior to version 3 only. The EEPROM, used to retain configuration parameters whilst power is off, has a lifetime of at least 100,000 writes. If the Fieldbus Gateway is configured to include such configuration parameters (see list below), then the lifetime of the EEPROM may be reduced. In this case an 'EE Checksum Fail Error' message appears at power up, and the Driver Module will fail to start, and will have to be replaced.
- In order to maintain protection against damage due to electrostatic discharge, any ribbon cable which is chafed, scratched or otherwise damaged must be replaced. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions can result in equipment damage.

### Selv

Safety Extra Low Voltage. This is defined (in EN60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency etc. See IEC 61140 for further details.

#### Symbols Used on the Instrument Labelling

One or more of the symbols below may appear as a part of the instrument labelling.

<b>(</b>	Protective earth ground terminal	A	Risk of electric shock
$\sim$	AC supply only		Precautions against static electrical discharge must be taken when handling this unit.
CUL US LISTED	Underwriters laboratories listed mark for Canada and the U.S.	$\triangle$	Refer to the manual for instructions
	Do not touch heatsink Hot Surface	CE	CE Mark. Indicates compliance with the appropriate European Directives and Standards
49	Complies with the 40 year Environ- ment Friendly Usage Period	<u></u>	Regulatory Compliance Mark (RCM) to Australian Communication and Media Authority

### **Hazardous Substances**

This product conforms to European Restriction of Hazardous Substances (RoHS) (using exemptions) and Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Legislation.

RoHS Exemptions used in this product involve the use of lead. China RoHS legislation does not include exemptions and so lead is declared as present in the China RoHS Declaration.

Californian law requires the following notice:

WARNING: This product can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: http://www.P65Warnings.ca.gov.

部件名称	有害物质 - Hazardous Substances							
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)		
金属部件 Metal parts	х	О	О	0	o	0		
塑料部件 Plastic parts	0	0	0	0	0	0		
电子件 Electronic	х	О	0	0	0	0		
触点 Contacts	0	0	0	0	0	0		
线缆和线缆附件 Cables & cabling accessories	0	o	0	0	o	o		

#### 本表格依据SJ/T11364的规定编制。

O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Signed (Kevin Shaw, R&D Director):

11Show

Date: 24th June 2016

EPOWER CONTROLLER Introduction

### Introduction

This document describes the installation, operation and configuration of an EPower 'station' (Driver Module plus one or more Power Modules). The Driver Module comes in one version, but the Power Modules are available in a number of different power ratings, which are identical in operation and configuration, but which differ in physical size according to the number of phases being controlled and the maximum current being supplied. All but the 50 Amp and 100 Amp unit come with cooling fans attached.

The Driver Module includes the following analogue and digital inputs and outputs, fitted as standard:

10V supply

Two analogue inputs

One analogue output

Two digital Inputs/Outputs.

One change-over relay under software control, configurable by the user.

Also fitted are a Watchdog relay, a configuration port and an isolated EIA485 port for attaching an optional Remote Display.

Three further (optional) I/O modules may be fitted, similar to the standard module but with the addition of an output change-over relay. Other options provide for external voltage and current feedback and for predictive load management.

Section two of this manual gives connector locations and pinouts.

The operator interface consists of a display comprising four lines of 10-characters (where each character is formed using a 5 x 7 LCD dot matrix) and four push buttons for navigation and data selection.

## **Unpacking the Units**

The units are despatched in a special pack, designed to give adequate protection during transit. If any of the outer boxes show signs of damage, open them immediately and examine the instrument. If there is evidence of damage, do not operate the instrument and contact your local representative for instructions.

After the instrument has been removed from its packing, examine the packing to ensure that all accessories and documentation have been removed.

Store the packing for future transport requirements. Or please dispose of your packaging in a responsible and environmentally conscious manner. Where possible, reuse or recycle materials. Please ensure all disposal and recycling is undertaken in compliance with your local law and regulations.

Introduction EPOWER CONTROLLER

## Installation

### **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

 The product is designed to be installed in a cabinet connected to the protective earth ground CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards

U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards

The product is not suitable for isolation applications, within the meaning of EN60947-1.

Failure to follow these instructions will result in death or serious injury.

### **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

1. The product is not suitable for isolation applications within the meaning of EN60947-1.

Failure to follow these instructions will result in death or serious injury.

## **WARNING**

#### **HAZARD OF FIRE**

- 1. EPower has been designed for a maximum temperature of 40°C at 1000m altitude at nominal current (35°C at 2000m altitude at nominal current), refer to derating curve for upper temperature. At commissioning ensure that the ambient temperature inside the cabinet does not exceed the limit under maximum load condition.
- The product is designed to be mounted vertically. There must be no obstructions (above or below) which could reduce or hamper airflow. If more than one instance of the product is located in the same cabinet, they must be mounted in such a way that air from one unit is not drawn into another.
- 3. To reach the thermal performance the gap between two EPower units must be at minimum 10mm.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **Mechanical Installation**

### **Fixing Details**

Units are designed to operate at an operating temperature not exceeding 40°C (unless the modules are derated - see <u>specification</u>). Units must be installed in a fan-cooled cabinet (with fan failure detection or thermal safety cutout). Condensation and conductive pollution should be excluded to IEC 60664-1 pollution degree 2. The cabinet must be closed and connected to the protective earth according to IEC 60634 or applicable national standard.

Units must be mounted with the heat sink vertical with no obstructions above or below which impede the airflow. Where more than one set of modules is enclosed in the same cabinet, they must be mounted such that air from one unit is not drawn in by another mounted above it. An air gap of at least 5 cm should be maintained between adjacent sets of modules.

The units are designed for fitting to the front face of a mounting panel using the fixings supplied. The thyristor power modules are heavy, so a Health and Safety risk assessment should be carried out before personnel attempt to lift the units. It should also be ensured, prior to fitting, that the mechanical strength of the panel is sufficient for the mechanical load being applied. Table 1 gives the weights of the various units.

### General

Figure 1, below, shows details of a generalised mechanical assembly for the top of the units. Assembly details for the bottom brackets is similar, except that there is no protective earth ground fixing. The power module shown is a 400 Amp unit for which the module is fixed to the support brackets using holes A and B. Lower current power modules use only one screw (C) to secure the module to the support bracket.

		Weight (including 2 kg (4.4 lb) for driver module)						
Current	1 ph	ase	2 pł	nases	3 ph	ases	4 ph	ases
	kg	lb	kg	lb	kg	lb	kg	lb
50/100 A	6.5	14.3	11.0	24.3	15.5	34.2	20.0	44.1
160 A	6.9	15.2	11.8	26.0	16.7	36.8	21.6	47.6
250 A	7.8	17.2	13.6	30.0	19.4	42.8	25.2	55.6
400 A	11.8	26.0	21.6	47.6	31.4	69.2	41.2	90.8
500 A	14.0	30.9	26.0	57.3	38.0	83.8	50.0	110.2
630 A	14.5	32.0	27.0	59.5	39.5	87.1	52.0	114.6

Weights ± 50gm (2 oz)

lb	oz
0.1	1.6
0.2	3.2
0.3	4.8
0.4	6.4
0.5	8.0
0.6	9.6
0.7	11.2
0.8	12.8
0.9	14.4

Table 1: Unit Weights


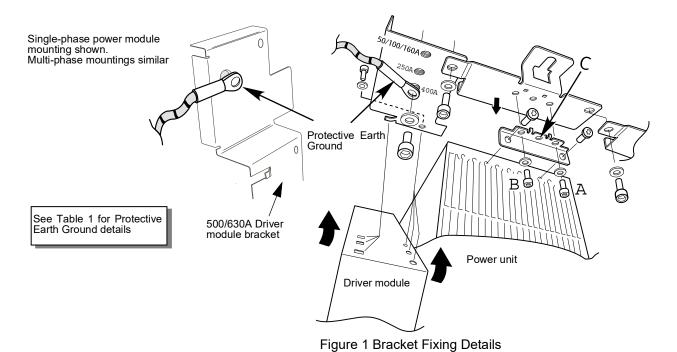


Figure 1 to Figure 6 show fixing centres and other mechanical details for the various modules.

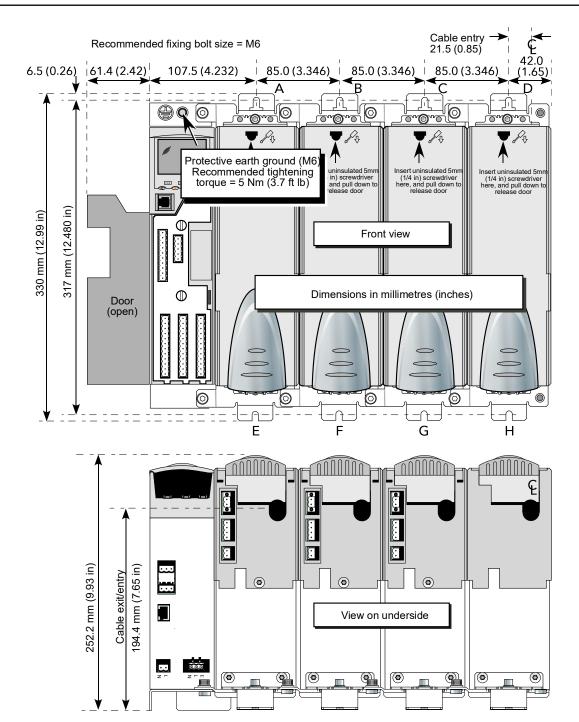


Overall Widths (mm)						
No of phases	1	2		3		
Door closed	149.5	234.5	319.5	404.5		
Door open	211.0	296.0	381.0	466.0		

Overall Widths (inches)						
No of phases	1	2		3		
Door closed	5.89	9.23	12.58	15.93		
Door open	8.31	11.65	15.00	18.35		

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with two, three or four phase brackets as appropriate. See table below for details.

	Upper bracket	Lower bracket
2-phase	Use A and B	Use E and F
3-phase	Use A, B and C	Use E and G
4-phase	Use A, B, C and D	Use E, F, G and H

Figure 2 Fixing Details (50 Amp and 100 Amp units)

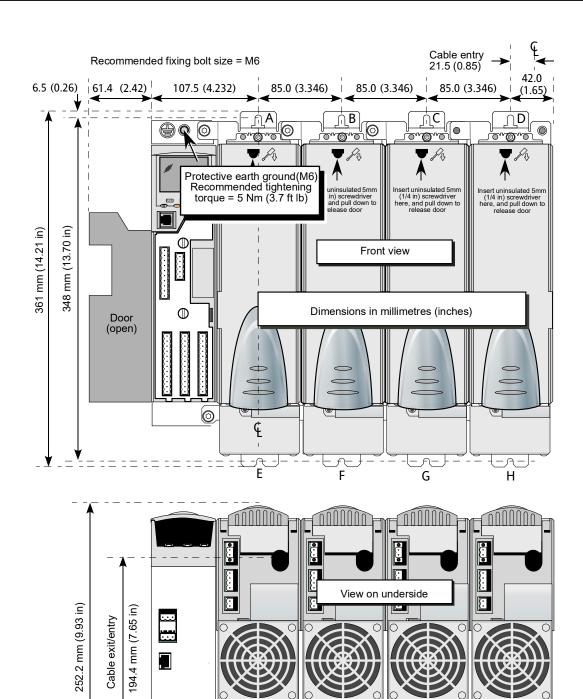

Overall Widths (mm)				
No of phases	1	2		3
Door closed	149.5	234.5	319.5	404.5
Door open	211.0	296.0	381.0	466.0


0.0.0

Overall Widths (inches)				
No of phases	1	2		3
Door closed	5.89	9.23	12.58	15.93
Door open	8.31	11.65	15.00	18.35

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with two, three or four phase brackets as appropriate. See table below for details.

	Upper bracket	Lower bracket
2-phase	Use A and B	Use E and F
3-phase	Use A, B and C	Use E, F and G
4-phase	Use A, B, C and D	Use E, F, G and H

Figure 3 Fixing Details (160 Amp unit)

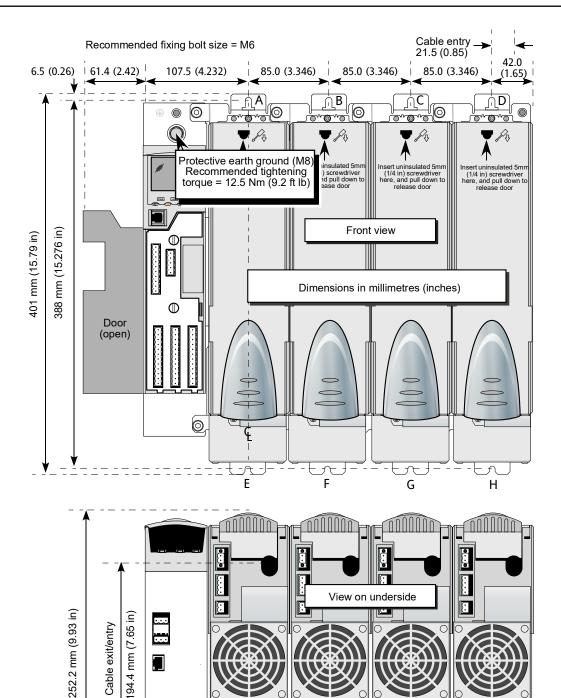

Overa	all Width	ıs (mm)		
No of phases 1 2 3				3
Door closed	149.5	234.5	319.5	404.5
Door open	211.0	296.0	381.0	466.0

نٺ


Overall Widths (inches)				
No of phases	1	2		3
Door closed	5.89	9.23	12.58	15.93
Door open	8.31	11.65	15.00	18.35

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with two, three or four phase brackets as appropriate. See table below for details.

	Upper bracket	Lower bracket
2-phase	Use A and B	Use E and F
3-phase	Use A, B and C	Use E, F and G
4-phase	Use A, B, C and D	Use E, F, G and H

Figure 4 Fixing Details (250 Amp unit)

### **Dimensional Details**

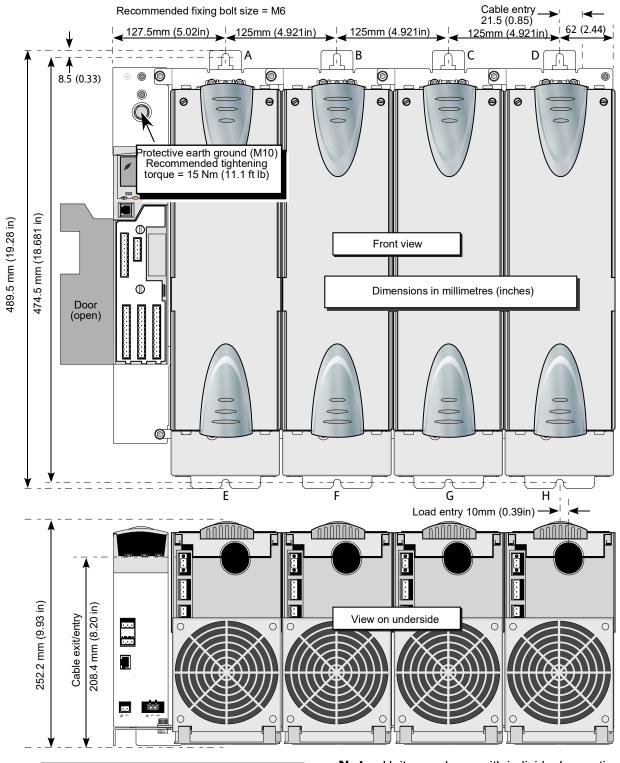

Overall Widths (mm)				
No of phases	1	2		3
Door closed	189.5	314.5	439.5	564.5
Door open	251.0	376.0	501.0	626.0

Overall Widths (inches)				
No of phases	1	2		3
Door closed	7.46	12.38	17.30	22.22
Door open	9.88	14.80	19.72	24.65

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with two, three or four phase brackets as appropriate. See table below for details.

	Upper bracket	Lower bracket
2-phase	Use A and B	Use E and F
3-phase	Use A, B and C	Use E, F and G
4-phase	Use A, B, C and D	Use E, F, G and H

Figure 5 Fixing Details (400 Amp unit)

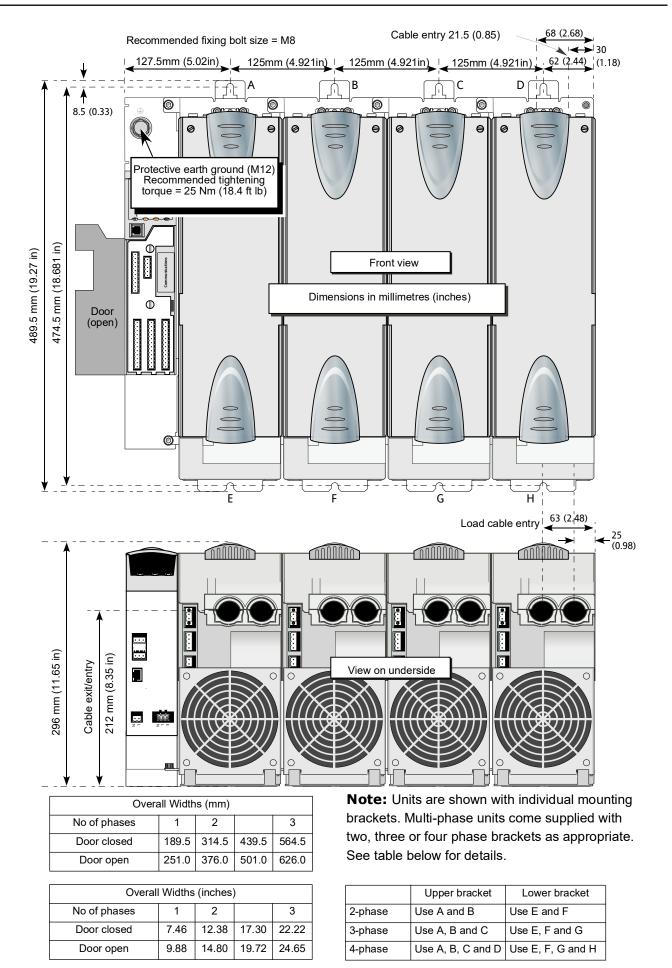


Figure 6 Fixing Details (500 Amp/630A units)

### **Electrical Installation**

### **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- 1. If the product (EPower) is used in a manner not specified by the manufacturer, the protection provided by the product might be impaired.
- 2. Any adjustment, maintenance and repair of the opened apparatus under voltage, is forbidden for safety reasons.
- 3. The product must be installed and maintained by suitably qualified personnel, authorized to work in an industrial low voltage environment.
- 4. The product is designed to be installed in a cabinet connected to the protective earth ground CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards
  - U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards
- 5. The product has been designed for pollution degree 2 according to IEC60947-1 definition: Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation may be expected.
  - Electrically conductive pollution must be excluded from the cabinet in which the product is mounted. To ensure a suitable atmosphere in conditions of conductive pollution, fit adequate air conditioning/filtering/cooling equipment to the air intake of the cabinet, e.g. fitting fan-cooled cabinets with a fan failure detection device or a thermal safety cut-out.
- Before carrying out any wiring to the product, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.

Failure to follow these instructions will result in death or serious injury.

### **▲** WARNING

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

1. The product shall have one of the following as a disconnecting device, fitted within easy reach of the operator, and labelled as the disconnecting device: A switch or circuit breaker which complies with the requirements of IEC60947-1 and IEC60947-3.

A separable coupler which can be disconnected without the use of a tool.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **WARNING**

#### UNINTENDED EQUIPMENT OPERATION

- Signal and power voltage wiring must be kept separate from one another.
   Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.
- 2. This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the installer may be required to take adequate mitigation measures.
- 3. To ensure that EPower complies with Electromagnetic Compatibility requirements, ensure that the panel to which it is attached is correctly grounded. The ground connection, designed to ensure ground continuity, is not in any way a substitute for the protective earth ground connection.

Failure to follow these instructions can result in death, serious injury or equipment damage.

#### **Driver Module**

## **A DANGER**

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

1. The mains supply fuse within the Driver Module is not replaceable. If it is suspected that the fuse is faulty, the manufacturer's local service centre should be contacted for advice.

Failure to follow these instructions will result in death or serious injury.

### **Supply Voltage**

The Line and neutral supply voltage connections are terminated using a 2-way connector (SK8), located on the underside of the unit, as shown in Figure 7, below. It is recommended that a 3 Amp slow-blow fuse be incorporated in order to protect the supply voltage wiring.

The Auxiliary (Fan) supply is Installation category II. U.L.: supply to Auxiliary (Fan) supply shall be provided by isolated transformer secondary grounded protected by a Listed 20A branch circuit fuse.

### **Fan Supplies**

### **A** DANGER

#### **HAZARD OF FIRE**

The cables used to connect the EPower auxiliary/fans supply must be correctly protected by 3A branch-circuit protection. (3A rating selected to protect AWG18 fan supply wiring). It is the responsibility of the installer to add branch-circuit protection. Such branch-circuit protection must comply with applicable local regulations.

UL: The Auxiliary (Fan) supply is Installation category II. Supply to Auxiliary (Fan) supply shall be provided by isolated transformer secondary grounded protected by a Listed 3A branch circuit fuse.

The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

### **WARNING**

#### **HAZARD OF FIRE**

The Driver Module power supply can work from any supply voltage between 85V ac and 265V ac. The fans (if fitted) on the power modules are specified for use at 115V ac or 230V ac, as defined at time of order. It must therefore be ensured that the fan voltage matches the supply voltage, or the fan will either fail within a short period, or it will be ineffective at cooling.

Failure to follow these instructions can result in death, serious injury or equipment damage.

The three way connector (SK9) provides supply voltage for cooling fans which are fitted to all power modules except 50A and 100A modules. Suitable looms (harnesses) for the fans are supplied with the units. SK9 is not used for 50/100A modules, because there are no cooling fans.

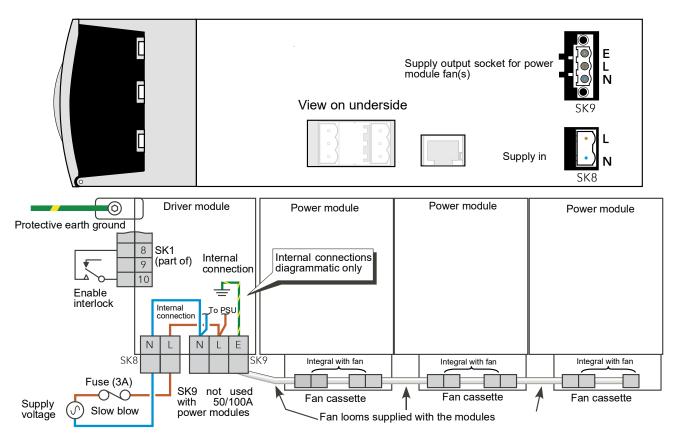


Figure 7 Driver Module Wiring

### **Enable Input**

In order for the power module thyristors to operate, the Enable input to the driver module must be valid, In the default configuration, this is achieved by shorting pins 8 and 10 of SK1 (Digital input 1 - Figure 8), or by using a User Value block to apply a logic high to the enable input to the relevant firing block in iTools.

If required, DI1 can be reconfigured as a voltage input, and in this case it requires a high signal (Figure 9) to be applied to SK1 pin8 with the relevant zero voltage connected to pin 10.

### **Protective Earth Ground**

### **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- 1. Before any other connection is made, the protective earth ground terminal shall be connected to a protective conductor. The protective earth ground connection must be made by using a lug terminal of size as given in Table 2. The cables must be rated 90°C stranded copper only
  - CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards
  - U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards. The protective earth ground connection must be made using a UL-listed lug terminal.
- 2. The protective earth ground connections must be tightened according to the torque values defined in table Protective Earth Ground Details. Appropriate regular inspections must be performed.
  - Periodicity depends on the local environment, but should not exceed 1 year.
- 3. Any interruption of the protective earth ground conductor inside or outside the product, or disconnection of the protective earth ground terminal is likely to make the product dangerous under some conditions. Intentional interruption is prohibited. Whenever it is likely that protection has been impaired, the unit shall be made inoperative, and secured against accidental operation.

The manufacturers nearest service centre must be contacted for advice.

Failure to follow these instructions will result in death or serious injury.

The protective earth ground connection for the driver/power module set is made to the mounting bracket above the unit as shown in Figure 7 to Figure 12.

The connection must be made using the correct size of terminal and correct gauge of cable, as given in Table 2 below.

The protective earth ground connection should be tightened at the torque defined in Table 2. It is recommended to perform regular inspection of the protective earth ground tightening

EPower rating	Prote	Protective Earth Ground Terminal		
(Amps)	Size	Tightening torque		
50A	M6	5 Nm (3.7 ft lb.)		
100A	M6	5 Nm (3.7 ft lb.)		
160A	M6	5 Nm (3.7 ft lb.)		
250A	M8	12.5 Nm (9.2 ft lb)		
400A	M10	15 Nm (11.1ft lb)		
500A	M12	25 Nm (18.4 ft lb)		
630A	M12	25 Nm (18.4 ft lb)		

**Table 2: Protective Earth Ground Details** 

## **Signal Wiring**

Figure 8 shows the location of the various connectors; pinouts and typical wiring for SK1 (fitted as standard) are shown in Figure 9. Wiring for optional I/O units (SK 3 to SK5) is similar, except that they contain a relay in addition to the analog and digital circuits, and the digital circuits are inputs only.


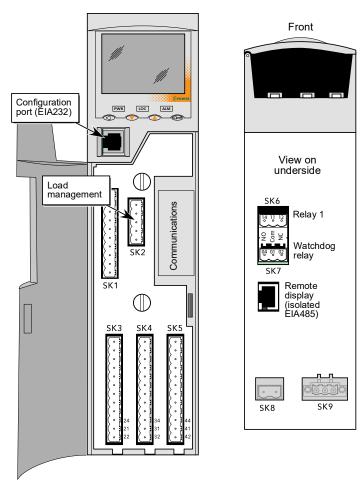


Figure 8 Connector Locations

**Note:** It is physically possible to insert an RJ11 plug into an RJ45 socket. Care must therefore be taken to ensure that the Configuration port cable is not mistakenly plugged into an RJ45 communications connector (if fitted) or the Remote display connector.

**Table 3: I/O Terminals Connections Details** 

Connector	Color	Terminal capacity	Torque
SK1 to SK5	Gray 0.5 mm² to 1.5 mm 22 AWG to 14 AW		0.4 Nm 3.5 lb.in
Green	0.34 mm² to 2.5 mm² 24 AWG to 12 AWG	0.55 Nm 5 lb.in	
SK6 to SK8	Green	0.25 mm² to 2.5 mm² 24 AWG to 12 AWG	0.55 Nm 5 lb.in

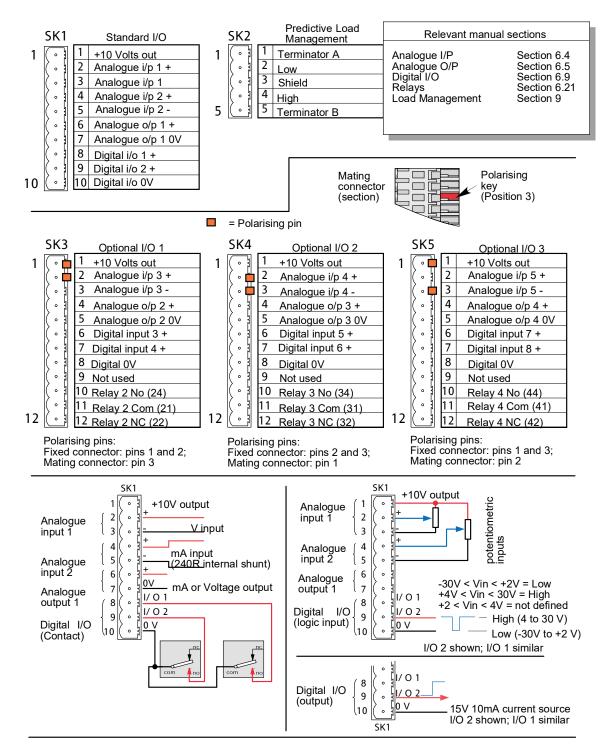


#### **Notes:**


- 1. Analogue input type selected during configuration as one of: 0 to 5V, 0 to 10V, 1 to 5V, 2 to 10V, 0 to 20mA, 4 to 20 mA.
- 2. Analogue output type selected during configuration as one of : 0 to 5V, 0 to 10V, 0 to 20mA, 4 to 20mA. Resolution 12 bits; accuracy ±1% scale.
- Each analogue input -ve terminal is individually connected to 0V via a 150 Ohm resistor.

Figure 9 Drive Unit Connector Pinouts

### **Watchdog Relay**

The 'watchdog' relay is wired to a connector on the underside of the Driver Module (Figure 10).

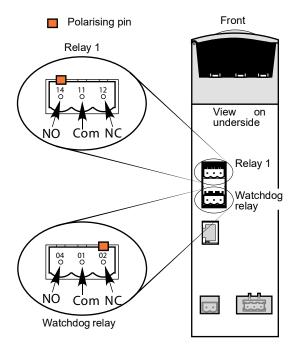

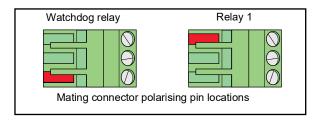

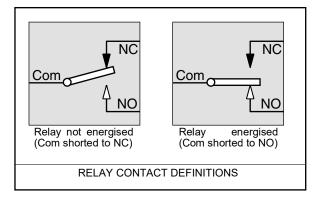


Figure 10 Relay Connector Location and Pinout.

Under normal operating conditions, the watchdog relay is energised (that is the common and normally open contacts are shorted). Should a system error (listed below) become active (or power to the Driver Module fail), the relay is de-energised (common and normally closed contacts shorted).

- 1. Missing mains. One or more Power Module supply voltage lines is missing.
- 2. Thyristor short circuit\*
- 3. Thyristor open circuit\*
- 4. Fuse Blown. Thyristor-protection fuse ruptured in one or more Power Modules.
- 5. Unit over temperature
- 6. Network dips. A reduction in supply voltage exceeding a configurable value (VdipsThreshold), causes firing to be inhibited until the supply voltage returns to a suitable value. VdipsThreshold represents a percentage change in supply voltage between successive half cycles, and can be defined by the user in the Network. Setup menu, as described in "Network Setup Submenu" on page 122.
- 7. Supply frequency fault. The supply frequency is checked every half cycle, and if the percentage change between successive 1/2 cycles exceeds a threshold value (max. 5%), a Mains Frequency System Alarm is generated. The threshold value (FreqDriftThold) is defined in the Network.Setup menu described in "Network Setup Submenu" on page 122.
- 8. Power Module 24V Failure.

**Note:** It is not possible to detect a thyristor short circuit when the unit is delivering 100% output power. Similarly, it is not possible to detect thyristor open circuit when the unit is delivering 0% output.


### Relay 1

This relay, supplied as standard, is located adjacent to the watchdog relay (Figure 10). The energisation/de-energisation of the relay coil is under software control and is fully configurable by the user. The terms Normally open (NO) and Normally closed (NC) refer to the relay in its de-energised state. Up to three further relays are available if optional I/O Modules are fitted (see Figure 10).

### **Predictive Load Management Option Connector**

This option allows a number of systems to communicate with one another to allow load management techniques such as Load Sharing and Load Shedding to be implemented. The connector is located as shown in Figure 8.

**Note:** Connecting pins 1 and 5 together has the effect of introducing a terminating (120 Ohm) resistor across pins 2 and 4. It is recommended that this be done at each end of the transmission line.

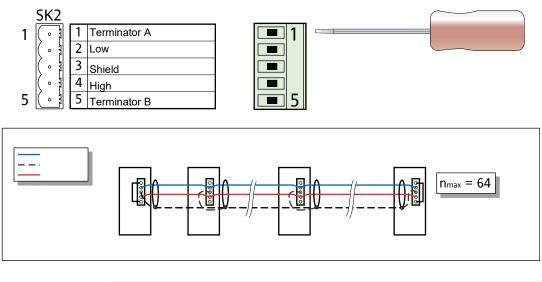

Maximum Trunk line length = 100 metres (328 ft)
Maximum individual drop length = 5 metres (16 ft)
Maximum cumulative drop length = 30 metres (98 ft)
Conductor pair size = 24 gauge (0.25 mm2)
Characteristic impedance at 500kHz = 120 Ohms  $\pm 10\%$ Nominal capacitance @ 800Hz =  $\leq 40$ pF
Unbalance capacitance =  $\leq 4 \pm 10\%$ pF/m
Capacitance between conductors = 100pF/metre)
Attenuation at 500kHz = 1.64dB/100 metres)

**Note:** The figures above are for a network of up to 100 metres with up to 64 units connected. The actual network impedance is a function of cable type, cable length and the number of units connected. For futher details contact the manufacturer or local agent.

Figure 11 Predictive Load Management Wiring

#### Load Sharing

In a system with several heating zones, this allows a strategy to be implemented which distributes power over time in such a way that the overall power consumption remains as steady as possible, thus reducing the peak power demand of the system.

### **Load Shedding**

In a system with several heating zones, this allows a strategy to be implemented which limits the available load power at each heating zone and/or switches zones off according to a defined priority level, thus allowing the maximum running power consumption to be controlled. The total running power is the maximum power supplied to the loads, integrated over a 50 minute period.

See the Predictive Load Management option description ("Predictive Load Management Option" on page 219), for more details.

## **Configuration Port**

This RJ11 connector located on the front of the Driver Module (Figure 8) is used for direct connection to a PC using EIA232C standard.


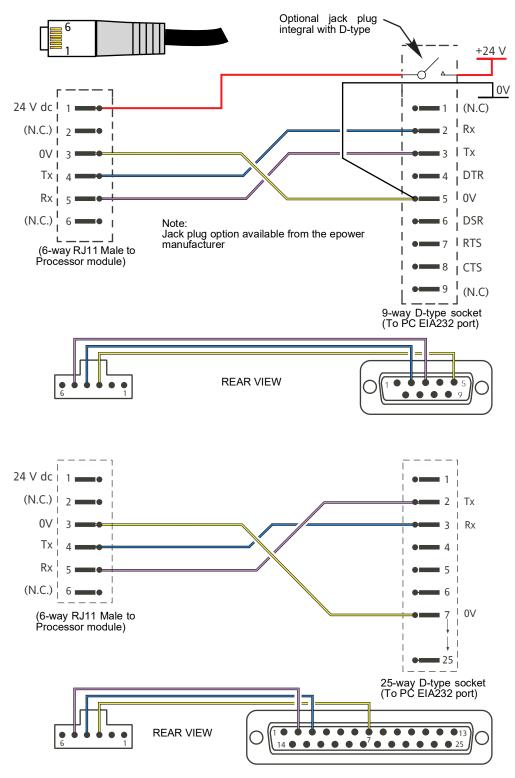


Figure 12 Configuration Port Wiring Details

### **Communications Pinouts**


Serial communications is discussed in the Communications Manual HA179770. Pinouts for the relevant protocols are given here for convenience.

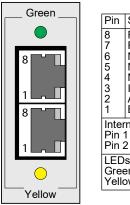

Pin	Signal (EIA485)
8 7	Reserved
7	Reserved
6	N/C
5	N/C
4	N/C
6 5 4 3 2	Isolated 0V
2	Α
1	В
	nal connections:
	1 to 5V via 100k $\Omega$
Pin 2	2 to 0V via 100k $\Omega$
LED	
	en = Tx activity
Yello	ow = Rx activity

Connectors in parallel

Figure 13 Modbus RTU pinout

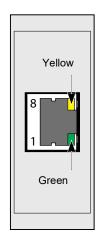

Pin	Function
8 7 6 5 4 3 2	N/C N/C Rx- N/C N/C N/C Rx+ Tx- Tx+
LEDs: Green = Tx activity Yellow = Network activity	

Figure 13 Modbus TCP (Ethernet 10baseT) pinout



NS (Network status) LED (1)		
LED state	Interpretation	
Off Steady green Flashing green Steady red Flashing red	No power or no IP address Module is in Process Active or Idle state On-line, waiting for connection Duplicate IP address, or FATAL event Process Active Timeout	


MS (Module status) LED (2)		
LED state	Interpretation	
Off Steady green Steady red Flashing red	No power Normal operation Major fault (Exception state, fatal error etc.) Minor fault in diagnostic object, IP conflict	

LINK LED (3, 4)		
LED state	Interpretation	
Steady green	No link; no activity Link established Activity	

Figure 14 Modbus TCP Connector Pinout, Double Port Version

Network status LED Indication		
LED state	Interpretation	
Steady green Flashing green	Off-line or no power On-line to 1 or more units On-line - no connections Critical link failure 1 or more connections timed out	

Module status LED Indication				
LED state	Interpretation			
Off Steady green Flashing green Steady red Flashing red	No power Operating normally Missing or incomplete configuration Unrecoverable fault(s) Recoverable fault(s)			

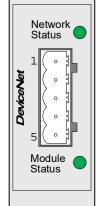

Pin	Function
1	V- (negative bus supply voltage)
2	Cable shield
4	CAN H
5	V+ (positive bus supply voltage).


#### Notes:

- See DeviceNet specification for power supply specification
- During startup, an LED test is performed, satisfying the DeviceNet standard.

Figure 15 DeviceNet® Connector Pinout

OPERATION MODE LED INDICATION		
LED state	Interpretation	
Steady green Flashing green Red single flash	Off line or no power On-line, data exchange On-line, clear Parametrisation error PROFIBUS configuration error	

STATUS LED INDICATION		
LED state Interpretation		
Steady green Flashing green	No power or not initialised Initialised Diagnostic event present Exception error	

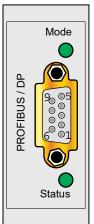


Pin	Function	Pin	Function
7	N/C A (RxD -/TxD -) N/C +5 V (See note 1)	4	Isolated ground RTS B (RxD+ / TxD+) N/C N/C


#### **Notes:**

- Isolated 5 Volts for termination purposes. Any current drawn from this terminal affects the total power consumtion.
- The cable screen should be terminated to the connector housing.

Figure 16 Profibus Connector Pinout

'RUN' LED Indication					
LED state	Interpretation				
Off	Off-line or no power				
Green	Normal operation				
Red	Major fault (fatal error)				
'ERR' LED Indication					
LED state	Interpretation				
Off	No error or no power				
Steady red Flickering red	Exception or fatal event				
Flickering red	CRC Error				
Flashing red	Station number or Baud rate has				
	changed since startup.				

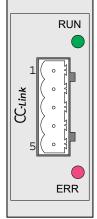


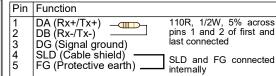

#### **Notes:**

- A 110 Ohm (±5% 1/2 watt) terminating resistor should be connected across pins 1 and 2 of the connectors at each end of the transmision line.
- 2. The cable shield should be connected to pin 4 of each CC-Link connector.
- 3. The shield and Protective earth terminals (pins 4 and 5) are internally connected.

Figure 17 CC-Link Connector Pinout

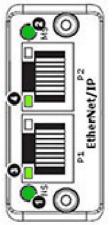




NS (Network status) LED (1)			
LED state	Interpretation		
Off Steady green Flashing green Steady red Flashing red	No power or no IP address On-line; one or more connections established (CIP class 1 or 3) On-line, no connections enabled Duplicate IP address ('fatal' error) One or more connections timed out (CIP class 1 or 3)		

MS (Module status) LED (2)		
LED state	Interpretation	
Off Steady green Flashing green Steady red Flashing red	No power Controlled by a scanner in Run state Not configured or scanner in Idle state Major fault (Exception state, fatal error etc.) Recoverable fault	

LINK LED (3, 4)			
LED state	Interpretation		
Off Steady green Flickering green	No link; no activity Link established Activity in progress		

Figure 18 EtherNet/IP Connector Pinout, Both Single and Double Port Versions

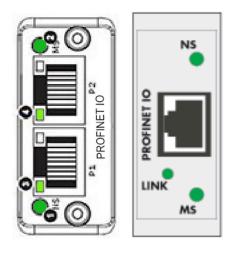

NS (Network status) LED (1)			
LED state	Interpretation		
Off Steady green Flashing green	No power or IP address On-line (RUN); connection with I/O controller established. Controller in 'Run' state On-line (STOP); connection with IO controller established. Controller in 'Stop' state.		

MS (Module status) LED (2)				
LED state	Interpretation			
Off	Not initialised	No power, or the module is in 'SETUP' or 'NW INIT' state.		
Green steady Green 1 flash	Normal operation	The module has shifted from the 'NW_INIT' state.		
Green 2 flash	Diagnostic event Blink	One or more Diagnostic Event present. Used by engineering tools to identify the node		
Red steady	<b></b>	on the network.		
Red1 flash	Exception error Configuration error	The module is in the 'EXCEPTION' state.  The Expected Identification differs from the		
Red 2 flash		Real Identification.		
Red 3 flash	IP address error	The IP address is not set.		
Red 4 flash	Station Name error Internal error	The Station name is not set. The module has encountered a major internal fault.		

LINK LED (3, 4)			
LED state	Interpretation		
Off Steady green Flickering green	No link; no activity Link established Activity in progress		

Figure 19 Profinet IO Connector Pinout, Both Single and Double Port Versions

### **Remote Panel Connector**

Located on the underside of the driver module (Figure 8) this RJ45 connector supplies isolated 3-wire EIA485 outputs for an optional remote panel display unit. Figure 19 gives the pinout. See section 6.6.2 for configuration details. Parity is set to 'None'. See also "Appendix A: Remote Display Unit" on page 263 for details of a suitable remote panel unit.

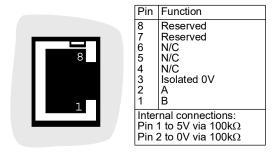


Figure 20 Remote Panel Connector

### **Power Modules**

### Line/Load Cables

Line power is routed through the top of the unit and load power emerges from the bottom of the unit.

Protective earth ground wiring is discussed in "Driver Module" on page 26, above.

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

 Before carrying out any wiring to the product, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.

2. To achieve IP10 rating according to IEC60529, power connections must be made by using lug terminals of size as given in table 4. U.L.: Power connections connection must be made using UL-listed lug terminals.

Failure to follow these instructions will result in death or serious injury.

## **A** DANGER

#### **HAZARD OF FIRE**

 This product does not contain any branch-circuit protection or internal safety overload protection. The installer must add branch-circuit protection upstream of the unit, and provide external or remote safety overload protection to the end installation. Branch circuit shall be rated according to maximum current in each phase.

CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.

UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.

CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards

U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.

 Power terminals must be tightened according to the torque values defined in table 4. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions will result in death or serious injury.


Figure 32 to Figure 36 show typical connection details.

**Table 4: Line/Load Termination Details** 

EPower	Interr	Internal Lug terminal size			Cable entry
current rating	Stud Diameter	Maximum Length (L)	llorque	Torque	diameter
50A	M8	45 mm	70mm <sup>2</sup>	9 Nm	17 mm
100A	(3/8 inch)	(1.75 inch)	/Umm- (AWG 2/0)	(6.6 ft lb)	(0.7 inch)
160A	(3/6    11011)	(1.75 men)	(AVVG 2/0)	(0.0 10 15)	(0.7 men)
250A	M10 (1/2 inch)	60 mm (2.35 inch)	120mm <sup>2</sup> (250 Kcmil)	15 Nm (11.1 ft lb)	21.5 mm (0.825 inch)
400A	M12 (1/2 inch)	80 mm (3.15 inch)	240mm <sup>2</sup> (500 Kcmil)	28.8 Nm (21.2 ft lb)	30 mm (1.18 inch)

**Table 4: Line/Load Termination Details** 

500A	2 x M12	65 mm	185mm <sup>2</sup>	30 Nm	35 mm
630A	(2 x 1/2 inch)	(2.55 inch)	(350 Kcmil)	(22.1 ft lb)	(1.38 inch)

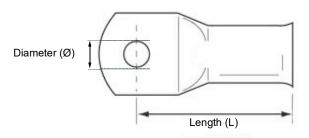

### **Power Connection Adapter**

According to standards, ambient temperature, or wiring arrangement, a larger wire section may be requested.

To connect larger wire section, a power connection adapter (optional) can be fitted on the product. It consists of extra copper bars which enable connection of lug terminals outside of the product.

Products equipped with power connection adapter are rated CE: IP00 and remains UL: open type.

EPower current rating	Reference	Maximum Bolt Size	Tightening Torque Inside & outside <sup>(1)</sup> product	
50A	Power Connection	M8	9 Nm	
100A	Adapter 100A-160A	(5/16 inch)	(6.6 ft lb)	
160A	Adapter 100A-100A	(3/10 IIICII)	(0.0 11 10)	
250A	Power Connection	M12	15 Nm	
	Adapter 250A	(7/12 inch)	(11.1 ft lb)	
400A	Power Connection	M16	28.8 Nm	
	Adapter 400A	(5/8 inch)	(21.2 ft lb)	
500A	Power Connection	M16	30 Nm	
630A	Adapter 500A-630A	(5/8/ inch)	(22.1 ft lb)	

**Table 5: Power Connection Adapter termination details** 

(1) When applying torque to the screw outside product establish balance on the nut.

This optional power connection adapter can also be used to connect flex copper bar.

# **A** DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

· Do not connect solid copper bar to the product.

Failure to follow these instructions will result in death or serious injury.

Mechanical stresses linked to thermal expansion may damage product internal fuse and/or thyristor.

The following figures show Power Connection Adapter connection details.

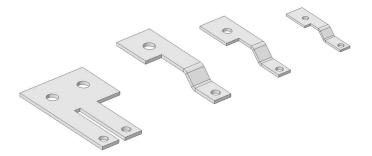


Figure 21 Power Connection Adapter

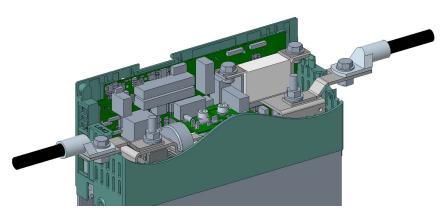


Figure 22 Power Connection Adapter 100A-160A Fitted (detail)

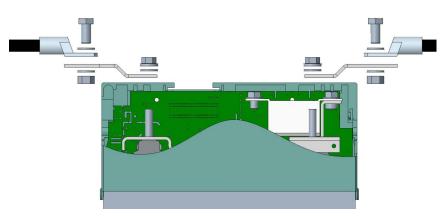


Figure 23 Power Connection Adapter 100A-160A Fitted (side view)

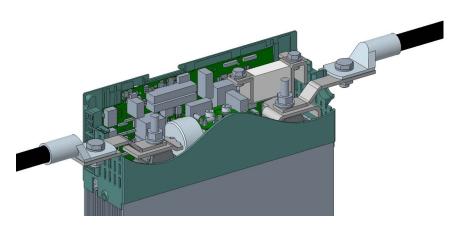


Figure 24 Power Connection Adapter 250A Fitted (detail)

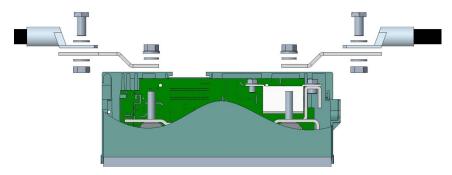


Figure 25 Power Connection Adapter 250A Fitted (side view)

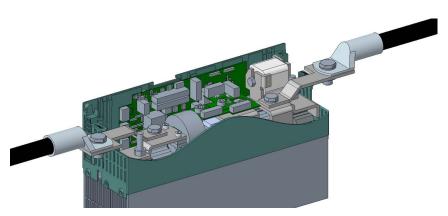


Figure 26 Power Connection Adapter 400A Fitted (detail)

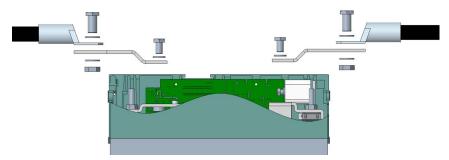


Figure 27 Power Connection Adapter 400A Fitted (side view)

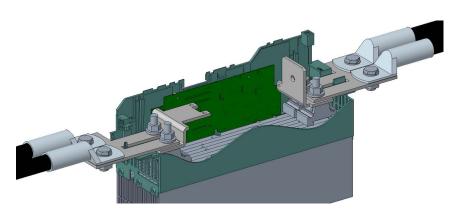


Figure 28 Power Connection Adapter 500A/630A Fitted (detail)

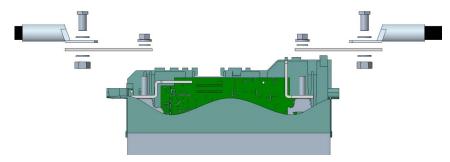


Figure 29 Power Connection Adapter 500A/630A Fitted (side view)

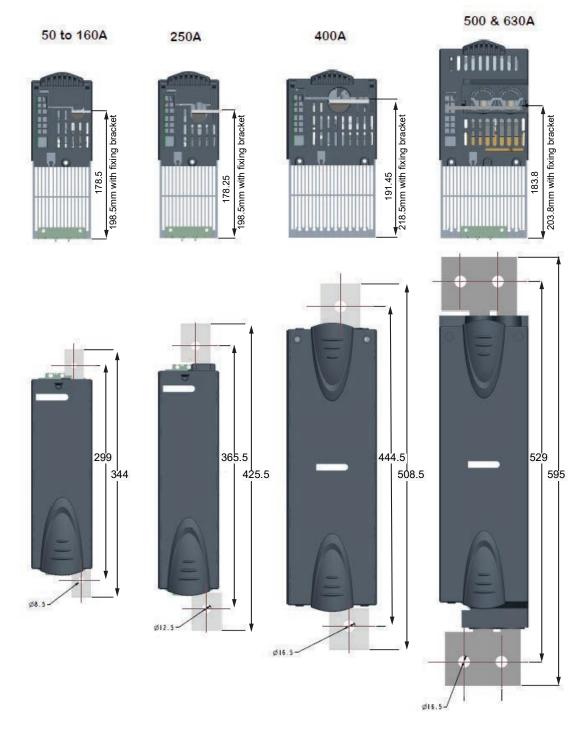


Figure 30 Overall Dimensions with Power Connection Adapter

### **Ribbon Cable**

The ribbon cable is daisy-chained from the Driver Module to the power modules.

### NOTICE

#### **EQUIPMENT PROTECTION**

 In order to maintain protection against damage due to electrostatic discharge, any ribbon cable which is chafed, scratched or otherwise damaged must be replaced. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions can result in equipment damage.

### **External Current Feedback**

If the option is fitted, a two-pin connector on the underside of the unit allows the connection of an external current transformer to measure the load current. The option also includes the Remote Voltage sensing input, described below. Both connectors have polarising devices fitted (description below) to prevent misconnection by the user.


The current transformer ratio must be such that its full scale output is 5 Amps. For example when measuring up to 400 Amps, a 400:5 ratio transformer should be chosen.

# **WARNING**

#### UNINTENDED EQUIPMENT OPERATION

- 1. External feedback connections must be correctly phased (Figure 31) or the unit might switch to full conduction at start-up. See also "Appendix B Three Phase Feedback" on page 291 for more details about external feedback.
- 2. With external feedback: The current transformer should be chosen such that its full-scale output is 5 amps.

Failure to follow these instructions can result in death, serious injury or equipment damage.

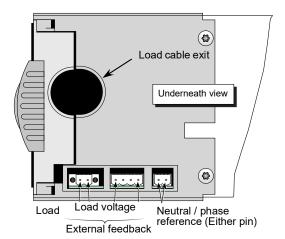

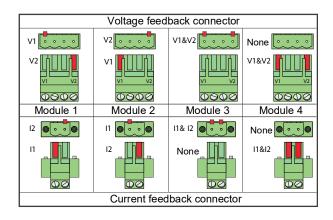


Figure 31 External Feedback, and Neutral/phase Reference Connectors

Table 6: Voltage & Current feedback terminals connections details

Connector	Terminal capacity	Torque
Voltage feedback connector & Current feedback connector	0.25 mm² to 2.5mm² 24 AWG to 12 AWG	0.55 Nm 5 lb.in

## Remote Voltage Input

## **A** DANGER

#### **HAZARD OF FIRE**

The cables used to connect the remote voltage sensing inputs (if fitted) and the cable used to connect the reference input in 4S, 6D and two-leg configurations must be correctly protected by branch-circuit protection. It is the responsibility of the user to add branch-circuit protection. Such branch-circuit must comply with applicable local regulations.

UL: The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

If the option is fitted, the two end pins of a four-pin connector (Figure 31) are used for terminating remote voltage sensing cable. It is recommended that each input be fitted with slow-blow fuse (Figure 32) of a lower current rating than that of the sensing cable harness. If the option is fitted, the Current Transformer input, described above, is also fitted.

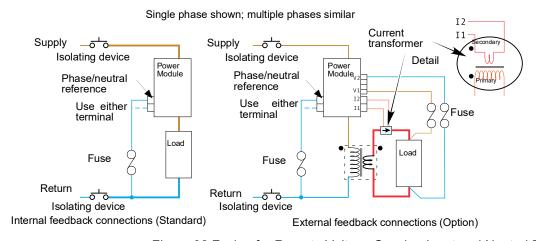


Figure 32 Fusing for Remote Voltage Sensing Input and Neutral Reference Inputs

## **Neutral/Phase Reference Input**

## **A** DANGER

### **HAZARD OF FIRE**

The cables used to connect the remote voltage sensing inputs (if fitted) and the cable used to connect the reference input in 4S, 6D and two-leg configurations must be correctly protected by branch-circuit protection. It is the responsibility of the user to add branch-circuit protection. Such branch-circuit must comply with applicable local regulations.

UL: The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

## **▲** WARNING

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

In 4S, 6D and two-leg configurations do not use the reference terminal to replicate voltage signals (in a 'daisy chain'), as the PCB track between the two poles is not designed to withstand short-circuit.

Failure to follow these instructions can result in death, serious injury or equipment damage.

In order to ensure correct firing for 4S, 6D and two-leg configurations, a connection to neutral or to the relevant phase must be made using the relevant two-pin connector on the underside of the unit (Figure 31). (Both pins are connected together internally, so either may be used). This is used as a potential reference for voltage measurements within the unit, see Figure 32 and Figure 38 for more detail. The unit has been designed to detect the loss of any of the reference signals and to suspend firing should any of them 'fail'. Firing may not be correct during the detection

period.

Polarising pins are fitted to the connectors as shown in the figure below.

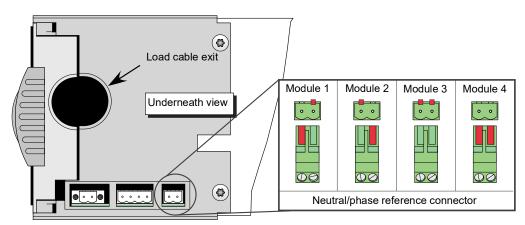


Figure 33 Neutral/phase reference connector polarising pins

Table 7: Neutral/phase reference terminals connections details

Connector	Terminal capacity	Torque
Neutral/phase reference connector	0.25 mm <sup>2</sup> to 2.5mm <sup>2</sup> 24 AWG to 12 AWG	0.55 Nm 5 lb.in

### **Access to Line and Load Terminations**

## **A** DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH


Before carrying out any wiring to the product, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.

Failure to follow these instructions will result in death or serious injury.

For 50A, 100A, 160A and 250A units, to remove the doors, insert a non-insulated screwdriver with a 5 mm flat blade into the slot near the top of the door, and gently lever downwards to disengage the catch, and pull the top of the door away from the unit. Once free, the door can be lifted off its pivots which are located at the bottom of the case.

For the 400A unit, the door is released by undoing the two fasteners near the top of the door and then pulling the top of the door away from the unit. Once free, the door can be lifted off its pivots which are located at the bottom of the case.

The 500A/630Amp module door is similar to the 400Amp module, but once released, the bottom of the door is pulled downwards to disengage it from its securing lugs, not lifted off, as described for the 400A module.

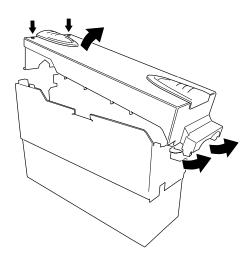

Door removal (500/630A units)

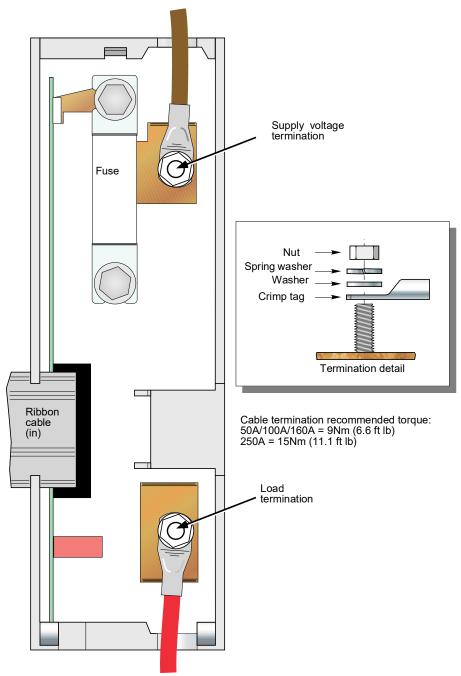


Figure 34 Line and Load Termination (50A, 100A and 160A units) (250A units similar)

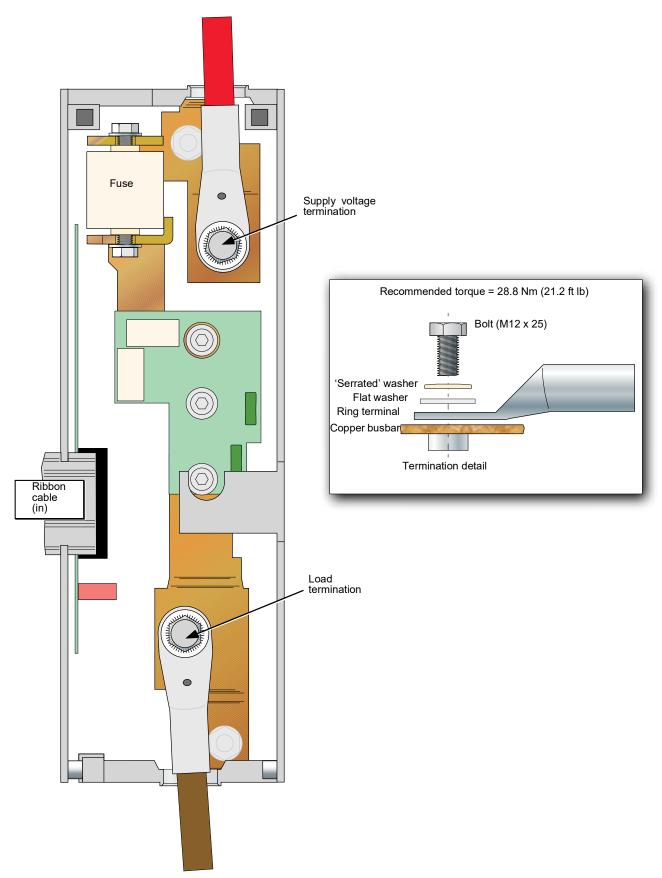


Figure 35 Line and Load Termination (400A units)

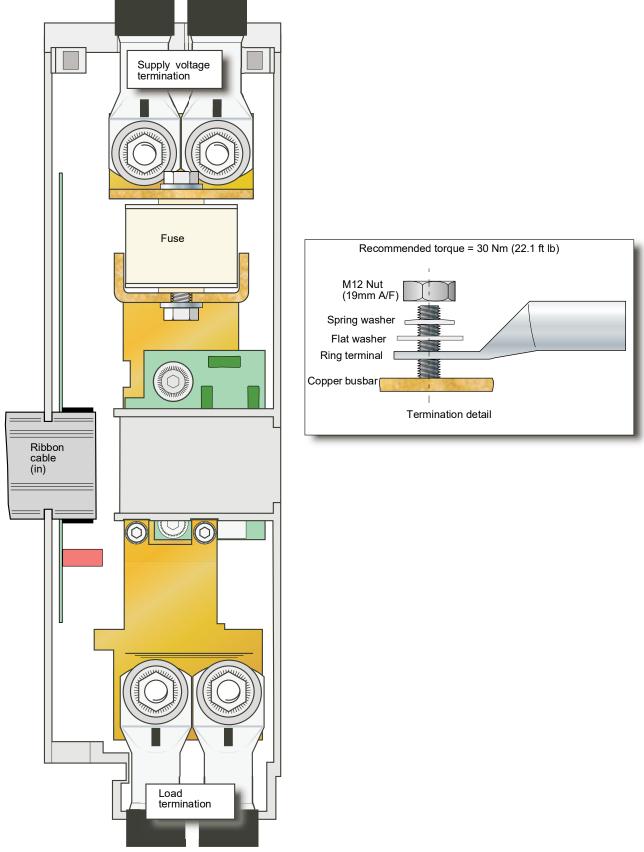
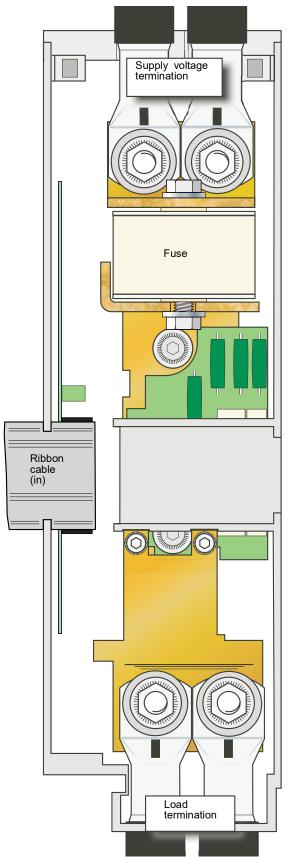


Figure 36 Line and Load Termination (500A units) (630A units similar)



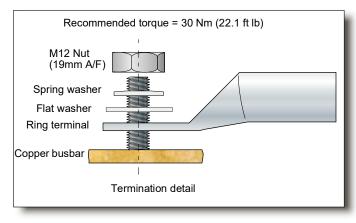


Figure 37 Line and Load Termination (630A units)

The illustrations which make up Figure 38, below, show schematic and practical wiring arrangements for a number of common three-phase configurations. Earthing and driver module wiring are omitted for the sake of clarity. Fuses (where fitted) should have values compatible with the current carrying capacity of the associated wiring. "Appendix B Three Phase Feedback" on page 291 contains a discussion of external feedback.

## **A** DANGER

#### **HAZARD OF FIRE**

1. Neutral cross-sectional area when neutral is connected to the star point of the load (4S load type):

Without current limit activated, maximum neutral current is not upper than maximum current in each phase. The cross-sectional area of the neutral conductor, shall be sized to carry the maximum phase current.

With current limit activated, maximum neutral current may reach  $\sqrt{3}$  x current limit setting. The cross-sectional area of the neutral conductor shall be sized to carry up to  $\sqrt{3}$  x current limit setting.

CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards

U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.

2. The cables used to connect the remote voltage sensing inputs (if fitted) and the cable used to connect the reference input in 4S, 6D and two-leg configurations must be correctly protected by branch-circuit protection. It is the responsibility of the user to add branch-circuit protection. Such branch-circuit must comply with applicable local regulations.
UL: The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

## **A** CAUTION

#### UNINTENDED EQUIPMENT OPERATION

In burst mode and primary of transformer load, the star-star configuration is not recommended as it may become unstable, high speed fuse may blow.

Failure to follow these instructions can result in injury or equipment damage.

# **Three-Phase Star Configurations**

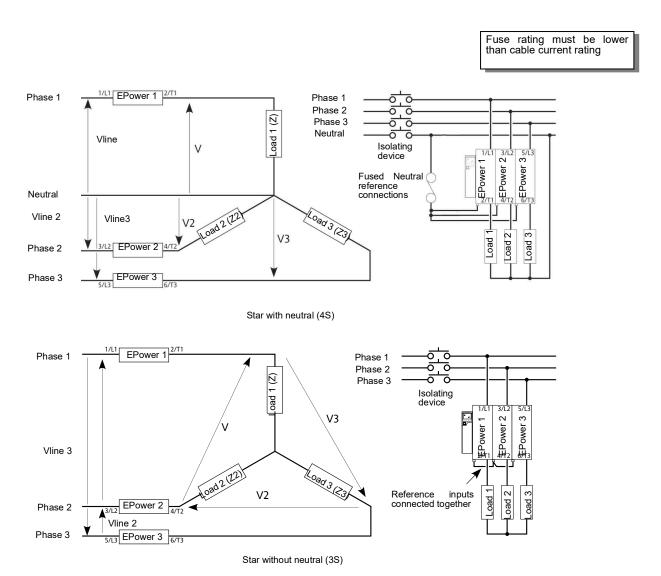


Figure 38 Typical Wiring Schemes (Star)

# **Three-Phase Delta Configurations**

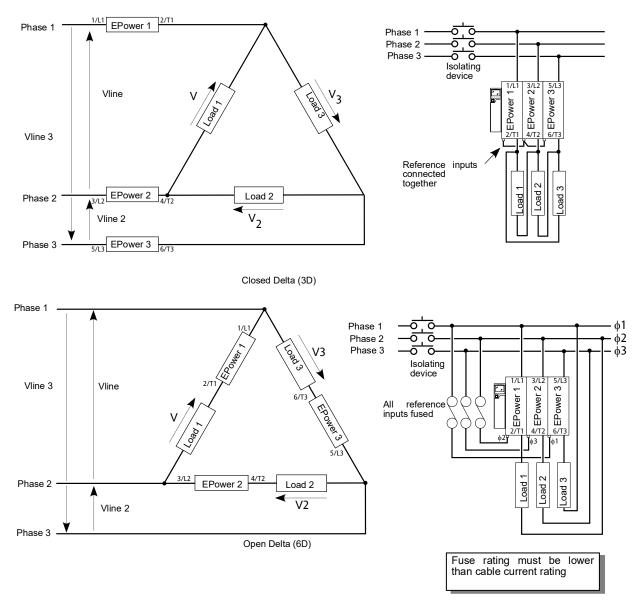


Figure 39 Typical Wiring Schemes (Delta)

# **Two-Leg Configurations**

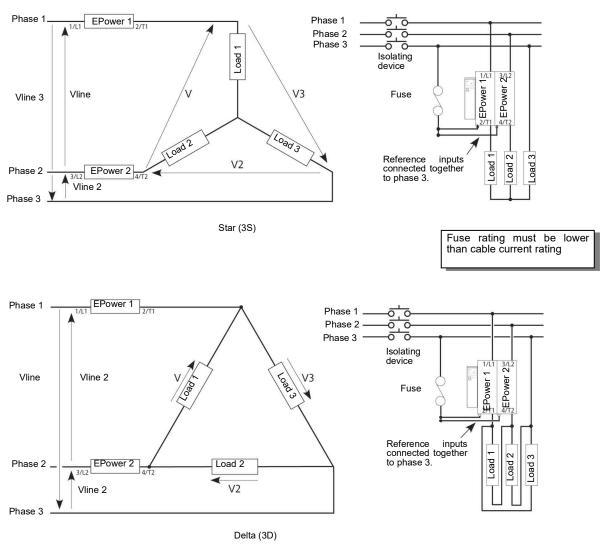


Figure 40 Typical Wiring Schemes (2-leg)


## **Three Phase Configurations with External Feedback**

# **WARNING**

### UNINTENDED EQUIPMENT OPERATION

- 1. External feedback connections must be correctly phased (Figure 31) or the unit might switch to full conduction at start-up.
- 2. With external feedback: The current transformer should be chosen such that its full-scale output is 5 amps.

Failure to follow these instructions can result in death, serious injury or equipment damage.

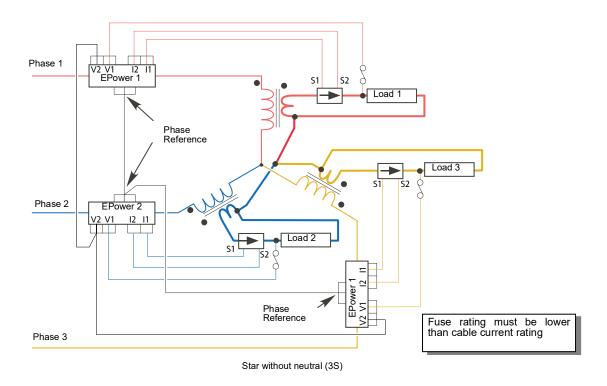


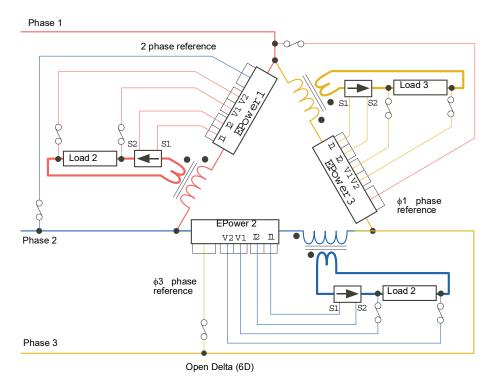


Figure 41 Typical 3-phase External Feedback Wiring

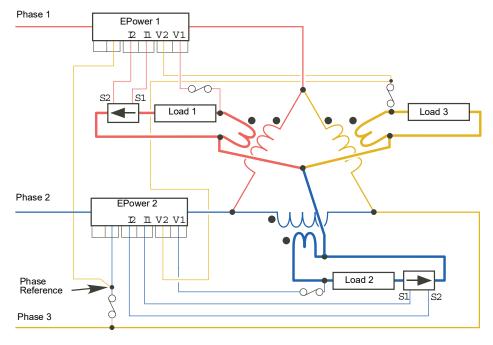

2-leg Delta (3D)

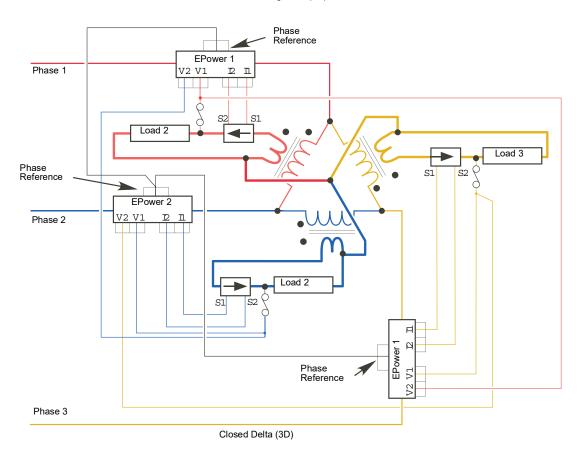


Figure 42 Typical 3-phase External Feedback Wiring

EPOWER CONTROLLER Operator Interface

# **Operator Interface**

Located at the front of the Driver Module, the operator interface consists of a display, featuring four lines of up to 10 characters each, four push-button switches and three LED 'beacons'.




Figure 43 Operator interface

# **Display**

As mentioned above, the display consists of four lines of characters, these characters being formed using a seven-high, by five-wide dot matrix. This display, together with the four pushbuttons allows full operation and configuration of the unit.

### **Pushbuttons**

The functions of the four pushbuttons below the display depend on whether the unit is in configuration mode or in operating mode:

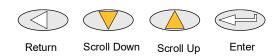

# Configuration

Return Generally, this button reverses the last operation of the

'Enter' button

Scroll down/up Allows the user to scroll through the available menu items

or values. The up/down arrow symbol appears against

menu items that can be edited.

Enter Goes to next menu item.

# Operation

In operation, two pushbuttons may be operated simultaneously to carry out the following functions:

Scroll up + Scroll down

Acknowledge alarms

Scroll up + Enter Toggle between 'Local' and 'Remote' operation.

Scroll down + Enter PLF adjustment request


Operator Interface EPOWER CONTROLLER

### Menu Item Value Selection

Menu items are scrolled through using the enter key. Editing of the item's value is carried out by scrolling through the available choices, using the up and down scroll keys. Once the desired value is displayed, it will become the selected value approximately two seconds after the final scroll key operation, this selection being indicated by a single off/on flash of the desired value.

### **Beacons**

There are three LED illuminated 'beacons' between the display area and the pushbuttons. For clarity, Figure 43, above, shows the locations of these beacons in an enhanced way; on the real instrument, they are 'invisible' unless illuminated.

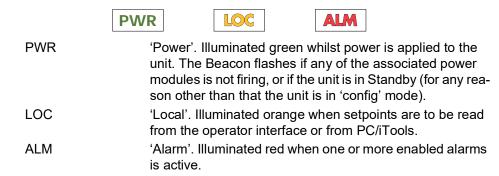

## **Front Panel Messages**

A number of messages can appear at the display panel. These messages and their interpretations are listed below. See "Alarms" on page 241 for a more detailed description of some of these alarms.

### **Instrument Events**

Cold Start

Conf Entry

The instrument has been cold-started.

The instrument has been placed in configuration mode.

Conf Exit

The instrument has been taken out of configuration mode.

GlobalAck

A global acknowledgement of all safe latched alarms has been performed.

Power down

The instrument has restarted after a power down.

The Quick Start menu has been re-entered.

QS Exit

The Quick Start menu has been left.

### **Indication Alarms**

LimitAct
One or more limits are active in the control block
An over current alarm has become active in one or more
Network blocks.

LMoverSch
(Predictive Load Management over schedule). The actual
power (Pr) is greater than the requested shed power value
(Ps) (detected in the PLM block).

Process value transfer is active in one or more control
blocks,

## **System Alarms**

FuseBlown One or more thyristor protection fuses is ruptured.

MainsFreq Mains Frequency is outside the acceptable range.

EPOWER CONTROLLER Operator Interface

Missmains One or more supply phases is missing.

NetwDip One or more 'network dip' alarms has been detected.

OverTemp One or more 'over temperature' alarms has been detected.

PMod24V A power supply problem has been detected on the Driver

Unit power board.

### **Process alarms**

ChopOff One or more 'Chop-off' alarm has been detected.

ClosedLp One or more Control block 'Closed Loop' alarm has been

detected.

InputBrk An 'Input Break' alarm has been detected in one or more

Analogue input blocks.

MainVFault One or more 'Mains Voltage Fault' (over or under) has

been detected.

OutFault An 'Output short Circuit' alarm has been detected in one or

more Analogue output blocks.

PLF One or more 'Partial Load Failure' alarm has been detect-

ea.

PLU One or more 'Partial Load Unbalance' alarm has been de-

tected.

TLF One or more 'Total Load failure' alarm has been detected.

## **Configuration Errors**

InvPAdata (Invalid parameter database). The non-volatile parameter

database has become corrupt and should not be relied up-

on.

InvWires (Invalid wiring table). The non-volatile storage of user (soft)

wiring has become corrupt and should not be relied upon.

## **Standby Errors**

PwrModRev (Power Module revision). One or more power units has an

invalid revision number, or its revision level is not compat-

ible with the firmware version of the driver module.

HWDiffers The fitted hardware does not match the instrument config-

uration.

ErrDSP Error(s) reported by the Digital Signal Processor, during

the instrument's start-up self test procedure.

Pwr1Ribbon A fault was detected in the power module 1 ribbon cable

during the instrument's startup self test procedure.

Pwr2(3)(4)Ribbon As above but for power module 2, 3 or 4.

### **Power Module Errors**

Ph1(2)(3)(4)ComErr The phase 1, 2, 3 or 4 power module has attempted to

communicate with the driver module, and either the driver module or the power module (or both) has failed to 'under-

stand' the communication commands/responses.

Ph1ComTout (Comms timeout). The phase 1, 2, 3 or 4 power module in-

dicated that it wished to report a fault to the driver module but the communications transaction was not completed.

Ph2(3)(4)ComTout As for phase 1, above but for phase 2, 3 or 4.

Pwr1EEProm Header information in power module 1 non-volatile memo-

ry was found to be invalid at the instrument's start-up self

test procedure.

Operator Interface EPOWER CONTROLLER

Pwr2(3)(4)EEProm As for power module 1, above but for power module 2, 3 or

4.

Ph1(2)(3)(4)Wdog The phase 1, 2, 3 or 4 power module microprocessor has

detected that its watchdog timer has timed out. A reset has been performed and this has caused the power module to

report the fault.

### **General Errors**

Watchdog The driver module's microprocessor has detected that its

watchdog timer has timed out, and has therefore performed a reset, causing the instrument to restart.

LogFault

The event log could not be restored at start-up.

PWR1(2)(3)(4)cal The calibration data stored in the non-volatile memory of

power module 1, 2, 3 or 4 is invalid, and the default calibra-

tion will be used instead.

### **Reset Errors**

InvRamCsum (Invalid RAM checksum). Internal fault DSPnoRSP (DSP no response). Internal fault.

DSP Wdog (DSP task watchdog). Internal fault.

### **Fatal Errors**

FuseConfig The driver module's internal fuses are incorrectly config-

ured.

ErrRestart An error has occurred that requires the instrument to be re-

started.

EPOWER CONTROLLER QuickStart

# QuickStart

At first switch-on, the Driver Module enters the 'QuickStart' menu which allows the user to configure the major parameters without having to enter the full configuration menu structure of the unit. Figure 44 shows an overview of a typical Quickstart menu. The actual displayed menu items will vary according to the number of options fitted.

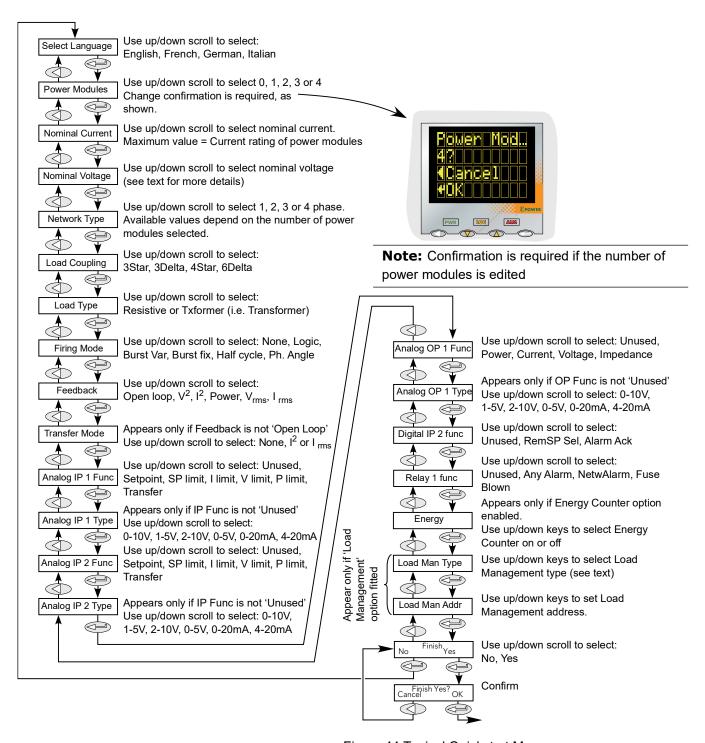


Figure 44 Typical Quickstart Menu

QuickStart EPOWER CONTROLLER

#### Notes:

1. If the unit has been fully configured at the factory, the Quickstart menu will be skipped, and the unit will go into operation mode at first switch on.

2. Once quit, the Quickstart menu can be returned to at any time from the Engineer or Configuration menus (described later in this document) by holding the 'Return' key operated for approximately two seconds. If values have been changed 'outside' the Quickstart menu, these values are displayed as '---' on re-entry to the Quickstart menu.

## **Quickstart Menu Parameters**

Language Initially, English, French, German and Italian may be se-

lected. Other languages may be added during the lifetime of this issue of the manual. Once confirmed (single blink after approximately two seconds), then all further displays

appear in the selected language.

Power Modules Select the number of power modules between 0 and 4 that

the driver module is to control. The number of phases offered (in Network type, below) depends on this value. Editing this value causes a confirmation screen to appear.

'OK' confirms the change.

er Modules are each able safely to sustain and a quarter of this value. Thus, for a 400 Amp unit, any nominal current value between 100 and 400 may be selected. (Lower values are not recommended as in such cases, the resulting accuracy and linearity are not guaranteed to be within

specification.)

Nominal Voltage A value between the maximum permanent supply voltage

(+10%) to the modules, and a quarter of this value. Available values are 100, 110, 115, 120, 127, 200, 208, 220, 230, 240, 277, 380, 400, 415, 440, 460, 480, 500, 575 and

0

1

2

3

Power Modules

Network Type

0

1

1 or 2

1 or 3

1 or 2

600.

Network Type Allows the user to select 1,

2 or 3 phases depending on the selection made in 'Power Modules', above. The table shows the choic-

es.

Load Coupling For Network Type entries

other than single phase:

2 phase: allows 3 Star or 3 Delta to be selected

3 phase: allows 3 Star, 3 Delta, 4 Star or 6 Delta to be se-

lected.

Load Type Allows 'Resistive' or 'Txformer' (transformer) to be select-

ed as the type of load. If Txformer is selected, this modifies

the start up procedure to limit the inrush current.

Firing Mode Select from 'Logic', 'BurstVar', 'BurstFix', 'HalfCycle' or

'Ph.Angle'.

Feedback Allows the user to choose open Loop, V<sup>2</sup>, I<sup>2</sup>, Power, Vrms

or Irms.

Transfer Mode If Feedback is set to any value other than 'Open Loop',

'None', 'l2' or 'Irms' can be selected as transfer mode. If Feedback is set to 'Open Loop', the Transfer Mode page

does not appear.

Analog IP1 Func Selects the <u>Analogue input 1</u> function as 'Unused', 'Set-

point', 'SP limit', 'I limit', 'V limit', 'P limit' (power limit) or 'Transfer'. Allows (for example) a potentiometer to be connected to Analogue input 1, so that setpoint can be dynam-

ically varied.

EPOWER CONTROLLER QuickStart

Analog IP 1 Type

10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA. This menu item does not appear if 'Unused' is selected in IP1 Func (above). Analog IP 2 Func As for Analog IP 1 Func, except 'Setpoint' does not appear if it has already been selected as Analog IP 1 type Analog IP 2 Type As for Analog IP 1 type Analog OP 1 Func Allows the user to select 'Unused'. 'Power', 'Current', 'Voltage' or 'Impedance' to be selected as output type. Analog OP 1 Type Allows the user to select the analogue output type as 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA. This menu item does not appear if 'Unused' is selected in OP1 Func (above). Digital IP2 Func Select <u>Digital input 2</u> function as 'Unused', 'RemSP Sel' (Remote setpoint select) or 'Alarm Ack' Relay 1 Func Allows the function of Relay 1 to be set as 'Unused', 'Any Alarm', 'NetwAlarm', or 'Fuse Blown'. Relay 1 Func Allows the function of Relay 1 to be set as 'Unused', 'Any Alarm', 'NetwAlarm', or 'Fuse Blown'. Appears only if one or more Energy counter blocks ("Ener-Energy gy" on page 102) are included in the configuration. Allows energy counters to be enabled and disabled. Load Man Type Appears only if the Predictive Load Management option is fitted. Allows the user to select one of LMNo (disabled), Sharing, IncrT1, IncrT2, RotIncr, Distrib, DistIncr, RotDis-Inc. See "Predictive Load Management Option" on page 219 for more details. Load Man Address Appears only if the Predictive Load Management option is fitted. Allows the user to enter a Predictive Load Management address. Finish Select 'No' to return to the top of the Quickstart menu, or 'Yes' to enter the User menu, after confirmation. (See also note below.)

Allows the user to select the analogue input type as 0 to

**Note:** The 'Finish' item might not appear if an inconsistent or incomplete configuration is entered. In such a case, the 'Language' selection page at the top of the menu re-appears.

QuickStart EPOWER CONTROLLER

## **Some Definitions**

## **Firing Modes**

### Logic

Power switches on, two or three zero crossings of the supply voltage after the logic input switches on. Power switches off two or three zero crossings of current after the logic input switches off. For resistive loads, voltage and current cross zero simultaneously. With inductive loads, a phase difference exists between the voltage and current, meaning that they cross zero at different times. The size of the phase difference increases with increasing inductance.

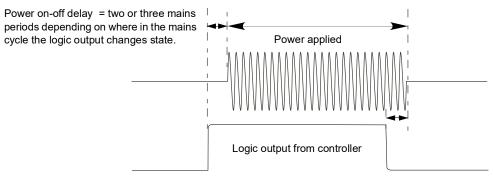


Figure 45 Logic Firing Mode

### **Burst Fixed Firing**

This means that there is a fixed 'cycle time' equal to an integer number of supply voltage cycles as set up in the Modulator menu. Power is controlled by varying the ratio between the on period and the off period within this cycle time (Figure 46).


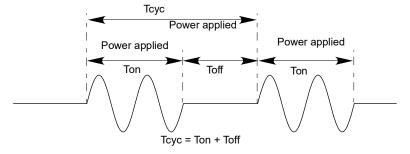


Figure 46 Burst Fixed Mode

EPOWER CONTROLLER QuickStart

### **Burst Variable Firing**

Burst Firing Variable is the preferred mode for temperature control. Between 0 and 50% of setpoint, the on time is the 'Min on' time set in the modulator menu and the off time is varied to achieve control. Between 50% and 100%, the off time is the value set for 'Min on' and power is controlled by varying the number of on cycles.

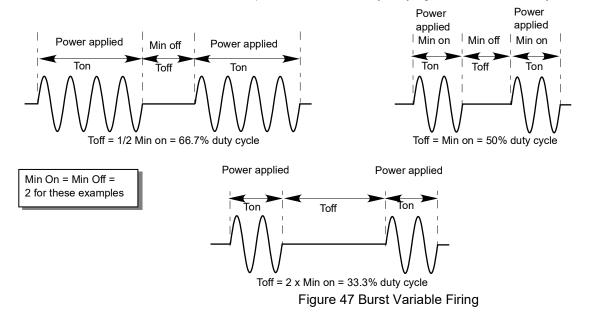

### **Phase Angle Control**

This mode of firing controls power by varying the amount of each cycle which is applied to the load, by switching the controlling thyristor on part-way through the cycle. Figure 48 shows an example for 50% power.

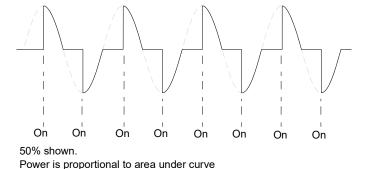


Figure 48 Phase Angle Mode

### **Half Cycle Mode**

Burst mode firing with a single firing (or non-firing) cycle is known as 'Single cycle' mode. In order to reduce power fluctuations during firing time, Intelligent half-cycle mode uses half cycles as firing/non-firing periods. Positive and negative going cycles are evened out, to ensure that no dc component arises. The following examples describe half-cycle mode for 50%, 33% and 66% duty cycles.

50% DUTY CYCLE

The firing and non-firing time corresponds to a single supply cycle (Figure 49).

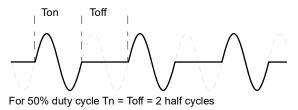


Figure 49 Half Cycle Mode: 50% Duty Cycle

QuickStart EPOWER CONTROLLER

### 33% Duty Cycle

For duty cycles less than 50%, the firing time is one half-cycle. For a 33% duty cycle, firing time is one half cycle; the non-firing time is two half-cycles (Figure 50).

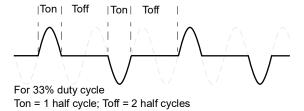


Figure 50 Half Cycle Mode: 33% Duty Cycle

### 66% Duty Cycle

V2

Open loop

For duty cycles of greater than 50%, the non-firing time is one half-cycle. For 66% duty cycle, the firing time is two half cycles; the non-firing time is one half cycle (Figure 51).

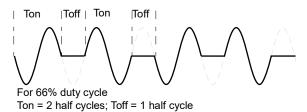


Figure 51 Half Cycle Mode: 66% Duty Cycle

## Feedback Type

All feedback types (except 'Open Loop') are based on real-time measurement of electrical parameters that are normalised to their equivalent Nominal values. Thus VRMS is normalised to Nominal Voltage;  $V^2$  is normalised to the square of Nominal Voltage and 'P' is normalised to the product of Nominal Voltage and Nominal Current.

Feedback is directly proportional to the square of the RMS voltage measured across the load. For two- or three-phase

	systems, feedback is proportional to the average of the squares of the individual phase-to-phase or phase-to-Neutral RMS voltage across each load.
Power	Feedback is directly proportional to the total true power delivered to the load network.
l <sup>2</sup>	Feedback is directly proportional to the square of the RMS current through the load. For two- or three-phase systems, feedback is proportional to the average of the squares of the individual RMS load currents.
$V_{rms}$	Feedback is directly proportional to the RMS voltage measured across the load or, for multi-phase systems, to the average of the individual phase-to-phase or phase-to-neutral RMS load voltages.
I <sub>rms</sub>	Feedback is directly proportional to the RMS current through the load or, for multi-phase systems, to the aver-

age of the individual RMS load currents.

No measurement feedback. The thyristor firing angle in Phase angle mode, or the duty cycle in burst-firing mode,

**Note:** V<sub>RMS</sub> and <sub>Irms</sub> require a specific wiring in Burst mode. Contact your local distributor.

are proportional to the setpoint.

EPOWER CONTROLLER QuickStart

### **Transfer Mode**

The control system can use automatic transfer of certain feedback parameters. For example with loads with very low cold resistance, I<sup>2</sup> feedback should be used to limit inrush current, but once the load has started to warm up, Power feedback should be used; the control program can be configured to change feedback mode automatically.

The Transfer mode can be selected as I<sup>2</sup> to P as appropriate to the type of load being controlled.

None I<sup>2</sup> No feedback parameter transfer to the control program Selects transfer mode: I<sup>2</sup> to the selected Feedback Mode (above).

### **Limitation Features**

This limiting is implemented using phase angle or duty cycle reduction depending on the type of control (e.g. phase angle, burst firing).

To prevent damage on some particular applications the 'chop off' function can be used.

**Note:** The limiting function 'Chop-Off' is considered an 'Alarm' in EPower.


In order, for example, to prevent potentially damaging inrush currents, it is possible to set a value for power or Current squared which is not to be exceeded during the mains period. For this case, limitation has to be configured to run by phase angle reduction.

For loads exhibiting low impedance at low temperatures but a higher impedance at working temperature, the current drawn reduces as the load warms and limiting gradually becomes unnecessary.

"Control Limit Parameters" on page 93 describes the configuration parameters which allow the user to enter a Process Variable (PV) and a setpoint (SP) for each phase, where the PV is the value to be limited (e.g. I<sup>2</sup>) and the SP is the value that the PV must not exceed.

### Firing Angle Limiting (In Phase Angle Mode)


For phase angle control, limiting is achieved by reducing the firing angle on each half mains cycle such that the limit value of the relevant parameter is not exceeded. Limiting is reduced, by the firing angle gradually increasing, until the target setting is achieved.

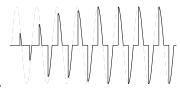

#### Firing Angle Limiting (In Burst Mode)

In Burst Mode limiting can also be achieved by reducing firing Angle during the 'ON' time such that the limit value of the relevant parameter is not exceeded.


In this way the PV must not exceed the limit SP during the ON time. We get 'Burst of Phase Angle'. See figure.

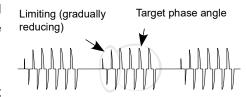


QuickStart EPOWER CONTROLLER

### **Duty Cycle Limiting (In Burst Mode)**

For Burst Firing only, limiting reduces the 'On' state of the burst firing driving the load. Load current, voltage and active power are calculated over the period of each (Ton + Toff) period.

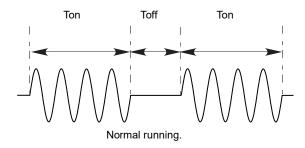

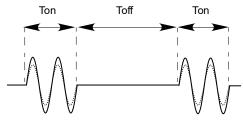

During limitation, amplitude increases when duty cycle decrease

## **▲** WARNING

#### **HAZARD OF FIRE**

- Product current rating must be upper or equal to the maximum current of the load. The maximum current of the load shall be calculated taking account of load resistive tolerance (tolerance and variation due to temperature) and voltage tolerance. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload
- 2. For high coefficient temperature resistive load Current limit function by phase angle reduction may be selected to limit the inrush current of the load and downsized the rating of the product. With Current limit function by phase angle reduction the product rating must be upper or equal to the nominal current of the load and to Current limit function by phase angle reduction setting. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload
- 3. With External current feedback, Current limit function by phase angle reduction will limit the inrush current in the load which may not be the current in the product (ie resistive load at the secondary side of a transformer). Ensure that the current in the product does not exceed the product current rating with the setting of Current limit function by phase angle reduction.
- 4. The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC), The product rating shall be selected to cope with inrush current according to warning 6. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload.
- 5. Duty cycle current limiting features (in burst mode), does not limit the peak current value. The product rating shall be selected to cope with the peak current value according to warning 6. Failure to follow these instructions may results in Branch circuit protection fuses, high-speed fuses (supplemental fuses) and product overload.

Failure to follow these instructions can result in death, serious injury or equipment damage.

EPOWER CONTROLLER QuickStart

### **Chop Off**

This is a technique which detects an over-current alarm state and stops further thyristor firing for the duration of that alarm state. All the relevant parameters are to be found in the Network Setup Submenu (see page 122).

There are two alarms which may trigger Chop Off, as follows:

operator acknowledges the Chop Off alarm.

- The alarm is active when ChopOff1Threshold is exceeded for more than five seconds. This threshold can be set to any value between 100% and 150% inclusive, of the unit's nominal current (INominal).
- 2. The alarm is active if ChopOff2Threshold is exceeded more than a specified number of times (NumberChop Off)) within a specified time period (Window Chop Off). ChopOff2Threshold is adjustable between 100% and 350% inclusive, of INominal; NumberChop Off can be selected to any value between 1 and 16 inclusive; Window Chop Off can be set to any value between 1 and 65535 seconds (approximately 18 hours 12 minutes).
  Each time the threshold is exceeded, the unit stops firing, raises a chop off condition alarm, then after 100ms, restarts using an up-going safety ramp. The condition alarm is cleared if the unit successfully restarts. If the alarm is raised more than the specified number of times within the specified window, then the Chop Off alarm is set and the unit stops firing. Firing is not resumed until the

QuickStart EPOWER CONTROLLER

EPOWER CONTROLLER Operator Menu

# **Operator Menu**

At power up or after quitting the Quickstart menu, the unit initialises itself (Figure 52) and then enters the first summary page of the Operator menu (Figure 53).



Return key

Figure 52 Initialisation Screens

**Note:** If any faults are detected during initialisation (e.g. supply voltage missing), then error messages appear on the display screen. The up and down arrow keys must be operated simultaneously to acknowledge each alarm in turn, before any further operations can take place.

# **Summary Pages**

Each summary page displays the voltage, current and power status described below calculated over the mains period when in Phase Angle mode or over the Modulation Period when in Burst Mode. The user may also edit the local setpoint from the summary pages. Where more than one, single phase unit is being driven, the parameter names have a numeric suffix (e.g. V2) to indicate which phase is being displayed. The enter key can be used to scroll through the available phases.

The Return key can be operated briefly to access the top level operator menu, which contains all summary pages and Alarm and Event Log entries. (Operation of the Return key for an extended interval calls the Access page - see "Access Menu" on page 80)

#### **Notes:**

- 1. A suffix 'n' below represents the number of the network currently being displayed.
- 2. 'LSP' is replaced in the display by 'RSP' for remote working.

# **Single Phase Summary Page**

Vn The RMS load voltage measurement for network 'n'.

In The RMS load current measurement for network 'n'.

Pn The true power delivered to network 'n'.

LSPn The local setpoint value for network 'n' - see also Note 2

above.

# Two or Three Phase Summary Page

Vavg	The average RMS load voltage over all three loads.
lavg	The average RMS load current over all three loads.
Р	The true power delivered to the load network.
LSP	The local setpoint value - see also Note 2 above.

Operator Menu EPOWER CONTROLLER

## Two by Two Phase Summary Page

This is a mode of operation whereby a single four-power-module unit can control two independent, three-phase networks.

Vavn The RMS load voltage averaged over all three loads for

network 'n'.

lavn The RMS load current averaged over all three loads for

network 'n'.

Pn The true power delivered to load network 'n'.


LSPn The local setpoint value for network 'n' - see also Note 2

above.

# Top Level Operator (User) Menu

1st Summary page appears:

- After quitting the Quickstart menu.
- On power up if the unit was left in Access level 1 (operator) or 2 (Engineer) at power down. (If powered off in Config mode, it restarts in Config mode.)

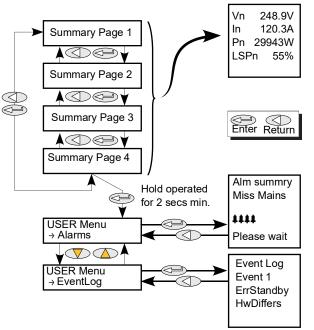

Use the 'Enter' key to scroll through summary pages.

The number of summary pages depends on the number (n) of separate power networks in the system.

 $n=1,\,2,\,3$  or 4 according to which Summary page is being displayed. n is not present if there is only one summary page.

Hold the Enter key continuously operated to return to the summary pages.

Hold the Return key continuously operated to call the Access (Goto) page.

Use the Enter key to scroll through alarms, acknowledging them as required.

Hold the Enter key continuously operated to return to the summary pages.

Hold the Return key continuously operated to call the Access (Goto) page.

Use the Enter or up/down keys to scroll through the event log. Hold the Enter key continuously operated to return to the summary pages

Hold the Return key continuously operated to call the Access (Goto) page.

Figure 53 User Menu Overview

**Note:** The summary page is displayed at switch on only if the unit has been configured, either via the Quickstart menu, or at the factory. Otherwise, at first switch on, the "QuickStart" on page 63 menu is entered.

Summary pages are discussed in "Summary Pages" on page 73, above.

# **Alarm Summary Pages**

This page contains a list of currently active alarms, together with a group of four flashing bell symbols if the alarm is unacknowledged. The 'Enter' key is used to scroll through the list, and the up/down arrow keys are operated, simultaneously, to acknowledge each alarm, as required.

EPOWER CONTROLLER Operator Menu

## **Event Log**

This is a list of up to 40 event items where Event 1 is the latest. As shown in the figure below, Event number, Event Type and Actual Event (known as 'Event ID') appear on the screen.

Event Types and Event IDs are given in Table 8.

EventLog EventNN Event Type Event ID EventLog Event30 Instrument Conf Exit

General

Typical example

Event Type	Event ID		
Config error DSP Error Fatal error General error Indication Alarm Network 'n' Active Indication Alarm Network 'n' Inactive Indication Alarm Network 'n' Acknowledged Instrument event Network 'n' error Power Module 'n' error Process Alarm External 'n' Active Process Alarm External 'n' Acknowledged Process Alarm External 'n' Acknowledged Process Alarm Network 'n' Acknowledged Process Alarm Network 'n' Acknowledged Restart Error Standby Error System Alarm Network 'n' Active	External process alarms  Deviation Band Deviation High Deviation Low High Low  Fatal errors Internal Fuse configuration Restart Failure  Config errors Invalid parameter database Invalid wiring table  Indication alarms Limit active Load over current Load Management over schedule Process Value transfer  General errors	Power module POST errors Comms error Comms timeout Fuse blown Power rail fail Watchdog Process alarms Chop Off Closed loop Main voltage fault Output short circuit Partial load fault Partial load unbalance Temperature pre-alarm Total Load Failure  Reset errors Invalid RAM checksum DSP no response	
System Alarm Network 'n' Inactive System Alarm Network 'n' Acknowledged  'n' = 1, 2, 3 or 4	Processor watchdog Event Log fault Power Module 'n' Calibration  Instrument events Cold start Config entry Config exit Global Acknowledge Power down Quickstart entry Quickstart exit  Network errors Phase 'n' power module Comms err Phase 'n' power module watchdog	Standby errors Invalid Power Module Revision Hardware mismatch Power Module 'n' Ribbon Fault  System alarms Fuse Blown Mains Frequency Fault Missing mains NetworkDip Over Temperature Power Module 24V fault Thyristor Open circuit Thyristor Short circuit	

Table 8: Event Types and IDs

#### **Notes:**

1. Event ID 'Fuse blown' may appear in association with either Event Type 'System Alarm Network 'n" or Event Type 'Power module 'n' Error'.

Operator Menu EPOWER CONTROLLER

Event ID 'Watchdog' appears in association with Event Type 'General error' and indicates that the microprocessor in the Driver Module has performed a watchdog reset.

3. Event ID 'Watchdog fault' appears with Event Type 'Power Module 'n' Error' and indicates that the relevant Power Module PIC microprocessor has performed a watchdog reset.

# **Strategy Standby Mode**

For SCADA systems, in order to determine Standby mode, the user should use bit 8 of the <u>Faultdet.Strategy-Status parameter</u>, not the <u>Instrument.Mode</u> parameter.

This is because Instrument Mode reflects user selection, not error states such as Hardware Mismatch.

# **Engineer and Configuration Level Menus**

These two menu sets are mostly identical, displaying the unit's parameters in a number of sub-menus. As the Engineer level menu is accessible whilst the Driver Module is on-line to the power module(s), the majority of the displayed items are Read Only (i.e. they can be viewed, but not edited), although some non-critical items can be changed.

Full configuration may be carried out from the Configuration level menus, which (apart from the access menu) contain the same parameters as the equivalent Engineering level menus. It is normally recommended, however, that configuration be carried out from a pc running iTools configuration software.

In either case, the unit goes off-line as soon as Configuration mode is entered.

# **Access to the Engineer and Configuration Menus**

# **Engineer Level Menu**

The Engineer level menu is entered as follows (Figure 54):



- 1. Operate the return key repeatedly, until no further changes occur, then hold the Return key continuously operated until the 'Access' 'Goto' display appears.
- 2. Use the up or down arrow key until 'Engineer' appears.
- 3. Either wait for a few seconds or operate the Enter key.
- 4. Use the up or down arrow key to change the code to the Engineer level code (factory default = 2, but reconfigurable in the CONFIG level menu)
- Either wait for a few seconds or operate the Enter key to display the first Summary Page. Press and hold the Enter key until the first page of the top level Engineer menu appears.

**Note:** when entering from configuration level no password is required. Once Engineer level has been selected, the unit restarts in the Engineer top level menu

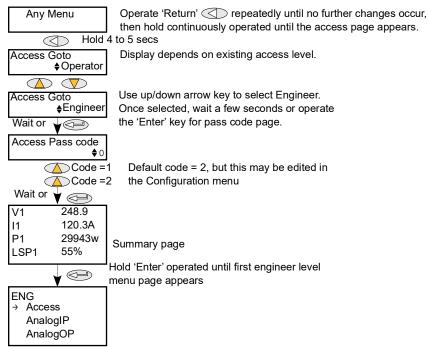


Figure 54 Access to the Engineer Level Menu

## **Configuration Level Menu**

The Configuration level menu is entered as follows (Figure 55):

- 1. Operate the return key repeatedly, until no further changes occur, then hold the Return key continuously operated until the 'Access' 'Goto' display appears.
- 2. Use the up or down arrow key until 'Configuration' appears.
- 3. Either wait for a few seconds or operate the Enter key.
- Use the up or down arrow key to change the code to the Engineer level code (factory default = 3, but reconfigurable in the CONFIG level Access menu)
- 5. Either wait for a few seconds or operate the Enter key to display the first page of the top level Configuration menu.

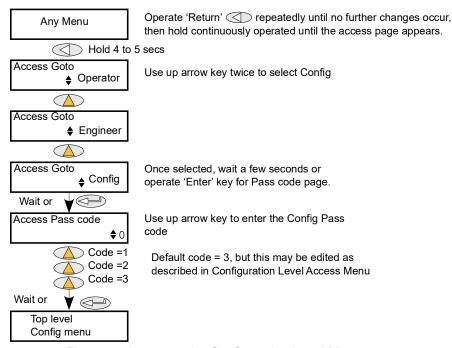


Figure 55 Access to the Configuration Level Menu

# **Top Level Menu**

Figure 56 shows the top level menu for Configuration level. Engineer top level menu similar (Default code = 2).

Submenus are discussed in the following sections:

**Note:** Engineer and Configuration Level Menus contains descriptions of all the menus which can appear. If an option or a feature is not fitted and/or enabled, then it does not appear in the top level menu.

80
83
83
86
89
98
101
102
104
105
106
109
111
112
114
116
118
119
127
132
133
138
139
141
142
143

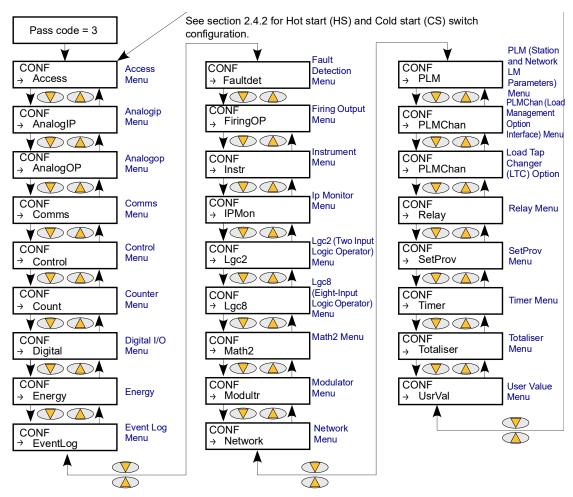


Figure 56 Top Level Menu

## **Access Menu**

# **Engineer Level Menu**

Entered from the Engineer top level menu, this allows the user to go to any other menu for which the access code is known. The default access codes are Operator = 1; Engineer = 2, Config = 3, Quickstart = 4.

Figure 57 below, shows details.

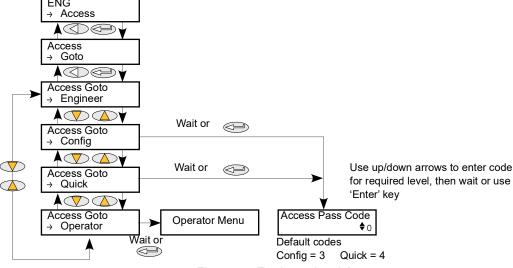


Figure 57 Engineer level Access menu

## **Configuration Level Access Menu**

This menu allows:

- The user to quit the Configuration level menu and 'Goto' a different access level.
   Operator and Engineer level menus require no Pass code as they are considered to be at a lower security level than Configuration. (Figure 58 shows the menu layout.)
- 2. The user to edit the current Pass codes for Engineer, Configuration and Quickstart menus (Figure 59),
- 3. Access to the Operator Interface push-buttons to be restricted in Operator and Engineer Level menus (Figure 59).

#### GoTo Menu

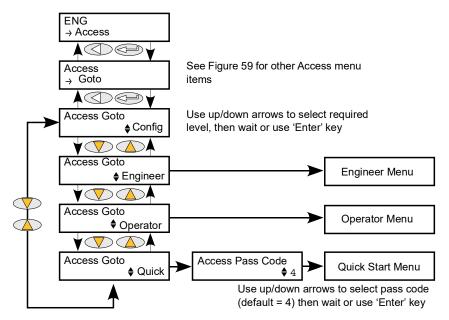


Figure 58 GoTo Menu

To change access level, the 'Enter' key is operated once to select 'Goto', then for a second time to enter the Goto selection page.

The up/down keys are used to select the required access level. After a few seconds, or after a further entry of the 'Enter' key, the unit restarts in the selected level (except for 'Quick Start' which requires the relevant Pass Code (default = 4) to be entered).

#### **Pass Code Editing**

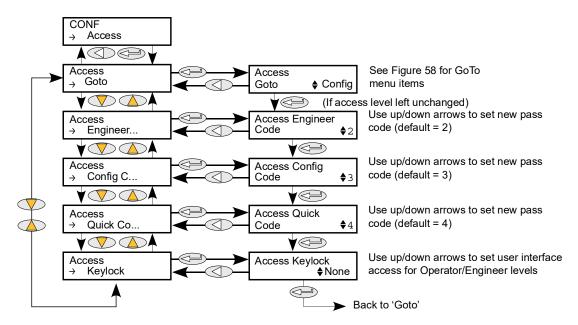


Figure 59 Access Configuration

Code

As depicted above, the 'Enter' key is used to select 'GoTo', then the up/down keys are used to select the required access level's Pass code for editing. Once the required level is selected (e.g. Engineer), the 'Enter' key is used once more, to enter the edit page, where the current Pass Code is displayed (e.g. 2). The up/down keys can now be used to enter a new value of between 0 and 9999. If 0 is selected, then the relevant menu will no longer be pass code protected.

After a few seconds, the new value blinks once to confirm that it has been written into the configuration.

KeyLock

None: No restriction. All parameters at the current ac-

cess level may be viewed and edited.

All:

All editing and navigation is prevented. All keys are locked so it is not possible to 'undo' this action from the Operator interface. Once 'All' is selected, the keyboard can be released only

via iTools.

Edit:

Parameter editing is possible only in Configuration level; parameters are Read Only in other levels. In the Operator or Engineer level menus, the 'Back' key is still active allowing access to the 'Goto' menu so that the access level may be changed if the relevant Pass code is known.

**Note:** Keylock is available only from the user interface (i.e. it cannot be accessed from iTools or over a communications link.)

# **Analogip Menu**

This menu item appears only if one or more analogue inputs have been configured as anything but 'Off' in Quickstart, or if one or more analogue inputs has been enabled using iTools.

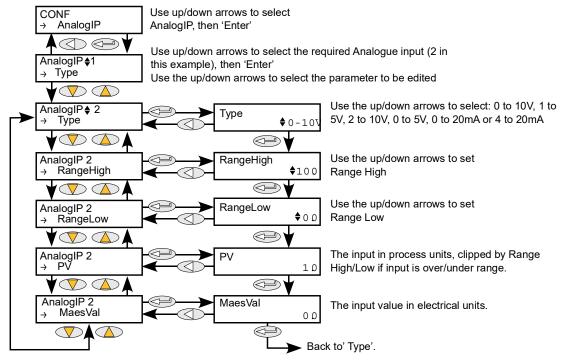


Figure 60 Analogue Input Menu

## **Analogue Input Parameters**

Гуре	Allows the type of input to be set as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA.
RangeHigh	High range of input for scaling from measurement units to process units. PV is clipped to range high if input goes over range.
RangeLow	Low range of input for scaling from measurement units to process units. PV is clipped to range low if input goes under range.
PV	The scaled value in process units. Clipped to the Range High or Range Low value if the signal goes over range or under range respectively.
MeasVal	The value at the instrument terminals in electrical units.

# **Analogop Menu**

This menu item appears only if one or more analogue outputs have been configured as anything but 'Off' in Quickstart, or if one or more analogue outputs has been enabled using iTools.

This provides a current or voltage output scaled from a Process Variable (PV) using Range High and Range Low. Figure 61 shows the 'Main' configuration submenu; Figure 62 shows the alarm parameters.

## **Analogue Output 'Main' Submenu Parameters**

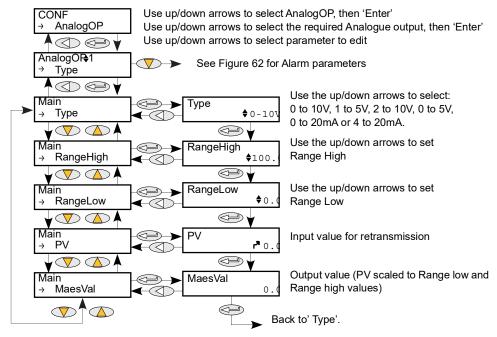


Figure 61 Analogue Output 'Main' Menu

Type Allows the output type to be set as one of: 0 to 10V, 1 to

5 V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA.

RangeHigh Used to scale the Process Variable (PV) from Process

units to electrical units.

RangeLow Used to scale the PV from Process units to electrical units.

PV The value to be output by the analogue output.

MeasVal The electrical output value derived by mapping the input

PV via input range to output range.

# **Analogue Output 'Alm' Parameters**

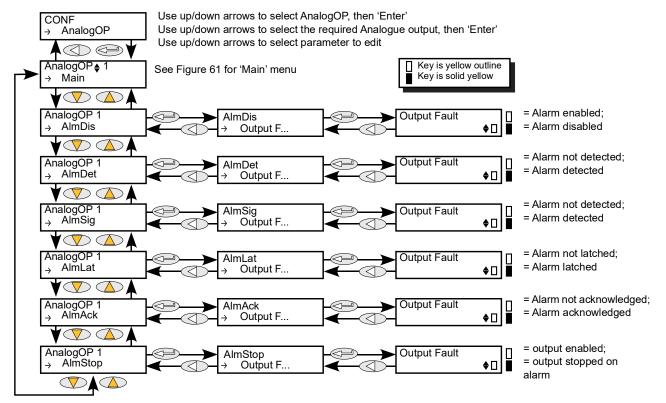


Figure 62 Analogue Output Alarm Parameter Access

AlmDis	Allows the user to view the current disable status of the output Fault alarm.
AlmDet	Indicates whether the alarm has been detected and is active.
AlmSig	Signals that the alarm has occurred and whether it is latched. To assign the alarm to a relay (for example), it is the AlmSig parameter that should be wired.
AlmLat	Allows the user to set the alarm as latching or non-latching.
AlmAck	Allows the user to view the current acknowledgement status of the output Fault alarm.
AlmStop	Allows the user to set up the alarm to disable Power Module firing whilst active.

**Note:** Output fault may be triggered by either short circuit or open circuit.

## **Comms Menu**



Figure 63 Communications User Menu

This menu allows the user to view, and in some cases, to edit communications parameters associated with the communications option. The user may also view the Address and Baud Rate parameters associated with the Remote Panel option.

#### **Communications User Menu Parameters**

The following parameter list includes all parameters which can appear. Only those parameters which are relevant to the fitted communications option appear in the menu list.

ID Displays the type of communications board fitted: RS-485

(EIA 485), Ethernet, or a Network comms board such as Profibus or DeviceNet. (These options are fully discussed in the Communications manual, HA179770.) ID is not user

editable.

Protocol Read only. Displays the current transmission protocol:

Modbus, Modbus TCP, Network, Profibus, DeviceNet,

CANopen, CC-Link, EtherNet/IP, ProfiNet.

Baud Allows the Baud rate setting for the unit to be set. Available

values vary according to the type of communications board

fitted.

Address Allows the instrument address to be set up. Each instru-

ment in a communications link must have a unique address allocated to it. The available address ranges vary

according to link protocol.

Occupied Stations Appearing for CC-Link protocol only, this read-only value

shows the number of addresses occupied by the unit, according to the number of input and output definitions are set up (in iTools Fieldbus I/O Gateway), and as shown in the table below. For example, if the address of this unit is 4, and the number of occupied stations is 3, then the next

available address is 7.

Number of occupied stations	Maximum No. of input definitions	Maximum No. of output definitions
1	3	4
2	7	8
3	11	12
4	15	16

Input definition:

2-byte word parameter to be read by the master.

Output definition:

2-byte word parameter to be written by master.

Parity Allows the parity setting to be selected as None, odd or

Even. None is often used because there are other corruption detection methods (e.g. CRC) in use, and selecting 'Odd' or 'Even' increases the number of bits transmitted,

thus reducing throughput.

Delay Selects Transmission Delay 'On' or 'Off'. 'On' inserts a

guaranteed 10 millisecond delay between reception and response. This is needed by some converter boxes in or-

der to switch driver direction.

Unit ident Enables/disables the checking of the Modbus TCP Unit

Identity field.

Strict: The Modbus TCP Unit Identity Field (UIF) does

not have to match the instrument address. The instrument responds only to Hex value FF in

the UIF.

Loose: The Modbus TCP Unit Identity Field (UIF) does

not have to match the instrument address. The instrument responds any value in the UIF.

Instr: The Modbus TCP Unit Identity Field (UIF) must

match the instrument address or no response

will be made to messages.

Local network information

(IP address, subnet mask

address etc.) is normally

sup-plied by the user's IT

depart-ment.

A value of 0 in the UIF is treated as a 'Broadcast Message'.

DHCP Enable Allows the user to choose whether the IP address and sub-

net mask are fixed or to be supplied by a DHCP Ethernet

server.

IP1 Address The first byte of the IP address. (If the IP address were to

be 111.222.333.444, then the first byte would be 111; the

second byte 222, and so on).

IP2 to IP4 Address As IP address 1, but for the remaining three Bytes.

Subnet1 to Subnet4 Mask

As IP Address 1 to 4, but for

the Subnet Mask

Gateway1 to 4 As IP Address 1 to 4, but for

the Default Gateway.

IP1 Pref Master to IP4 Pref Master

As for IP Address 1 to 4, but for the Preferred Master.

Show MAC Allows the user to choose whether the unit's MAC address

may be shown (Yes), or not (No).

MAC1 Appears only if Show MAC (above) is set to 'Yes'. This is

the first byte of the non-editable MAC address. (If the MAC address were to be 11.22.33.44.55.66 then the first byte

would be 11; the second byte 22, and so on).

MAC2 to MAC6 As for MAC1, but for bytes two to six respectively

Network Read Only. Also known as 'Ethernet Status'. Shows the

status of the communictions link, as follows:

Running: Link connected and running Init: Communications initialising

Ready: Network ready to accept connection

Offline: Network offline

Bad: Network Status Bad GSD (Profibus only)

NetStatus Read Only. Appears to 'Fieldbus' protocols only. Shows

the status of the communications network, as follows:

Setup: Anybus module set-up in progress

Init: Anybus module is initialising network-specific

functionality

Ready: Process Data channel ready but inactive

Idle: Interface is inactive

Active: Process Data channel is active and error free

Error: One or more errors have been detected

Fault: Host fault detected.

#### **Comms Remote Panel Parameters**

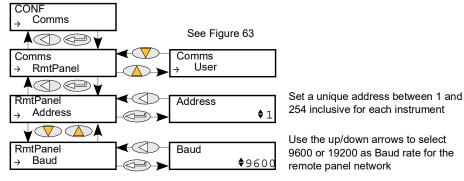


Figure 64 Communications Remote Panel Menu

Address Each instrument on the link must be given a unique address between 1 and 254 inclusive.

This may be the same or different from the address set in the CONF 'User' Menu ("Communications User Menu Pa-

rameters" on page 87).

Baud

Displays the Baud rate for the Remote panel communications. Either 9600 or 19200. This may be the same or different from the Baud rate set in the CONF 'User' Menu ("Communications User Menu Parameters" on page 87).

**Note:** Remote Panel parity setting should be set to 'No parity' or 'None'.

## **Control Menu**

The control menu provides the control algorithm to perform power control and transfer, threshold limiting and phase angle reduction (in the case of burst firing). Figure 65, below, gives an overview of the menu, which is described in the following sections:

**Control Setup Parameters** 

**Control Main Parameters** 

**Control Limit Parameters** 

Control Diag Parameters (Diagnostics)

Control Alarm Disable Parameters (Alarm disable)

Control Alarm Detection Parameters (Alarm detection)

Control Alarm Signalling Parameters (Alarm signalling)

Control Alarm Latch Parameters (Alarm latch)

Control Alarm Acknowledgement Parameters (Alarm Acknowledge)

Control Alarm Stop Parameters (Stop firing on alarm)

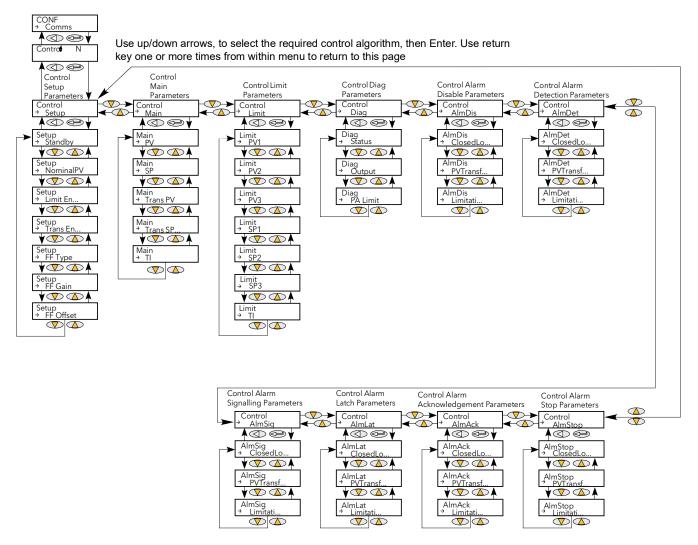


Figure 65 Control Menu

## **Control Setup Parameters**

This contains parameters for setting the type of control to be performed.

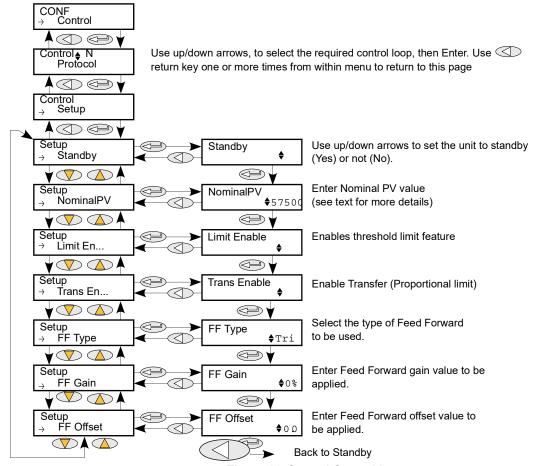


Figure 66 Control Setup Menu

If Yes, the controller enters Standby mode and zero % Standby

power is demanded. When removed from Standby the unit

returns to operating mode in a controlled manner.

Normally the nominal value for each control type. For ex-Nominal PV ample, for feedback mode =  $V^2$ , Vsq should be wired to the

Main PV, and Nominal PV set to the nominal value expect-

ed for V2 (usually VLoadNominal2).

Limit Enable Used to enable/disable threshold limit.

Trans Enable Select Transfer Enable (Proportional limit) as 'Yes' (ena-

bled) or 'No' (not enabled).

**FFType** Feedforward Type.

> Off: Feedforward is disabled

Trim: Feedforward value is the dominant element of

the output. Trimmed by the control loop based

on the Main PV and setpoint.

The feedforward value is the output from the FFonly:

controller. Open loop control may be config-

ured by this means.

Feedforward is for use only with the main control elements,

and the limit loop will override feedforward.

**FFGain** The entered gain value is applied to the Feedforward input. **FFOffset** 

The entered value is applied to the Feedforward input after

the Gain value has been applied to it.

#### **Control Main Parameters**

This menu contains all the parameters associated with the Main control loop.

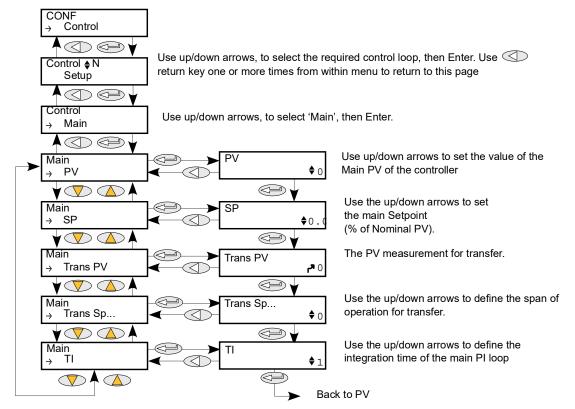


Figure 67 Control Main parameters

PV Displays the main Controller Process Variable (PV). Wired to the measurement which it is to be controlled. For example, to perform V<sup>2</sup> control. Vsq should be wired to this (PV) parameter and Nominal PV configured appropriately ("Control Setup Parameters" on page 91).

The Setpoint to control at, as a percentage of Nominal PV (the upper range of the loop in engineering units). For example, if NominalPV = 500V RMS, and SP is set to 20%, the controller attempts to regulate at 500 x 20/100 = 100V RMS. If Transfer or Limit is enabled, these will override SP.

Transfer PV. This is the PV measurement for transfer. For example, if a  $V^2$  to  $I^2$  transfer is required, the Vsq should be wired to MainPV and Isq to TransferPV. Appears only if Trans Enable ("Control Setup Parameters" on page 91) is set to 'Yes' (via iTools).

The span of operation for transfer. Appears only if Trans Enable ("Control Setup Parameters" on page 91) is set to 'Yes' (via iTools).

Allows the user to define an integral time for the main PI

control loop.

SP

Trans PV

Transfer Span

ΤI

## **Control Limit Parameters**

Parameters relating to the limit control loop.

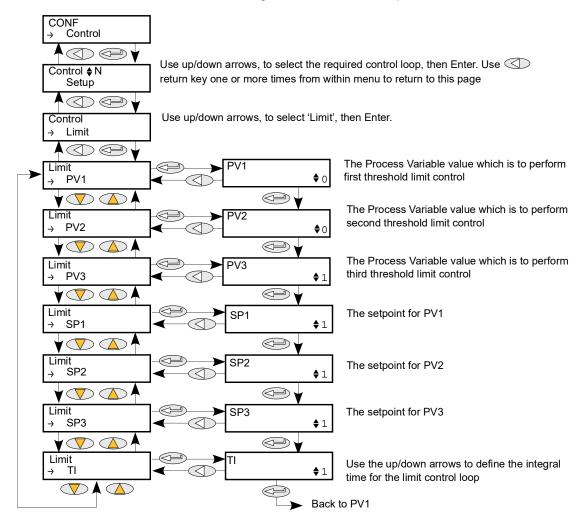


Figure 68 Control Limit Menu

PV1 to PV3

Threshold value for limit loops 1 to 3 respectively. This is the value to perform threshold limit control. 'Limit Enable' must be set to 'Yes' in the Setup menu ("Control Setup Parameters" on page 91).

SP1 to SP3 The setpoint for limit loops 1 to 3 respectively.

TI The integration time for the limit PI control loop.

#### Example:

If I<sup>2</sup> threshold limiting is required, Isq is wired to PV1, and the required threshold value is entered at SP1. In phase angle configuration, the phase angle is reduced to achieve the limit setpoint; in burst firing, the unit continues to fire in bursts, but these bursts are of phase angle in order to achieve the limit setpoint. The modulation continues to attempt to reach the main setpoint.

Also known as phase angle reduction burst firing.

## **Control Diag Parameters**

This Menu Contains Diagnostic Parameters Related To Control.

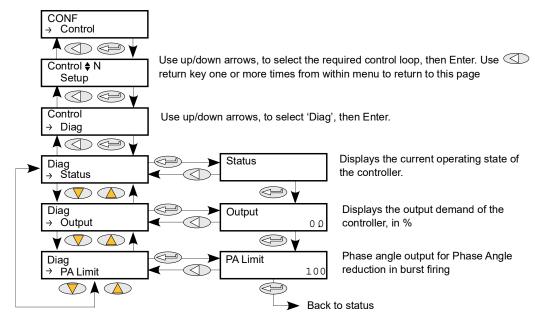


Figure 69 Control Diag Menu

Status Indicates the current operating state of the controller:

> The control strategy is using Main PV as the Main PV: control input

Transfer function active: The transfer input us being used as the input to the control strategy.

Limit 1(2)(3) active: Control limiting is currently active using limit PV1(2)(3) and limit SP 1(2)(3).

The current output demand in percent. Normally wired to Output

Modulator.In or FiringOP.In

Applies only to Burst Firing control modes. If this parameter is wired to FiringOP.PALimit, the power module will de-

liver bursts of phase angle firing depending both on the

Main Setpoint and on the Limit Setpoint.

**PA Limit** 

## **Control Alarm Disable Parameters**

Allows each alarm of the control block to be disabled, individually. May be wired.

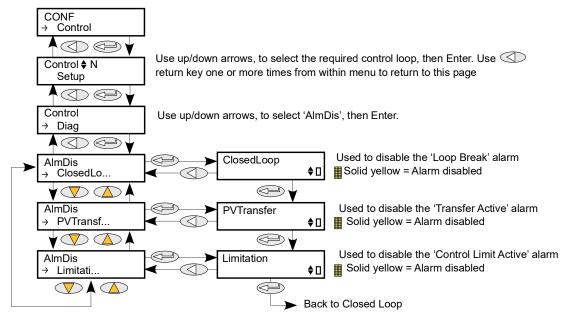


Figure 70 Control Alarm Disable Menu

Closed Loop The 'piano key' in the bottom right corner of the display in-

dicates the current enable status of the closed loop alarm. The up and down arrows are used to enable/disable the alarm. An 'empty' key indicates that the alarm is enabled;

a solid yellow key means that the alarm is disabled.

PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.

Limitation As for Closed Loop, but for the 'Control limit active' alarm.

**Control Alarm Detection Parameters** 

Indicates whether each alarm has been detected and whether or not it is currently active.

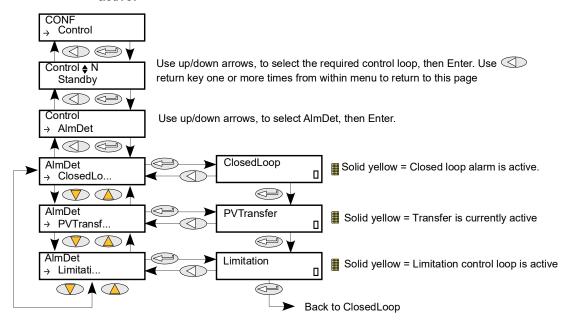


Figure 71 Control Alarm Detection Menu

Closed Loop

The 'piano key' in the bottom right corner of the display shows whether or not the closed loop alarm is currently active. An 'empty' key indicates that the alarm is inactive; a solid yellow key means that the alarm is active.

**PV Transfer** As for Closed Loop, but for the 'Transfer Active' alarm. Limitation As for Closed Loop, but for the 'Control limit active' alarm.

## **Control Alarm Signalling Parameters**

Signals that an alarm has occurred and has been latched (if so configured in 'Alarm Latch' ("Control Alarm Latch Parameters" on page 97)). If it is required that an alarm is to be assigned to a relay (for example), then the appropriate alarm signalling parameter should be used.

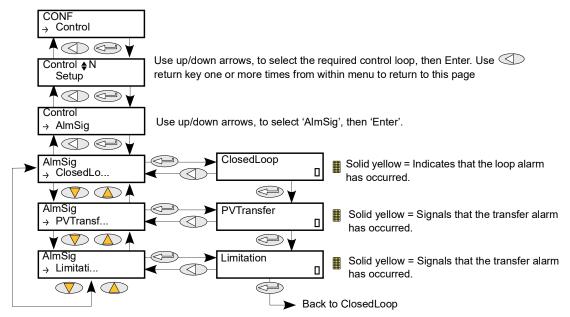


Figure 72 Control Alarm Signalling Menu

Closed Loop The 'piano key' in the bottom right corner of the display indicates whether the closed loop break alarm is currently

active. An 'empty' key indicates that the alarm is inactive;

a solid yellow key means that the alarm is active.

PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.

Limitation As for Closed Loop, but for the 'Control limit active' alarm.

#### **Control Alarm Latch Parameters**

Allows each alarm to be configured as latching or not latching. The latched status is shown in the Network AlmSig submenu (ref "Network Alarms" on page 126).

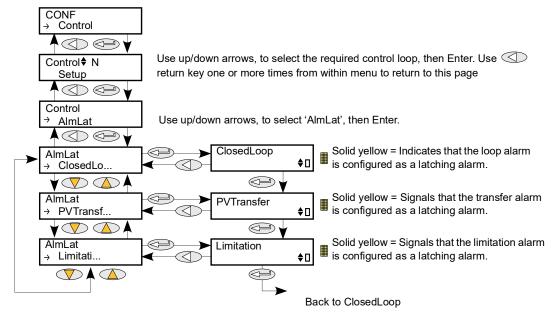


Figure 73 Control Alarm Latching Menu

Closed Loop Use the up/down arrows to change the latching status of

the alarm. The 'piano key' in the bottom right corner of the display indicates whether the closed loop alarm is latching

(solid yellow) or non-latching ('empty').

PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.

Limitation As for Closed Loop, but for the 'Control limit active' alarm.

# **Control Alarm Acknowledgement Parameters**

This menu allows individual alarms to be acknowledged. On acknowledgement, the related Signalling parameter is cleared. The Acknowledge parameters automatically clear after being written.

If the alarm is still active (as shown by the Alarm Detection display) it may not be acknowledged.

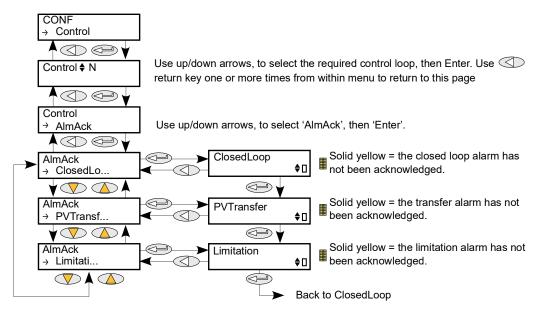


Figure 74 Control Alarm Acknowledge Menu

Closed Loop The 'piano key' in the bottom right corner of the display

shows whether the closed loop alarm has been acknowledged or not. An 'empty' key indicates that the alarm is acknowledged; a solid yellow key indicates that the alarm is unacknowledged. The up/down arrow keys are used to ac-

knowledge.

PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.

Limitation As for Closed Loop, but for the 'Control limit active' alarm.

## **Control Alarm Stop Parameters**

Allows individual channels to be configured such that it will stop the associated power channel from firing whilst the alarm is active. This feature is activated by the signalling parameters, so the alarm stop may be latching.

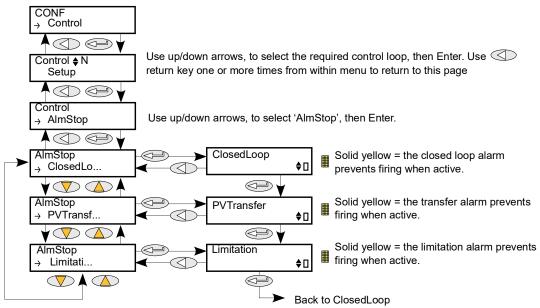


Figure 75 Control Alarm Stop Menu

Closed Loop The 'piano key' in the bottom right corner of the display

shows whether the closed loop alarm has been configured to disable firing or not. An 'empty' key indicates that the firing is enabled; a solid yellow key indicates that the firing is

disabled.

PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.

Limitation As for Closed Loop, but for the 'Control limit active' alarm.

#### Counter Menu

The counter output is a 32-bit integer the value of which is recalculated every sample period. When a clock state change from 0 (false) to 1 (true) is detected the counter value is incremented if the count direction is 'up' or decremented if the direction is 'down'.

At reset, the counter value is set to 0 for count up counters or to the 'Target' value for count down counters.

## **Counter Configuration Menu**

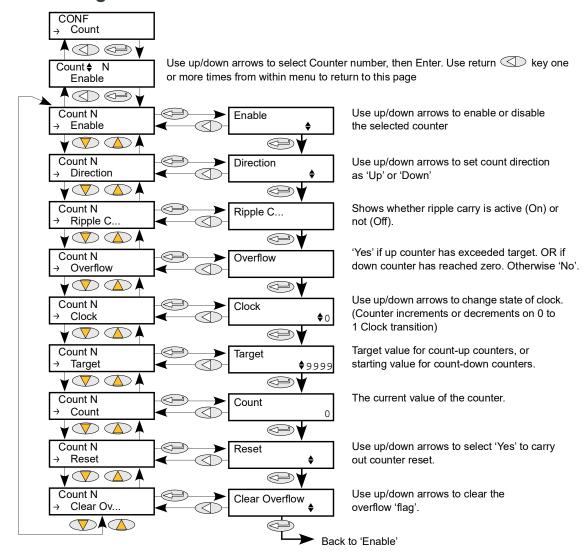


Figure 76 Counter Menu

Enable	The counter responds to clock transitions when enabled;
	the count is frozen when disabled.

Direction Select up or down as the direction of count. Up counters start at (and are reset to) zero; down counters start from

(and are reset to) the Target value (below)

# Ripple Carry The Ripple carry output of one counter can act as the enabling input for the next counter in a cascade. Ripple carry is set 'true' when the counter is enabled and its value is either zero (for count down timers) or equal to the Target val-

ue (count up counters).

Overflow Overflow becomes 'true' when the value of the counter is

either zero (for count down timers) or equal to the Target

value (count up counters).

Clock The counter increments or decrements on a positive going

edge (0 to 1; False to true).

Target Up counters: Start at zero and count towards the Target

value. When this value is reached, Overflow and Rip-

ple-carry are set true (value = 1).

Down counters: Start at the Target value and count towards zero. When zero is reached, Overflow and Ripple-carry are set true (value = 1).

Count The current value of the counter. This is a 32-bit

integer which accumulates clock transitions. Minimum val-

ue is zero.

Reset Resets up-counters to zero or down-counters to the Target

value. Reset also sets Overflow to False (i.e. Overflow = 0)

Clear Overflow Sets Overflow to False (i.e. Overflow = 0)

# **Cascading Counters**

As implied above, it is possible to 'wire' counters in cascade mode. Details for an 'up' counter are shown in Figure 77, below. Down counter configuration is similar.


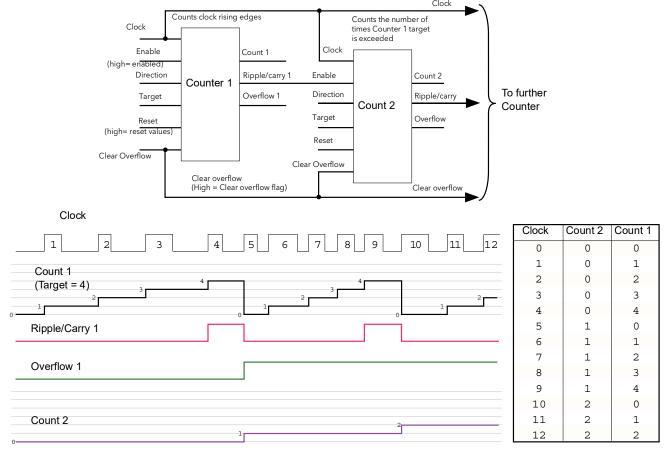


Figure 77 Cascading Up Counters

**Note:** Counter 2 above counts the number of times that Counter 1 target is exceeded. By permanently enabling counter 2, and wiring counter 1 'Ripple Carry' output to counter 2 'Clock' input (replacing the connection to the clock pulse stream), counter 2 will indicate the number of times counter 1 target is reached, rather than exceeded.

# Digital I/O Menu

#### Digital I/O configuration

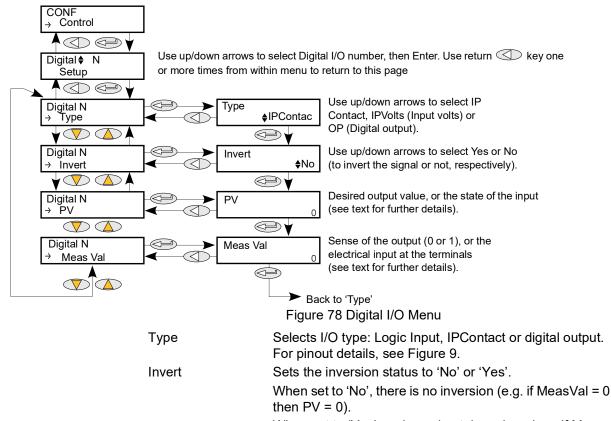

When set to 'Yes', an inversion takes place (e.g. if Meas-

Val = 0 then PV = 1)

MeasVal For inputs, this shows the value measured at the instru-

ment terminals, in electrical units. For outputs, this shows

1 or 0 according as the output is high or low.

PV For inputs, this is the current state of the input, after any in-

version has been applied. For outputs, this is the desired

output value (before any inversion is applied).

# **Energy**

Provides a number of energy counters to totalise consumed energy. The value(s) can be displayed at the driver module front panel (using iTools User Pages), and at the remote panel, if fitted. The power consumed can be displayed in one of number of units, ranging from W to GW. Figure 79 shows the menu.

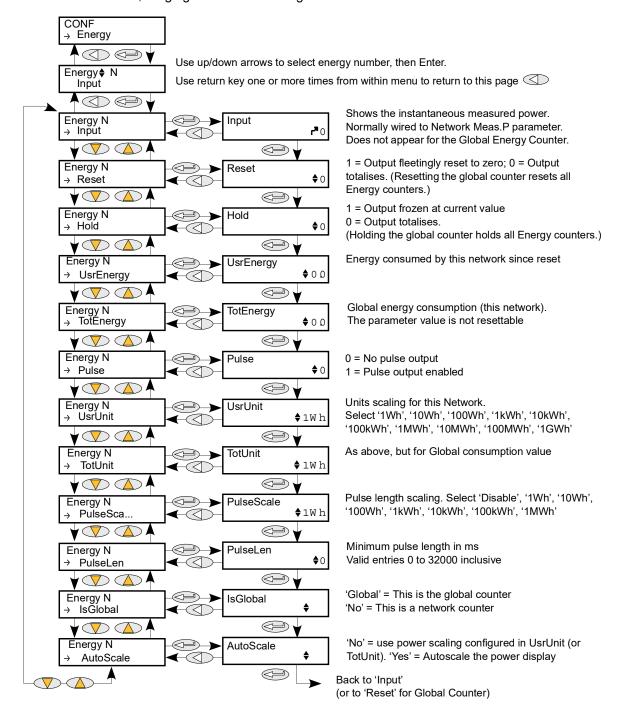


Figure 79 Energy Counter Menu

# **Energy Counter Parameters**

Input Shows the instantaneous power input from the measuring

source. Normally wired to the Meas.P output of a Network block. Does not appear for the Global Energy Counter (see

'IsGlobal', below).

Reset 1 = Energy counter output goes to zero and immediately

starts accumulating.

0 = Energy counter not reset.

If the Global Energy counter is reset, it resets all other En-

ergy counters (see 'IsGlobal', below).

Hold 1 = Hold output value. This freezes the output value for the

block at the current value. The input continues to be totalised, so when the Hold input returns to 0, the output value is instantaneously updated to the new current value.

0 = output value is not held, and represents the current ac-

cumulated Energy value.

If the Global Energy counter is held, all other Energy coun-

ters are held as well (see 'IsGlobal', below).

UsrEnergy Shows the current value for the selected Energy Counter

block. If this is the global counter, this value is the sum of the energy values of all those networks being totalised.

TotEnergy Shows the total energy value for the relevant network. Not

reset by 'Reset' above.

Pulse This enables a pulse output which causes a pulse to be

generated at a specified number of watt-hours (1, 10, 100kW-h or 1MW-h). The length of the pulse and a scaling

factor can be entered, as described below.

UsrUnit Allows a scaling units value to be entered for the energy

display. Selectable as '1Wh', '10Wh', '100Wh', '1kWh', '10kWh', '100kWh', '1MWh', '10MWh', '100MWh' or

'1GWh'.

TotUnit As 'UsrUnit', above, but for the total energy counter.

PulseScale One pulse is generated every 'n' Watt-hours, where 'n' can

be selected as 1, 10, 100, 1k, 10k, 100k, 1M Watt-hours. This value, and that of Pulse Len(gth) must be chosen to suit the application, such that the next pulse is not requested before the previous one is finished. (In such a case, the

PulseScale factor is automatically increased.)

PulseLen\* Select pulse length between 0 and 32000 ms. The actual

pulse length is rounded to the next longest multiple of 1/2 the supply frequency. Thus, for a 50Hz system (multiple = 10ms) pulse length entries of 1 to 10 will result in a pulse length of 10ms. For entries of 11 to 20 the pulse length will be 20ms, and so on. This value, and that of Pulse Scale must be chosen to suit the application, such that the next pulse is not requested before the previous one is finished. (In such a case, the PulseScale factor is automatically in-

creased.)

IsGlobal One (only) of the Energy blocks can be defined as being

'Global'. This means that it sums the values of all the other Energy counters. The block 'input' is disabled. The 'IsGlobal' parameter becomes non-editable (set to 'No') for all other Energy counter blocks. If the Global energy Counter is held or reset, all other counters are held and reset as well.

'No' = This counter is not the Global counter.
'Global' = this counter is the Global counter.

Autoscale No = Use UsrUnit and TotUnit settings.

Yes = Autoscale power value display. Table 9 shows the

breakpoints.

**Note:** due to the computing time required, the pulse-length may vary according to circumstance. For example, if a 20ms pulse is selected, the actual pulse length may be a mixture of 20ms and 30 ms pulses.

Power Ra	Scaler value	
0	to 65,535	1
65,535	to 65,535,000	1k
65,535,000	to 655,350,000	10k
655,350,000	to 6,553,500,000	100k
6,553,500,000	to 65,535,000,000	1M
65,535,000,000	to 655,350,000,000	10M
655,350,000,000	to 6,553,500,000,000	100M
6,553,500,000,000	upwards	1G

**Table 9: Autoscale Breakpoints** 

## Resolution

The resolution of the stored energy value varies according to the totalised value, as shown in Table 10 below. For example, for stored values between 33,554,432 watt-hours and 67,108,863 watt-hours, the value increases in 4 watt-hour increments.

Power Range (Watt-hours)		Resolution (W-h)	Power Ran	ge (Watt-hours)	Resolution (W-h)
0	to 16,777,215	1	17,179,869,184	to 34,359,738,367	2,048
16,777,216	to 33,554,431	2	34,359,738,368	to 68,719,476,735	4,096
33,554,432	to 67,108,863	4	68,719,476,736	to 137,438,953,471	8,192
67,108,864	to 134,217,727	8	137,438,953,472	to 274,877,906,943	16,384
134,217,728	to 268,435,455	16	274,877,906,944	to 549,755,813,887	32,768
268,435,456	to 536,870,911	32	549,755,813,888	to 1,099,511,627,775	65,536
536,870,912	to 1,073,741,824	64	1,099,511,627,776	to 2,199,023,255,551	131,072
1,073,741,824	to 2,147,483,647	128	2,199,023,255,552	to 4,398,046,511,103	262,144
2,147,483,648	to 4,294,967,295	256	4,398,046,511,104	to 8,796,093,022,207	524.288
4,294,967,296	to 8,589,934,591	512	8,796,093,022,208	to 17,592,186,044,415	1,048,576
8,589,934,592	to 17,179,869,183	1,024		, ,	


**Table 10: Energy Counter Resolution** 

# **Event Log Menu**

This topic is identical with the Event log in the User/Operator menu, and is described in "Event Log" on page 75.

## **Fault Detection Menu**

This manages Alarm logging and provides an interface for the General Alarm Acknowledgement.

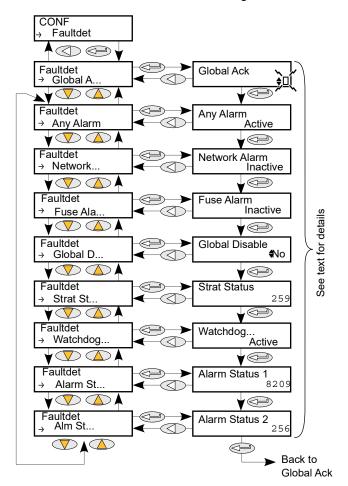

Bit	Value	Description
0	1	Network 1 not firing
1	2	Network 1 not synchronized
2	4	Network 2 not firing
3	8	Network 2 not synchronized
4	16	Network 3 not firing
5	32	Network 3 not synchronized
6	64	Network 4 not firing
7	128	Network 4 not synchronized
8	256	Strategy in standby mode
9	512	Strategy in Telemetry mode
10	1024	Reserved
11	2048	Reserved
12	4096	Reserved
13	8192	Reserved
14	16384	Reserved
15	32768	Reserved

**Table 11: Strategy Status Word** 

Figure 80 Fault Detect Menu

Bit	Value	Description
0	1	Missing Mains
1	2	Thyristor short circuit
2	4	Open Thyristor
3	8	Fuse blown
4	16	Over temp
5	32	Network Dips
6	64	Frequency fault
7	128	PB24V fault
8	256	Total Load Failure
9	512	Chop Off
10	1024	Partial Load Failure
11	2048	Partial Load Unbalance
12	4096	Volt fault
13	8192	Pre Temp
14	16384	Over current
15	32768	Power Module wdog fault

Table 12: Alarm Status 1 word

Bit	Value	Description
0	1	Power Module Comms error
1	2	Pwr Module Comms timeout
2	4	Closed Loop
3	8	Transfer active
4	16	Limit active
5	32	PLM Pr over Ps fault
6	64	Output fault
7	128	LTC Fuse
8	256	LTC Temp
9	512	Reserved
10	1024	Reserved
11	2048	Reserved
12	4096	Reserved
13	8192	Reserved
14	16384	Reserved
15	32768	Reserved

Table 13: Alarm Status 2 word

Global Ack Performs a global acknowledgement of alarms. Latched

alarms are cleared if their trigger sources are no longer in

an alarm state.

Any Alarm 'Active' indicates that there is one or more System, Pro-

cess or 'Chop Off' alarm active. If the relevant alarms are enabled, System alarms and Chop Off alarms always cause the power module to stop firing. Process alarms can

also be configured to prevent firing in 'Alarm stop'.

Network Alarm Indicates that a process alarm has occurred in one or more

Power Modules.

Fuse Alarm Indicates that a fuse has blown in one or more Network

blocks.

Global Disable Allows the user to disable/enable all alarms.

StratStatus A coded status word giving strategy information as shown

in Table 11.

Watchdog Watchdog relay status (Active or Inactive). The watchdog

relay is active (non-energised) under fault conditions.

Alarm Status 1/2 Two 16-bit words containing alarm status information as

shown in tables 6.12b and 6.12c respectively.

# **Firing Output Menu**

This forms the link between the control strategy and the physical load. Configuration includes Firing mode, Network Type and the type of Load coupling. This block also supplies Phase-Angle Ramp (Soft start) and Safety Ramp.

In Engineer level, these items are mostly Read only (i.e. their values cannot be edited).

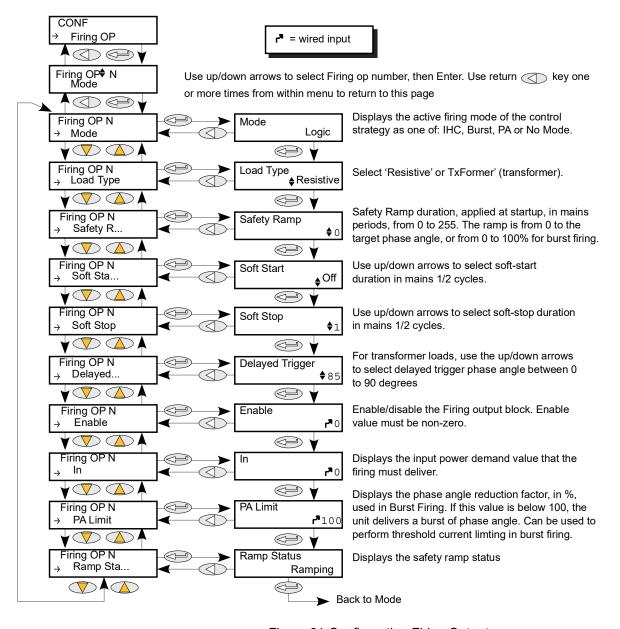


Figure 81 Configuration Firing Output

Mode	Displays the current firing mode as Intelligent half cycle
	(IHC), Burst firing, Phase angle firing or no mode. Config-
	ured in the "Modulator Menu" on page 118, menu de-
	scribed below.

Load Type	Allows the load type to be selected as 'Resistive' or 'Trans-
	former'. For Load type = Resistive, the load must be con-
	nected directly to the power module and only resistive
	loads may be so connected. For Load Type = Transformer,
	the load is connected to the power module via a transform-
	er, and may be resistive or reactive.

,
Displays the safety ramp duration, in supply voltage cycles
(0 to 255), to be applied at startup. The ramp is either a
phase angle ramp from zero to the requested target phase
angle or, for Burst Firing, from 0 to 100%. See Figure 82.
Safety Ramp is not applicable to Half cycle Mode.

Soft Start For Burst Firing only, this is the soft start duration, in main period, applying a phase angle ramp at the beginning of each on period. (Figure 83.

Soft Stop In Burst Firing, the soft stop duration, in main period, applying a phase angle ramp at the end of each on period.

HA179769 Issue 16

Safety Ramp

Delayed Trigger Appears only if Mode = Burst, Soft Start = Off, and Load

Type = TxFormer. Delayed Trigger specifies the triggering delay, in phase angle, when delivering power into a transformer load. Used to minimize inrush current on transform-

er load. See Figure 84.

Enable Enables/disables firing. Must be wired to a non-zero value

to enable firing (typically a digital input).

In Displays the input power demand value that the power

module is to deliver.

PA Limit Phase angle limit. This is a phase angle reduction factor

used in Burst Firing. If lower than 100% the power module will deliver a burst of phase angle firing. Used, typically, to

perform threshold current limiting in Burst Firing.

Ramp Status Displays the safety ramp status as 'Ramping' or 'Finished'.

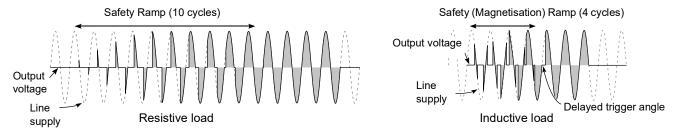


Figure 82 Safety Ramp (Burst Firing) Examples

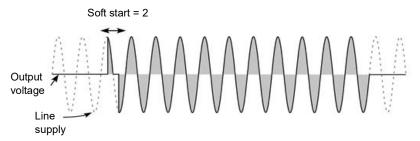


Figure 83 Soft Start Example

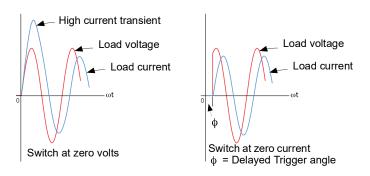


Figure 84 Delayed Trigger Definition

Note: Waveforms have been idealised for clarity

### **Instrument Menu**

Allows the user to select the display language, and to view the unit's Serial number and the current Network configuration.

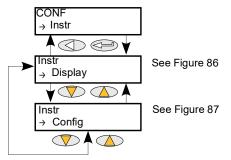


Figure 85 Instrument Menu

# **Instrument Display Parameters**

Allows the user to select display language and to view the unit's serial number.

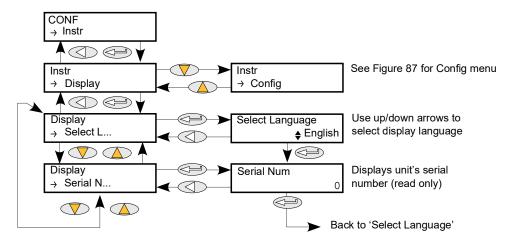


Figure 86 Instrument Display Submenu

Serial Num Read only. Displays the factory-set Serial number of the

unit.

Select Language The up and down arrow keys are used to select the re-

quired language from English, French, German or Italian. (Correct at time of writing - further languages may be add-

ed during the life of this manual.)

# **Instrument Config Parameters**

Allows the user access to the current power network configuration.

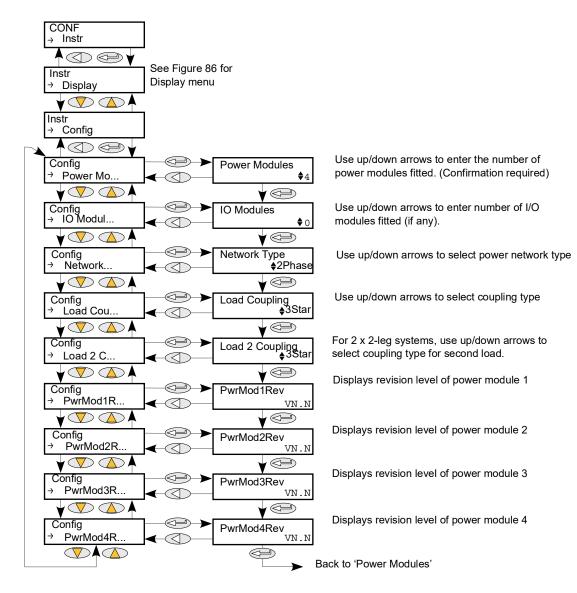


Figure 87 Instrument Config Submenu

Configures the number of power modules fitted. If left at

, ever medales	zero, the system automatically determines the number of modules fitted and sets the parameter accordingly.
IO Modules	Specifies the number of optional I/O modules fitted. If left at zero, the system automatically determines the number of modules fitted and sets the parameter accordingly.
Network Type	Selects the type of network to be used, from 3 Phase, Single Phase or 2 Phase.
Load Coupling	For a three-phase system this allows the user to select the wiring configuration from 3Star, 3Delta, 4Star or 6Delta. For a two-phase system, only 3Delta or 3Star is selectable.
Load 2 Coupling	As Load Coupling, above, but for the second load in 2 x 2-leg systems.
PwrMod1Rev	Shows the revision level of power module '1'.
PwrMod2Rev	Shows the revision level of power module '2'.
PwrMod3Rev	Shows the revision level of power module '3'.
PwrMod4Rev	Shows the revision level of power module '4'.

110 HA179769 Issue 16

**Power Modules** 

# **Ip Monitor Menu**

This monitors a wired parameter and records its maximum value, minimum value and the cumulative time that its value spends above a configurable threshold. An alarm can be set up to become active when the time-over-threshold exceeds a further threshold.

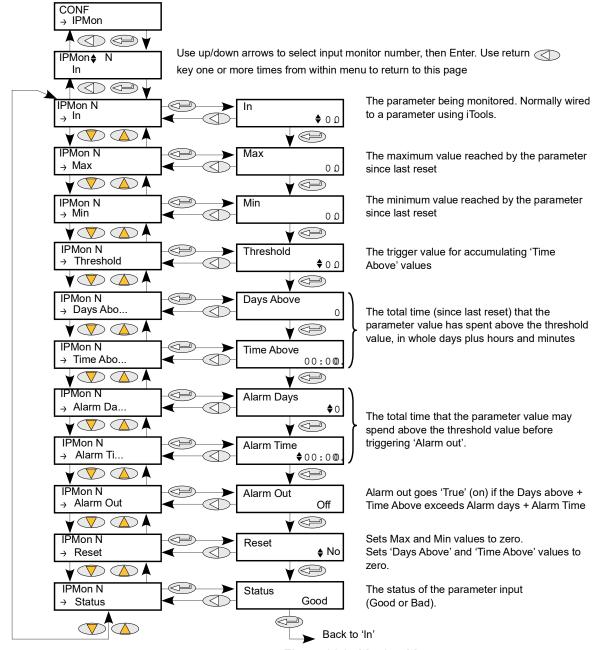


Figure 88 Ip Monitor Menu

In The parameter to be monitored. Normally wired (using iTools) to a parameter, but a numeric entry can be made for testing purposes.

Max The maximum value reached by the parameter since last

reset.

Min The minimum value reached by the parameter since last

reset

Threshold This value acts as a trigger for the 'Time Above' measure-

ment.

Days above Shows how many complete days the parameter value has

spent above the Threshold value (continuously or intermittently) since last reset. The 'Time Above' value should be added to 'Days Above' in order to find the total time.

Time Above Shows how many hours, minutes and tenths of minutes that the parameter value has spent above the threshold value (continuously or intermittently) since last reset, or since the last complete day. (once the value exceeds 23:59.9, it increments the 'Days Above' value and resets itself to 00:00.0.) The 'Time Above' value should be added to 'Days Above' in order to find the total time. Alarm Days Together with 'Alarm Time' this defines a 'total time above threshold' value, which, when exceeded, sets the Alarm out parameter 'On'. Alarm Time See 'Alarm Days' above. Reset Resetting causes the Max. and Min. values to be set to the current value, sets the 'Days Above' value to zero, and the 'Time Above' value to 00:00.0. Status Shows the status of the input parameter as either 'Good' or 'Bad'.

# Lgc2 (Two Input Logic Operator) Menu

This logic operator block provides a number of two-input logic operations. The output is always a 'Boolean' (logic 0 or 1) no matter whether the inputs are analogue or digital. For analogue inputs, any value below 0.5 is deemed to be logic 0 (off). A value equal to or greater than 0.5 is treated as a logic 1 (on).

Either input can be 'inverted' as a part of the configuration (that is, a high input is treated as a low input and vice-versa.)

Figure 89 shows the LGC2 menu.

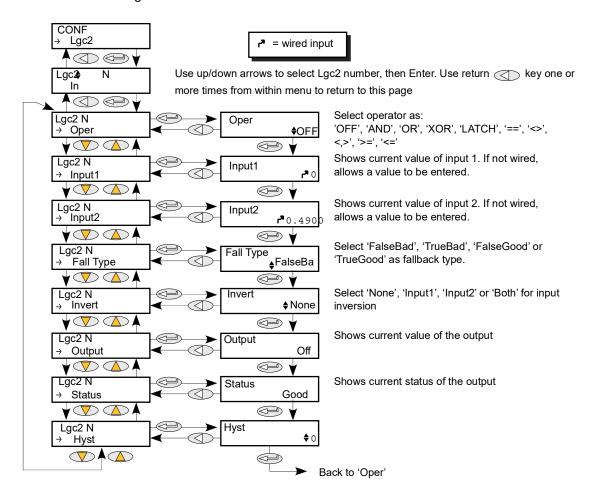


Figure 89 Lgc2 Menu

# **Lgc2 Parameters**

Oper Allows the user to select a logic operation for the block.

The descriptions below assume neither input is inverted.

High = 1 or on; Low = 0 or off.

Off No logic operation selected.

AND Output high if both inputs high, otherwise output is low. OR Output high if either or both inputs high, otherwise output

XOR Output high if either (but not both) inputs high. Low if nei-

ther or both inputs high.

LATCH If i/p2 low, output latches next transition of i/p1. Value re-

mains latched until i/p2 goes low, when output = i/p1 (see

Figure 90).

Output high if both inputs are equal, otherwise output is ==

<> Output high if inputs are unequal. Output is low if both in-

puts are equal.

Output high if i/p1 value greater than i/p2 value, otherwise

output is low.

Output high if i/p1 value less than i/p2 value, otherwise out-

put is low.

>= Output high if i/p1 value is equal to or greater than i/p2 val-

ue, otherwise output is low.

<= Output high if i/p1 value is less than or equal to i/p2 value,

otherwise output is low.

If wired, shows the value of input 1; if not, allows the user Input 1

to enter a value.

If wired, shows the value of input 1; if not, allows the user Input 2

to enter a value.

Allows a fallback type to be selected. This defines the out-Fall type

put value and status displays if the status of one or both in-

puts is 'bad'.

FalseGood Output value displays 'False'; Status displays

'Good'

FalseBad Output value displays 'False'; Status displays 'Bad' TrueGood Output value displays 'True'; Status displays 'Good'

Output value displays 'True'; Status displays 'Bad' TrueBad

Invert Allows none, either or both inputs to be inverted.

Output Shows the current output value

Status Shows the status of the output ('Good' or 'Bad').

For comparison Hysteresis


operators only (e.g. >) this allows a hysteresis value to be entered. For

Hysteresis

I/P1 > (I/P2-H) I/P1 > (I/P2-H) O/P

example, if the operator is '>' and hysteresis is H, then the output goes high when input 1 exceeds input 2, and remains high until input 1 falls to a value less than (Input 2 -

H). Not applicable to the '==' (equals) function.

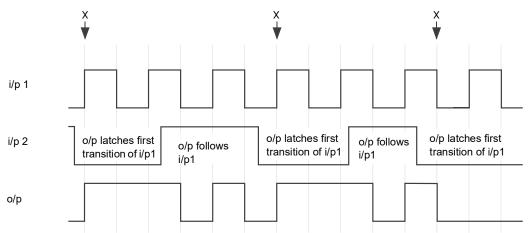


When i/p2 goes low, o/p follows the next positive or negative transition of i/p 1 (points 'X') and latches at this value until i/p2 goes high. When i/p2 is high, o/p follows i/p1.

Figure 90 Latch Operation

# Lgc8 (Eight-Input Logic Operator) Menu

This allows between 2 and 8 inputs to be combined using an AND, OR or Exclusive OR (EXOR) logic function. The inputs may be individually inverted, and the output can also be inverted, thus allowing the full range of logic functions to be implemented.

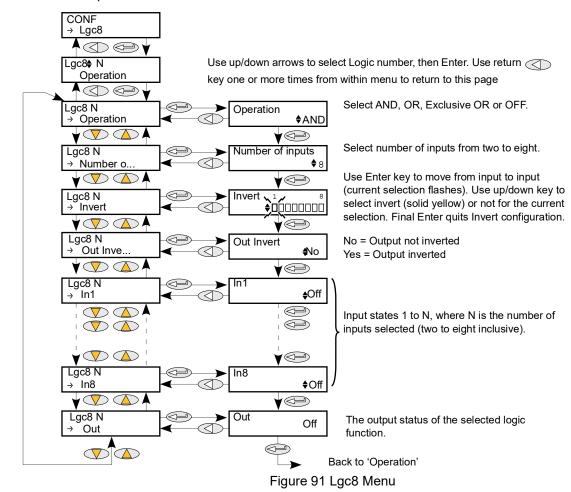

Operation

Allows selection of AND, OR or Exclusive OR functions (or OFF).

AND = output is high only if all inputs are high OR = output is high if any or all inputs are high

XOR = output is high if an odd number of inputs are high, and low if an even number of inputs are high. Logically, a cascaded XOR function: (((((((In1  $\oplus$  In 2)  $\oplus$  In 3)  $\oplus$  In 4)....

⊕ In 8)

Number of inputs Set the number of inputs to between two and eight inclu-

sive. This number defines how many invert keys appear in

'Invert', and how many Input value pages appear.

Invert Between two and eight piano keys appear (according to

the number of inputs selected) at the bottom line of the display, with the left-most one (input 1) flashing. The up or down arrow can be used to select 'invert' for this input (key goes solid yellow), and/or the 'Enter' key can be used to move to the next input. Once all the inputs have been accessed, the final operation of the Enter key quits the Invert

configuration, and 'output invert' is entered.

Out Invert No = normal output; 'Yes' means that the output is invert-

ed, allowing NAND and NOR functions to be implemented.

In1 The state (on or off) of the first input In2 onwards The state of the remaining inputs

Out The Output value of the function (i.e. On or Off)

### Math2 Menu

This feature allows a range of two-input mathematical functions to be performed. The available functions are listed below.

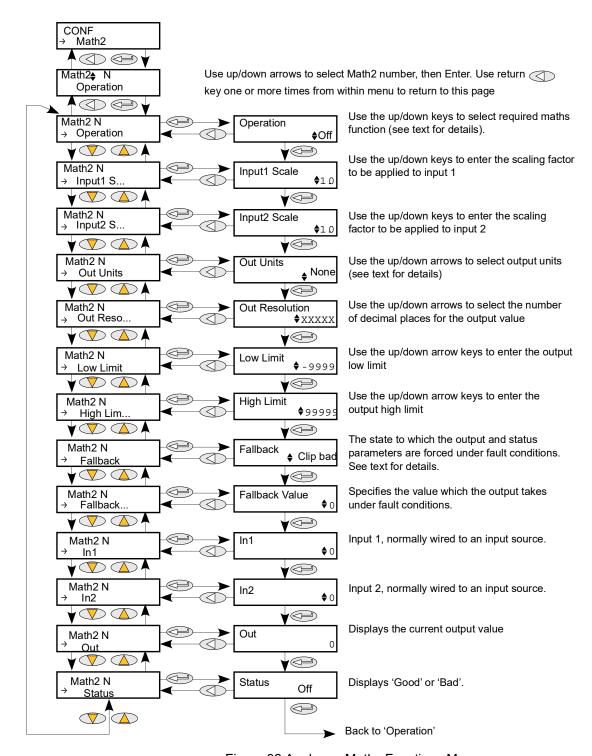


Figure 92 Analogue Maths Functions Menu

**Note:** For the sake of this description, 'High', '1' and 'True' are synonymous, as are 'Low', '0' and 'False'.

Operation Defines the mathematical function to be applied to the inputs:

None No operation.

Add Adds input one to input two.

Sub Subtracts input two from input one.

Mul Multiplies inputs one and two together.

Div Divides input one by input two.

AbsDif The difference in value between inputs one and two, ignoring sign. SelMax Output = the higher of inputs one and two. SelMin Output = the lower of inputs one and two. HotSwp Input one appears as the output for as long as input one is 'good'. If input one status is bad, input two appears as the output instead. **SmpHld** Sample and Hold. The output follows input one, for as long as input two is high (sample). When input two goes low (hold), the output is held, at the value current when the output went low, until input two goes high again. Input two is normally a digital value (low = 0 or high = 1); when it is an analogue value, then any positive non-zero value is interpreted as a high. Power Output = Input one raised to the power of input two (In1<sup>ln2</sup>). For example if input one has the value 4.2, and the value of input two is 3, then output =  $4.2^3$  = 74.09. The output is the square root of input one. Input Sqrt two is not used. Output =  $Log_{10}$  (input one). (Log base 10). In-Log put two is not used. Ln Output =  $Log_n$  (input one). (Log base e). Input two is not used. Output =  $e^{(input \text{ one})}$ . Input two is not used. Exp Output = 10<sup>(input one)</sup>. Input two is not used. 10 x If the Select input is high, input two appears at Select the output; if the Select input is low, input one appears at the output. Input1 Scale The scaling factor to be applied to input one. Input2 Scale The scaling factor to be applied to input two. **Out Units** Allows the user to choose units for the output. Out Resolution Use the up and down arrows to position the decimal point as required. Low Limit The low limit for all inputs to the function and for the fallback value. The high limit for all inputs to the function and for the fall-**High Limit** back value. Fallback limit- Low limit).

The fallback strategy comes into play if the status of the input value is 'Bad', or if its value lies outside the range (High

Fall Good: The output is set to the fallback value (below);

output status is set to 'Good'. Fall Bad: The output is set to the fallback value (below);

output status is set to 'Bad'.

Clip Good: The output is set to the high or low limit as appropriate; output status is set to 'Good'.

Clip bad: The output is set to the high or low limit as appropriate; output status is set to 'Bad'.

DownScale: The output is set to the low limit and Status is

set to 'Bad'. Upscale: The output is set to the high limit and Status is

set to 'Bad'.

Allows the user to enter the value to which the output is set

for Fallback = Fall Good, or Fall Bad.

Appears only if Operation = Select. Allows input one or input two to be selected for output.

Fallback value

Select

ln1	Input one value (normally wired to an input source).
In2	Input two value (normally wired to an input source).
Out	The output value resulting from the configured mathe

The output value resulting from the configured mathematical operation. If either input is 'Bad', or if the result is out

of range, the fallback strategy is adopted.

Status Indicates the status of the operation as 'Good' or 'Bad'.

Used to flag error conditions and can be used as an inter-

lock for other operations.

### **Modulator Menu**

This function implements the modulation type firing modes such as fixed and variable period modulation.

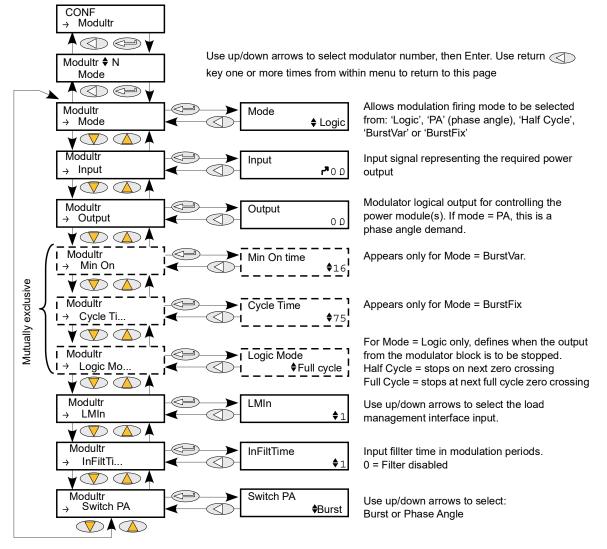


Figure 93 Modulator Menu

Mode	Select the required firing mode from "Logic', 'PA' (Phase angle) 'Half cycle', 'BurstVar' (Burst firing - minimum on time) or 'BurstFix' (Burst firing - cycle time).
Input	This is the value that the modulator is required to deliver.
Output	The output logic signal controlling the power module on and off times, normally wired to the input of the firing block. For Mode = Phase angle, this is a phase angle demand.
Min on Time	For Variable Period Modulation, this sets the minimum on time in supply voltage periods. At 50% demand from the modulator, Ton = Toff = Minimum on time, and Cycle time is 2 x Minimum on time = Modulation period. The minimum off time is equal to 'Min on time'.

Cycle Time	For Fixed Period Modulation, this is the cycle time in sup-
	ply voltage periods.

Logic Mode For Logic Firing Modulation, Half cycle sets firing stop to

the next zero crossing; Full cycle sets firing stop at the zero

crossing of the next full cycle.

LMIn Load Management Interface input. Defines a connection

from the modulator to a load management channel (if fit-

ted)

InFiltTime Modulator input filter time as a number of modulation peri-

ods. When set to zero, filter is disabled.

Switch PA Allows the user to impose Phase Angle firing, overriding

the configured Burst Mode as displayed in 'Mode', above.

### **Network Menu**

This identifies the type of electrical network to be controlled, and this, in turn defines how the network's electrical measurements are presented. The configuration is related to a power channel, not necessarily the Power Module number. For a network of four single-phase units, four network blocks are required; for two leg control of a three-phase network, two network blocks are used; for three-phase control of a single network, one Network block is required.

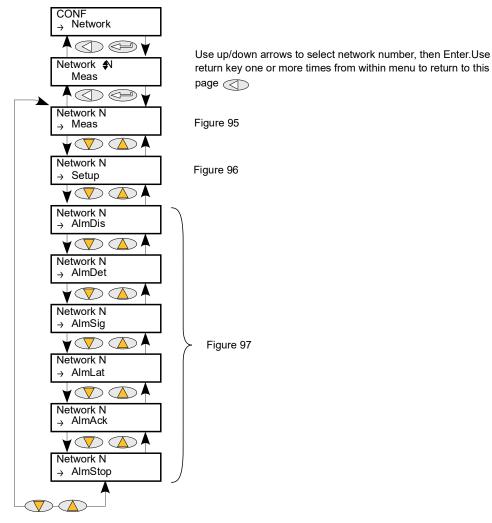


Figure 94 Network Menu

#### Meas Submenu

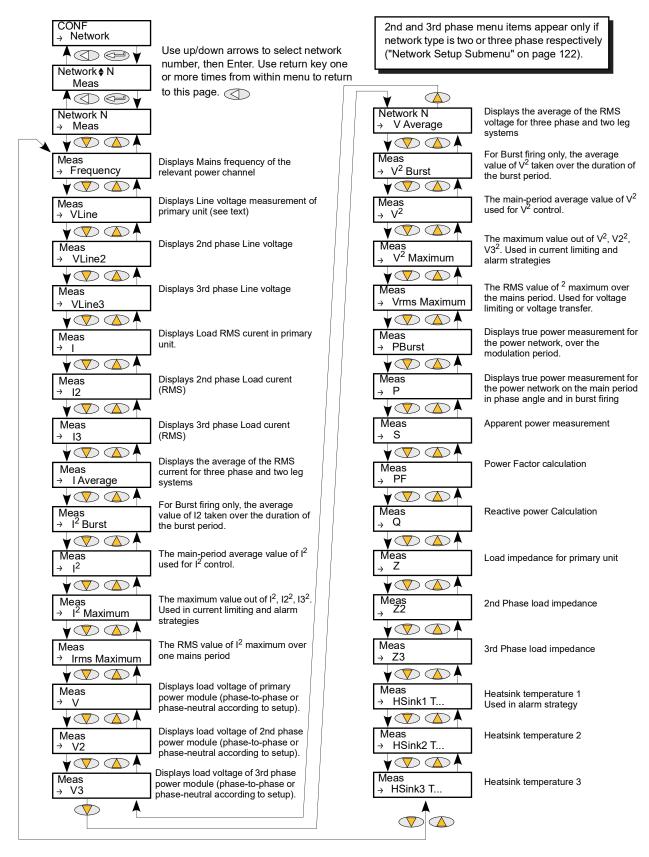


Figure 95 Meas Submenu Layout

This submenu presents power network measurements, according to the network type. All available measurements are listed below, but which values actually appear depends on the network configuration.

Frequency Displays the calculated frequency of the supply voltage of the power channel associated with this network.

Supply voltage measurement on the primary power mod-

Vline

ule. Displays line to neutral except in three phase or two-leg control when line to line voltage is displayed. Vline2, Vline 3 As for VLine but for power modules two and three respectively Load Irms measurement on primary power module. The time base measurement is the main period in Phase Angle, and the modulation period in Burst Mode. As for I, above, but for power modules two and three re-12, 13 spectively. I Average This is the average of the current in the three channels of a three-phase system. This is relevant only for 3 phase and 2 leg controlled systems:- I<sub>RMS</sub>Avg = (I<sub>RMS</sub> + I<sub>RMS</sub>2 +  $I_{RMS}3)/3$ I<sup>2</sup> Burst Average square value of load current in burst firing. The average Isg in burst firing, the average is taken over the duration of the burst period. This is typically used for monitoring and alarming over the burst period. l2 Square value of load current in Burst Firing and over the main period in phase angle. Typically used for lsq control. In 3-phase or 2-leg control this is the average of the three network squared currents, calculated as  $I^2 = (I^2 Phase1 +$ I<sup>2</sup>Phase2 + I<sup>2</sup>Phase3)/3 In a three-phase network, this is the maximum of I<sup>2</sup>, I2<sup>2</sup> I<sup>2</sup>Maxim... and 13<sup>2</sup>. Used in current limiting in three-phase networks, and in alarm strategies. Irms Max... The RMS value of  $I^2$ Max measured over the mains period. Typically used for current limiting or current transfer in 3-phase networks, in phase angle mode. V Load Vrms measurement on primary power module of this channel of power control. Displays load to neutral (or to second line) except in three phases star or delta load coupling displays load1 to load2 voltage The time base measurement is the main period in phase angle, and the modulation period in burst mode. V2, V3 As for V, but for 2nd and 3rd Power Modules respectively. V Average The average of the voltage in the three channels of a three-phase system. This is relevant only for three-phase and two-leg power networks VRMSAvg = (VRMS + VRMS2 + VRMS3)/3 V<sup>2</sup> Burst Average square value of load voltage in burst firing taken over the duration of the burst period. Typically used for monitoring and alarm strategies over the burst period.  $V^2$ Square value of load voltage in Burst Firing and on main period in Phase Angle Firing. Typically used for Vsq control. In three-phase or Two-leg control this is the average of the three network squared voltages, calculated as Vsq = (VsqPhase1 + VsqPhase2 + VsqPhase3)/3 V<sup>2</sup> Maxim The maximum squared voltage out of VsqPhase1, VsqPhase2, VsqPhase3. Typically used for voltage limiting in three-phase networks and for alarm strategies. The RMS value of V<sup>2</sup>Max measured over the mains peri-Vrms Max... od. Typically used for voltage limiting or transfer in 3-phase networks, in phase angle mode. P Burst Measurement of true power on the network. This is calculated over the modulation period in Burst Firing mode. Typically used for monitoring, alarm strategy and in Load management (if option fitted).

Р	True power measurement in Burst Firing and over the modulation period in Phase Angle firing. Typically used for true power control
S	Apparent power measurement. For phase angle firing S=Vline x I <sub>RMS</sub> ; for burst firing S=V <sub>RMS</sub> x I <sub>RMS</sub>
PF	Calculation of power factor. Defined as Power Factor = True Power / Apparent Power. In phase angle this is PF=P/S; in burst firing PF = PBurst/S = Cos\( \phi(Load) \)
Q	Calculation of the reactive power defined in phase angle as Q = $\sqrt{S^2 - P^2}$ , or in burst firing as Q = . $\sqrt{S^2 - P_{Burst}^2}$
Z	Load impedance measurement on first power module, defined as:- Z=Vrms/lrms. Measurement uses line current (not leg current) and load voltage, so value may not be accurate for some multi-phase wiring configurations.
Z2, Z3	Load impedance measurement on the 2nd and 3rd phase of the network respectively.
HSink1(2)(3) T	Heat sink temperatures. Used to protect the Power Modules from overheating.

**Network Setup Submenu** 

This displays the setup of the network and associated functions.

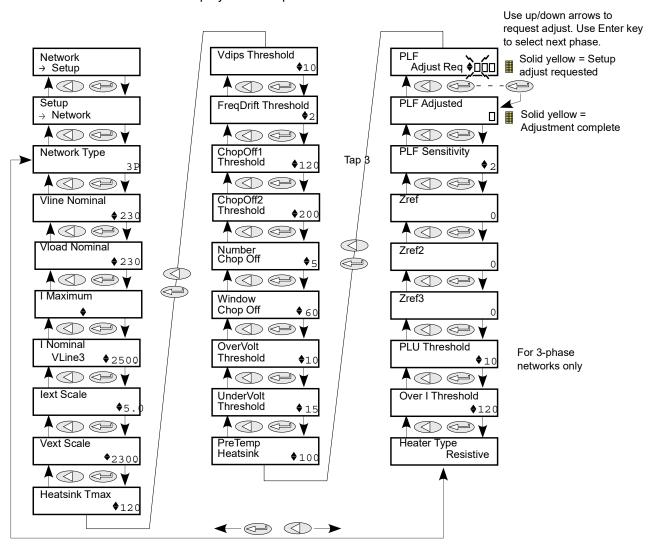


Figure 96 Network Setup Submenu

Network Type Displays the Network type as Three phase, Single phase or Two-leg control.

Vline Nominal Line voltage nominal value required to calibrate the stack.

> This is the line to line voltage except for Single phase to Neutral and Three-phase Star with Neutral networks, when

the measurement is line to neutral.

VloadNominal Nominal Load voltage, required to calibrate the Power

> Module. This is the same as the Vline Nominal except when external feedback is used e.g. from a transformer secondary. In which case this value must be correctly set

to scale the measurement.

**IMaximum** Indicates the maximum current of the stack (50, 100, 160,

250, 400, 500, 630). For transformer-driven loads, select

EXT100 etc. and configure lextScale appropriately.

**INominal** Nominal current supplied by the Power Module. This value

> is used for calibrating the current measurement in the stack. This is limited by IMaximum, which imposes the limit of the physical channels unless external feedback is con-

figured, in which case the limit is 4000A.

External current scale adjustment for use when IMaximum

is set to external feedback. If an external current transformer is fitted, lextScale should be set to the normal primary current of the current transformer. If an external current transformer is not being used, lextScale should be

set to 5A.

External voltage scale adjustment for use when IMaximum

is set to external feedback. If an external transformer is fitted, VextScale should be set to the nominal primary voltage of the external transformer. If an external transformer

is not fitted, VextScale should be set to Vnominal.

Displays the maximum permissible temperature of the

heat sink. This forms an alarm threshold for the 'Heat sink

Overtemperature' alarm.

Voltage dips threshold. This is a percentage difference

(relative to Vline Nominal) between 2 consecutive half cycles. Each half cycle voltage measurement is integrated and at the end of each half cycle the last 2 voltage integrals

are compared.

FreqDriftThold The supply frequency is checked every half cycle, and if

the percentage change between 1/2 cycles exceeds this threshold value, a Mains Frequency System Alarm is generated. The threshold may be set to a maximum of 5% to

cater for the effects of heavily inductive networks.

ChopOff1Threshold The 'Chop-off' alarm becomes active if load current ex-

ceeds this threshold for more than five seconds. Threshold

values lie between 100% and 150% of INominal.

ChopOff2Threshold The Chop-off' alarm also becomes active if this second

current threshold is exceeded more than a predefined number of times (NumberChopOff) within a predefined time period (WindowChopOff). Current threshold values lie

between 100% to 350% of INominal.

NumberChopOff can be set to between one and 16 (inclusive) and any value between 1 and 65535 seconds may be

configured for WindowChopOff.

Each time an over-current is detected, the unit stops firing, raises a 'Chop-off' condition alarm, waits for about 100ms and then restarts firing using an up-going safety ramp. The 'Chop-off' condition alarm is cleared if the unit restarts suc-

cessfully after an over-current event.

If NumberChopOff is reached within the WindowChopOff period, the unit stops firing and remains stopped. A chop-off state alarm is triggered, making it necessary for

**lextScale** 

VextScale

HeatsinkTmax

VdipsThreshold

the user to acknowledge the chop-off state alarm before

restarting firing.

NumberChopOff Displays the number of 'Chop Off' events that can occur

within the WindowChopOff period before a 'Chop Off' alarm is enabled. Used only with ChopOff2Threshold.

WindowChopOff Displays the 'Chop Off' window in seconds. Used only with

ChopOff2Threshold.

OverVoltThreshold The threshold for detecting an over voltage condition as a

percentage of VLineNominal. If Vline rises above the threshold a Mains Voltage Alarm is set (DetMainsVolt-

Fault).

UnderVoltThreshold This is the threshold for detecting an under voltage condi-

tion as a percentage of VLineNominal. If Vline falls below the threshold a Mains Voltage Alarm occurs (DetMains-

VoltFault).

PreTempHeatsink The threshold for the heat sink temperature pre-alarm in

degrees C, which, if exceeded, causes a pre-temperature

(DetPreTemp) alarm to occur.

PLFAdjustReq Partial load failure adjustment request. To make the Partial

Load Failure (PLF) alarm operate correctly, the normal steady-state condition must be known to the instrument. This is done by activating the PLF Adjust Req, for each Network, once the controlled process has achieved a steady state condition. This causes a load impedance measurement to be made which is used as a reference for detecting a partial load failure. If the load impedance measurement is successful PLFAdjusted (below) is set. The measurement fails if the load voltage (V) is below 30% of (VNominal) or the current (I) is below 30% of (INominal). The PLF alarm becomes active as setup in 'PLF Sensitivi-

ty', below.

PLFAdjusted Partial load failure adjusted acknowledge. Indicates that

the user requested a PLF adjustment and that the adjust-

ment was successful.

PLFSensitivity Partial load failure sensitivity. This defines how sensitive

the partial load failure detection is to be as the ratio between the load impedance for a PLFadjusted load and the current impedance measurement. For example for a load of N parallel, identical elements, if the PLF Sensitivity (s) is set to 2, then a PLF alarm will occur if N/2, or more elements are broken (i.e. open circuit). If PLF Sensitivity is set to 3, then a PLF alarm occurs if N/3 or more elements are broken. If (N/s) is non-integer, then the sensitivity is round-

E.G. if the N = 6 and s= 4, then the alarm is triggered if 2 or more elements are broken.

Reference load impedance for phase 1, as measured

when PLF adjust is requested.

Zref2, Zref3 As for Zref but for phases 2 and 3 respectively.

PLUthreshold Partial load unbalance threshold. Defines the threshold for

detecting a partial load unbalance condition. This is only applicable to a three phase system. This occurs when the difference between the maximum and minimum current of the three phase system exceeds the threshold as a percentage of Inominal. The alarm can be detected between

5 and 50%.

OverlThreshold The threshold for detecting an over current condition as a

percentage of INominal. If I is above the threshold a Mains

Current Alarm occurs (DetoverCurrent).

Zref

124

HeaterType Shows the type of heater used in the load as: 'Resistive',

'SWIR' (Short wave infra-red), 'CSi' (Silicon Carbide), 'Mo-

Si2' (Molybdenum Disilicide).

MaxInom Fix limit to I Nominal

#### **Partial Load Failure Calculations**

The PLF alarm detects a static increase in load impedance (low temperature coefficient loads and Short wave Infra Red heaters can be controlled by this feature).

The alarm works by comparing the reference load impedance with the actual measured load impedance. The user must set the reference impedance (by requesting PLFAdjust) and the partial load failure sensitivity.

#### Notes:

- 1. All elements are assumed to be identical and connected in parallel
- For three phase loads, the impedance reference can be set only if the load is balanced.

The impedance comparison takes place over a mains cycle (in phase angle firing) or over the burst period (for burst and logic firing). For star with neutral (4S) or open delta (6D) networks, the measured load voltage and current correspond directly to the load parameters. In these configurations the partial load failure sensitivity is limited only by measurement accuracy and element impedance inaccuracies. For star without neutral (3S) and closed delta (3D) configurations, equivalent impedances are calculated using line-to-line voltages and line currents, this resulting in minor inaccuracies.

Special care must be taken for short burst firing modes (e.g. IHC or single cycle firing) if no phase rotation is applied for Burst start (suppression of DC component in current transformers) and for logic firing without DC component suppression feature, for the same reason.

A minimum voltage of 30% of nominal adjusted value (Vload nominal) and a minimum of 30% of INominal must be applied to the load, as below these thresholds, no partial load failure detection or impedance reference setting takes place.

#### **Network Alarms**

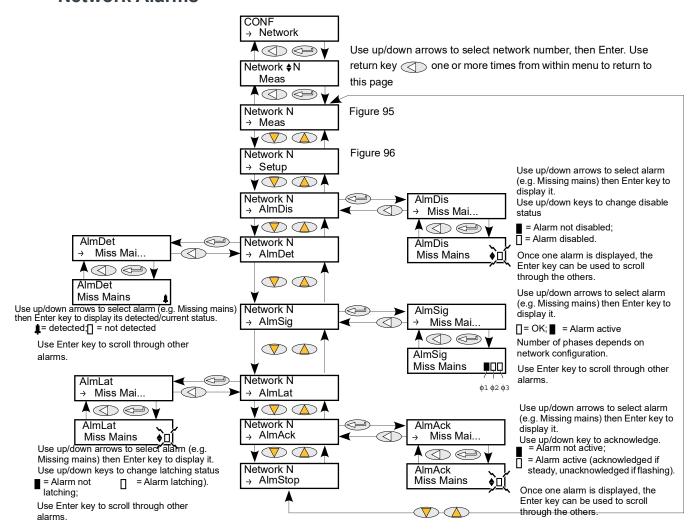


Figure 97 Network Alarm Menu

#### **Network Almdis Submenu**

This menu allows individual network block alarms (listed below) to be enabled/disabled. "Alarms" on page 241 gives more details of these alarms.

MissMains	Missing Mains
Thyr SC	Thyristor Short Circuit
Open Thyr	Thyristor open Circuit
Fuse Blown	Fuse Blown
Over Temp	Over Temperature
Volt Dips	Mains Voltage Dips
Freq Fault	Frequency Fault
PB 24V	Power Board 24V Failure
TLF	Total Load Failure
Chop Off	Chop Off
PLF	Partial Load Failure
PLU	Partial Load Unbalance
VoltFault	Mains Voltage Fault
PreTemp	Pre-Temperature
Over I	Over Current

#### **Network Almdet Submenu**

As for 'Alarm Disable', above, but this Alarm detect submenu indicates whether any of the network alarms has been detected and is currently active.

### **Network Almsig Submenu**

These displays show whether an alarm has occurred and also contains latching information. The relevant AlarmSig parameter is used when wiring (to a relay for example). The alarm list is as given above.

#### **Network Almiat Submenu**

As for 'Alarm Disable', above, but this Alarm Latch submenu allows each individual network block alarm to be defined as latching or non-latching.

#### Network Almack Submenu

As for 'Alarm Disable', above, but this Alarm Acknowledge submenu allows each individual network block alarm to be acknowledged. Once acknowledged, the associated signalling parameter is cleared. Acknowledge parameters automatically clear after being written.

**Note:** Alarms may not be acknowledged whilst the trigger source is still active.

#### **Network Almstop Submenu**

Allows each individual alarm type to be configured to stop the related power module from firing. Activated by the related Signalling parameter. The alarm list is as given above.

# PLM (Station and Network LM Parameters) Menu

This menu appears only if the Predictive Load Management option is fitted and enabled.

LoadMng provides an interface to the parameters of the station and of the load management network. A 'station' is defined as a Driver module and associated power modules. Figure 98 gives an overview of the menu.

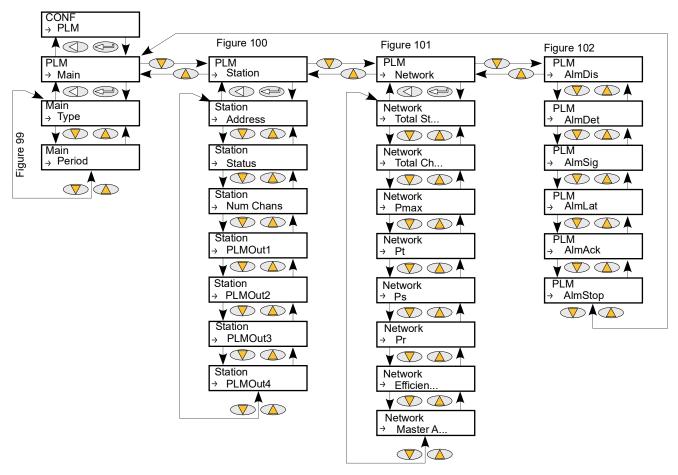


Figure 98 Predictive Load Management Menu overview

#### Main

This presents the main Load Management parameters.

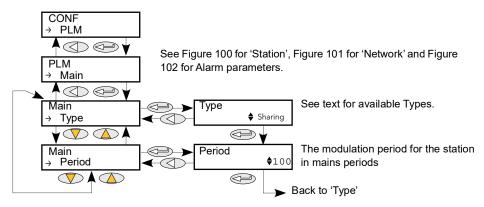


Figure 99 Load Management 'Main' Menu

Type Configures the type of Predictive Load Management as fol-

lows:

No: No Load Management. Load Management is

disabled.

Sharing: Load Sharing. Used to control the total power

demand over time by distributing the conduc-

tion periods of the various units.

IncrT1: Incremental Type 1. Several loads receive a

common setpoint. Only one channel is modulated by the duty cycle, the others being at 0%

or 100% demand. Total power distributed = setpoint value.

IncrT2: Incremental Type 2. A number of loads receive

a common setpoint. Only the first channel is modulated, by the duty cycle, the others being at 0% or 100% demand. Total power distribut-

ed = setpoint value.

Rotlncr: Rotating Incremental. Provides incremental

control of between two and 64 channels, operating from a single input. Each channel modulates with an identical mark-space ratio determined by the power demand signal, but each channel is separated from adjacent out-

puts by the selected time base.

Distrib: Distributed Control. This mode provides con-

trol of between two and 64 channels from an equal number of independent inputs. Each channel modulates with a mark-space ratio proportional to its input signal, but with the switching of adjacent inputs distributed over

the selected time cycle.

DistIncr: Distributed and Incremental control. This pro-

vides control of between two and eight groups of loads. A total of 64 channels is available, and these may be freely distributed among the groups, as long as each group has at least one channel. Each group has a single power demand input and operates as in Incremental Type 2 mode, with the first channel modulating to maintain the selected power level. Switching time within groups is distributed over the se-

lected time cycle.

RotDisInc: Rotating Distributed and Incremental control.

This provides control of between two and eight groups of loads. A total of 64 channels is available, and these may be freely distributed among the groups, as long as each group has at least one channel. Each group has a single power demand input and operates in Rotating Incremental mode with all channels modulating at an identical rate. The distributed nature of this mode ensures that the instant of switch on

in each group is distributed over the cycle time.

129

This configures the modulation period for the station, in mains periods between 50 and 1000. The accuracy of control is related to the modulation period - to increase accu-

racy the period must be increased.

The master unit imposes its modulation period on all slaves. It is recommended that all slave units are configured to use the same period as the master, so that should the master lose control, then the slave that replaces it as master will use the same value and thus achieve the same accuracy of control. (The new master imposes its own value at the next power cycle.)

# Predictive Load Management 'Station' Menu

This menu contains all parameters related to Load Management Station configuration, where a 'station' consists of a Driver Module together wit hits associated Power modules.

Period

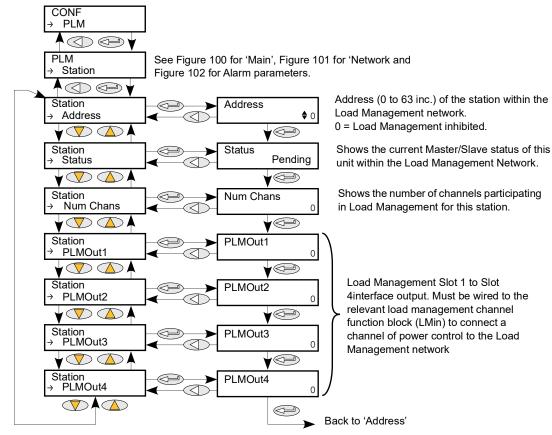


Figure 100 Load Management 'Station' Menu.

Address This is the address of the unit on the Load Management

(PLM) network, between 0 and 63 inclusive. An address of 0 disables Load Management. The lowest address on the

network normally becomes the master.

Status Indicates the current master/slave status for thisunit, as

follows:

Pending: The election of the master is not yet complete

IsMAster: The unit is athe PLM network master

IsSlave: This unit is a slave

Duplicate address:Two or more units have the same address. Units with identical addresses are excluded from

the load management process.

Num Chans This shows the number of channels participating in load management for this unit. Automatically configured from

the load management 'wiring' for this unit.

Maximum number of channels = 64

Maximum number of channels per station = 4

Maximum number of stations = 64 Maximum number of groups = 8.

Example1: There can be a maximum of 16, four-channel units (i.e 64 channels).

Example 2: There can be a maximum of 63 three-phase

units, (i.e. 63 channels).

PLMOut 1 to 4 These outputs must be wired to the load management channel function block PLMChan1 (to 4).PLMIn in order to connect a power control channel to the load management

network.

# **Predictive Load Management 'Network' Menu**

This includes load management network parameters.

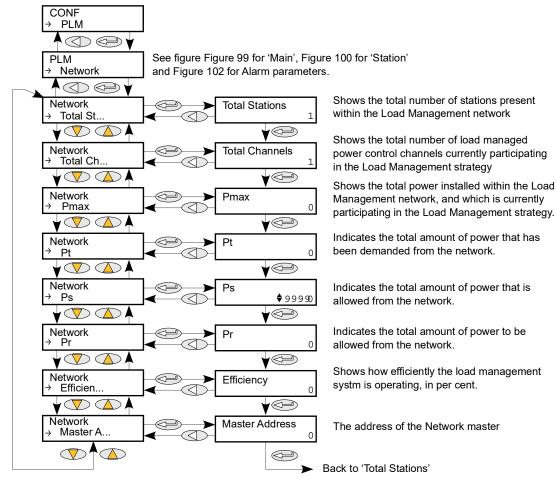


Figure 101 Load Management 'Network' Menu

•	-
Total Stations	Shows the number of units within the Load Management (PLM) network.
Total Channels	Shows the number of load management power channels currently participating in the Load Management strategy.
Pmax	This indicates the total amount of power installed and participating in the Load Management strategy, within the PLM network
Pt	The sum of the power demanded by all channels taking part in the Load Management strategy.
Ps	Configured by the user to restrict the power demanded from the network, according to the Load Shedding strategy (setting Ps> Pmax disables Load Shedding).
	Example: If the total installed power is 2.5MW but the user wishes to restrict the delivered power to be within a tariff band of 2MW, then Ps should be set to 2MW. Load shedding will shed power across the network to keep the total demand to less than 2MW.
Pr	This shows the total amount of power that has been delivered through the network. The value can be greater than Ps depending on the shedability factors of all channels.
Efficiency	Shows, in percent, how efficient the load management strategy is.
	Calculated from: Efficiency % = {Pmax - (Ptmax - Pt- min)}/Pmax, where Ptmax and Ptmin are the peak maxi- mum and minimum values for total power during the

modulation period, respectively.

Master Address

Displays the address of the elected master on the Load Management network. For the master unit, this address is the same as the address set up in 'Station' described above. For a slave unit, the two addresses are different.

# **Predictive Load Management 'Alarm' Menus**

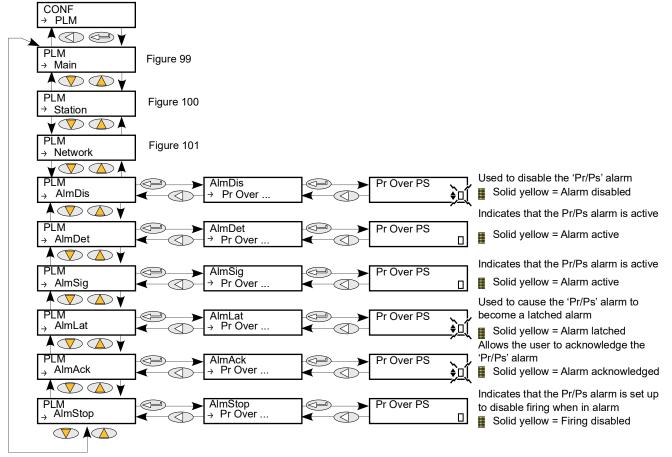


Figure 102 Load Management 'Alarm' Menus

AlmDis	Allows the user to disable the Pr/Ps alarm.
AlmDet	Indicates to the user that Actual power is greater than the requested maximum. Caused by an incorrect calibration of one or more channels, or possibly as a result of load shedding.
AlmSig	Indicates whether or not Pr/Ps alarm has been detected. If action is to be taken as a result of this alarm's going active, then it is AlmSig that should be wired.
AlmLat	Allows the user to set Pr/Ps alarm to be a latching type.
AlmAck	Allows the user to acknowledge the Pr/Ps alarm.
AlmStop	Allows the Pr/Ps alarm to be configured to disable firing whilst active.

# PLMChan (Load Management Option Interface) Menu

This menu appears only if the Predictive Load Management option is fitted and enabled.

PLMChan provides an interface to the channel parameters needed for Load Management. See also "PLM (Station and Network LM Parameters) Menu" on page 127 and "Predictive Load Management Option" on page 219.

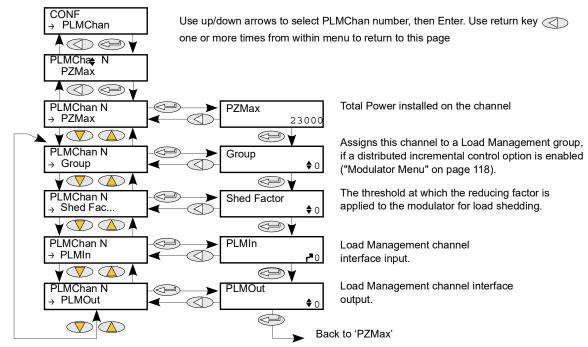


Figure 103 Predictive Load Management Option Interface Menu

PZMax	Total power installed on the channel. Calculated using the rating of the unit.
Group	The group (max. = 8) in which the channel operates. This item appears only if one of the distributed incremental load management options has been selected ("PLM (Station and Network LM Parameters) Menu" on page 127).
ShedFactor	The threshold at which the reducing factor is applied to the modulator for load shedding. This item appears only if Load sharing is enabled ("PLM (Station and Network LM Parameters) Menu" on page 127)
LMIn	The Load Management channel interface input. Must be wired to one of the LMOut connections on the LoadMng function block in order to connect this channel to the network.
LMOut	The Load Management channel interface output. Typically

wired to the LMin parameter on the modulator block.

# Load Tap Changer (LTC) Option

This option offers automatic load tap selection for primary or secondary windings, as configured. Instruments with this option must also be fitted with the remote current/voltage feedback option.

Figure 104 shows the overall menu structure. Figure 105 shows the Alarm menu, and Figure 106 to Figure 111 show some typical application wiring.

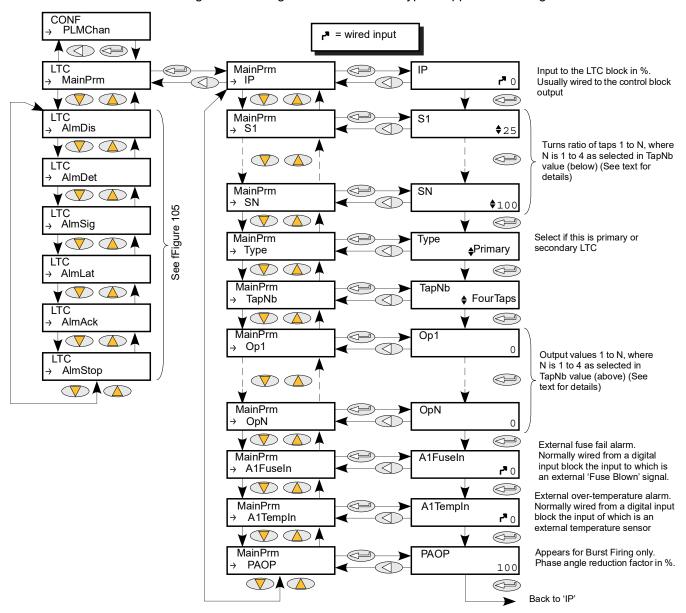


Figure 104 Load Tap Changer (LTC) Menu Overview

#### **MainPrm Parameters**

IP The % demand normally wired from a control block output Turns ratio of transformer tap 1 in percent. If Type = Primary, where  $N_{T1T2}$  is the number of turns between Tap1 and Tap 2, and  $N_{Tot}$  is the total number of turns. For the primary, T1 is the highest tap. If Type = Secondary, where  $N_{T1}$  is the number of turns in Tap 1 (lowest tap) and  $N_{Tot}$  is the total number of turns.

Turns ratio of transformer tap 2 in percent. If Type = Primary, where  $N_{T1T3}$  is the number of turns between Tap1 and Tap 3, and NTot is the total number of turns. For the primary, T1 is the highest tap. If Type = Secondary, where  $N_{T2}$  is the number of turns in Tap 2 and  $N_{Tot}$  is the total number of turns.

If the number of taps is 2, S2 = 100%

Turns ratio of transformer tap 3 in percent. If Type = Primary, where  $N_{T1T4}$  is the number of turns between Tap1 and Tap 4, and  $N_{Tot}$  is the total number of turns. For the prima-

S3

S2

134

ry, T1 is the highest tap. If Type = Secondary, where  $N_{T3}$  is the number of turns in Tap 3 and  $N_{Tot}$  is the total number

of turns

If the number of taps is 3, S3 = 100%

S4 Turns ratio of transformer tap 4 in percent. Value always

100%

Type Select Load tap Changer type as 'Primary' or 'Secondary'.

TapNb The number of transformer taps from two to four.

OpN The value of outputs 1 to N of the block, where N is the

number of transformer taps as selected in 'TapNb' above. This output is normally wired to the input of a Firing output block (for phase-angle firing) or to a Modulator block (Mod-

ulation mode firing).

A1FuseIn External Fuse Fail Alarm input. Wired to the output of a dig-

ital input, the input of which is wired to an external Fuse

Blown transducer.

A1TempIn External over Temperature Alarm input. Wired to the out-

put of a digital input, the input of which is wired to an exter-

nal Over Temperature transducer.

PAOP Phase Angle Reduction (This display appears only for

Burst Firing applications.). If the value of this parameter is less than 100% a burst of phase angle is delivered. Used,

for example, to perform threshold current limiting,

### LTC Alarm

Displays the alarm configuration for the Load Tap Changer external Fuse Blown and over Temperature alarms. Figure 105 shows the menu.

The parameters listed below apply to both alarms individually.

#### **Parameters**

AlmDis Allows the user to disable the alarm.

AlmDet Indicates to the user whether or not the alarm is active.

AlmSig Indicates to the user whether or not the alarm is active. If

action is to be taken as a result of this alarm's going active,

then it is AlmSig that should be wired.

AlmLat Allows the user to set the alarm to be a latching type.

AlmAck Allows the user to acknowledge the alarm.

AlmStop Not configurable (see note).

**Note:** These two alarms are considered to be system alarms and automatically inhibit thyristor operation (firing) whilst active. 'AlmStop' cannot be set to 'No'.

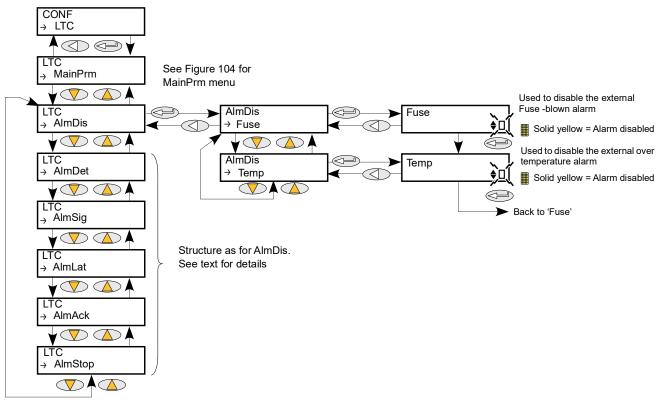


Figure 105 Load Tap Changer Alarm Menu

# **LTC Application Wiring**

The following illustrations, give typical wiring information for a number of different Load Tap Change applications. The diagrams are meant for guidance only and are not definitive.

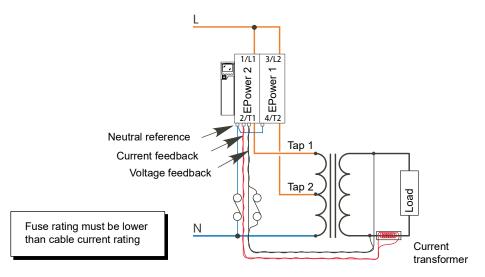


Figure 106 Two-Tap Primary

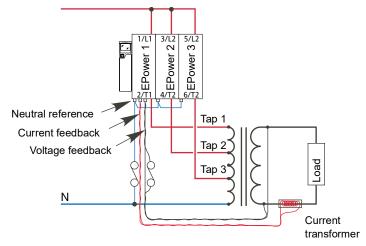


Figure 107 Three-Tap Primary

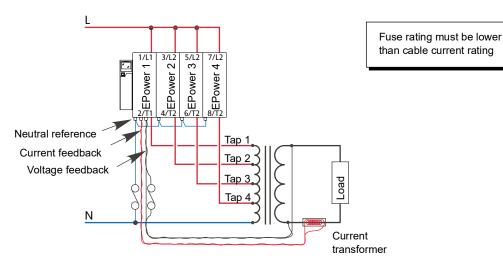


Figure 108 Four-Tap Primary


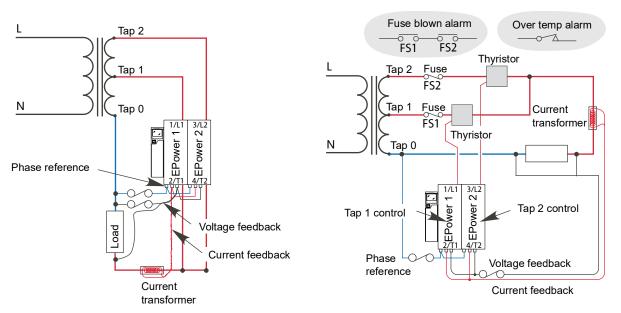


Figure 109 Two-Tap Secondary (Alternative Layouts)

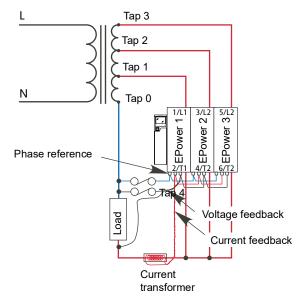

Fuse rating must be lower than cable current rating

Figure 110 Three-Tap Secondary

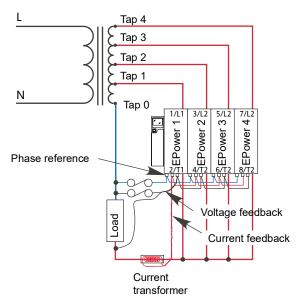


Figure 111 Four-Tap Secondary

# Relay Menu

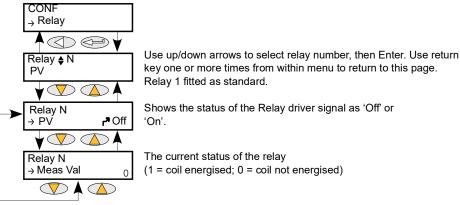


Figure 112 Relay Menu

# **Relay Parameters**

PV This shows the status of the input to the relay as either 'On'

(True) or 'Off' (False).

Meas Val Shows the current state of the relay coil. 1 = energised;

0 = de-energised, where 'energised' is 'off' and 'de-ener-

gised' is 'on'.

See Figure 9 and Figure 10 for relay pinout details.

## **SetProv Menu**

This feature supplies 1 local and two remote setpoints.

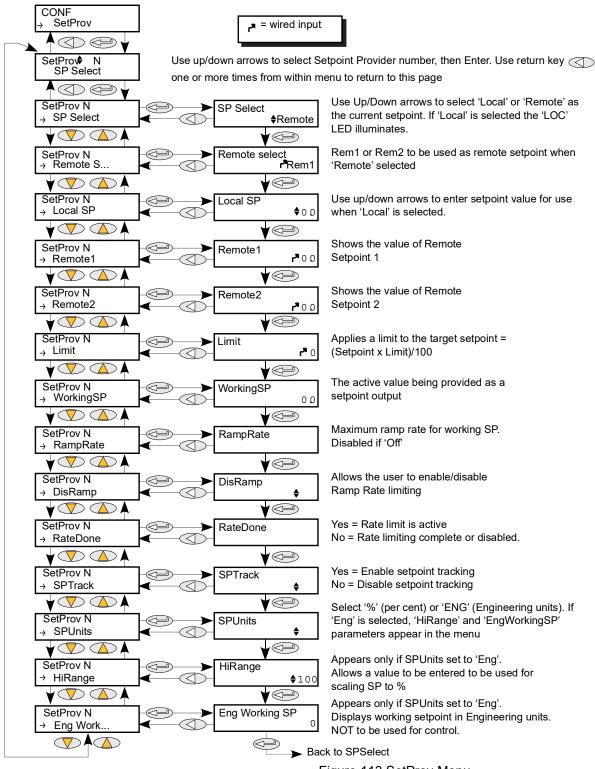


Figure 113 SetProv Menu

### **Setpoint Provider Parameters**

SPSelect Allows the user to select between Remote or Local as the

setpoint source. If 'Local' is selected, the 'LOC' LED illumi-

nates.

Remote Select Allows the user to select which of two Remote setpoints to

use when SPSelect (above) is set to 'Remote'.

LocalSP Allows entry of a setpoint value to be used when SPSelect

(above) is set to 'Local'.

Remote1 (2) The alternative Remote setpoints which may be chosen in

'Remote Select' (above).

Limit Allows the target setpoint to be scaled such that 'scaled

target SP' = (target SP x limit)/100. Thus, when limit = 100,

the setpoint is unscaled.

WorkingSP The active value being provided as a setpoint output. This

might be the current target setpoint or the rate-limited tar-

get setpoint.

RampRate This applies a rate limit to the working setpoint, until the

target setpoint has been achieved. The 'RateDone' parameter (below) is set to 'No' for the duration of the rate limiting, then set to 'yes' when rate limiting is complete.

DisRamp This is an external control used to enable/disable ramp

rate limiting and to write the target setpoint directly to the working setpoint. The 'RateDone' parameter (below) is set

to 'Yes' when DisRamp is 'Yes'.

RateDone Set to 'No' if ramp rate limiting (above) is in operation. Oth-

erwise set to 'Yes'.

SPTrack If enabled ('Yes') the local setpoint tracks the remote set-

points, so that if the setpoint is subsequently set to 'Local', the local setpoint will be the same as the last known value of the remote setpoint, thus ensuring a bumpless transfer.

SPUnits Allows the user to select % or 'Eng' (Engineering units) as

Setpoint units. If 'Eng' is selected, 'HiRange' and 'Eng

workingSP' appear at the user interface.

HiRange Appears only if SP units set to 'Eng'. This value is the high

range of the setpoint used to scale the setpoint into % of

High Range.

EngWorkingSP Appears only if SP units set to 'Eng'. This value is an indi-

cation of the working setpoint in Engineering units. The parameter must not be used for control because control loops

accept setpoints only as % values.

140

### Timer Menu

HA179769 Issue 16

# **Timer Configuration**

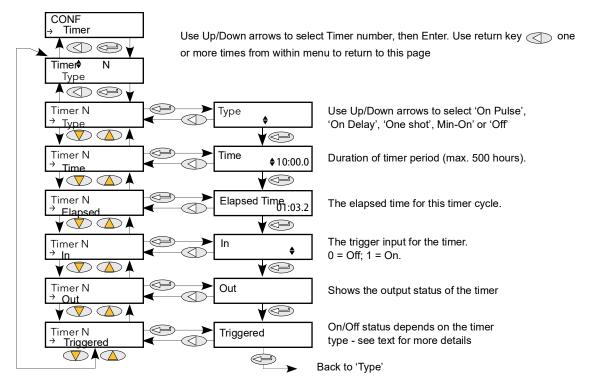


Figure 114 Timer Menu

Allows the user to select the required timer type as follows:

Timer is off Off

On Pulse The timer output switches on when 'In' changes from Off to On, and it remains on until the time period ('Time' - see below) has elapsed. If the input is re-triggered before 'Time' has elapsed, the timer re-starts. 'Triggered' (below)

follows the state of the output.

On delay After the input changes from Off to On, the timer output remains off until the time period defined in 'Time' (below) has elapsed. Once this period has elapsed, if the input is still on, the output switches on and remains on until the input goes Off.

> Elapsed time is set to zero when the input goes off.

'Triggered' follows the state of the input.

One Shot If the input is On, then as soon as a value is entered into the 'Time' parameter (below) the output goes on, and remains on until the Time period has elapsed, or the input goes off. If the input is off, the output is set off and the time count-down is inhibited until input goes on

> 'Triggered' goes On as soon as the time value is edited, and remains on until the output goes

The Time value may be edited whilst active.

141

Type

Once the time period has elapsed, the Time value must be re-edited in order to re-start the timer

Min On

The output remains 'On' as long as the Input is on, plus the 'Time' period (below). If the input returns to the on state before the time period has elapsed, the elapsed time is reset to zero, so that the full time period is added to the On period when the input switches off again. 'Triggered' is On whilst the elapsed time is greater than zero.

Time Allows the user to set a time period for use as described in

'Type' above. Initially, the display is in the form Minutes:seconds.10ths of seconds, but as the input value increases the format changes first to Hours:Mins:Secs, then to Hrs:Mins. (Holding the up arrow key continuously operated causes the speed at which the value increments to increase. Minimum entry is 0.1 seconds; maximum is

500 hours.

Elapsed Time Shows how much of the time period has passed so far.

The timer trigger input. The function of this input varies ac-

cording to timer type, as described above.

Out Shows the timer on/off status.

Trigger Function depends on timer type, as described above.

## **Timer Examples**

In

Figure 6.26.2 shows some timing examples for the different types of timer available.


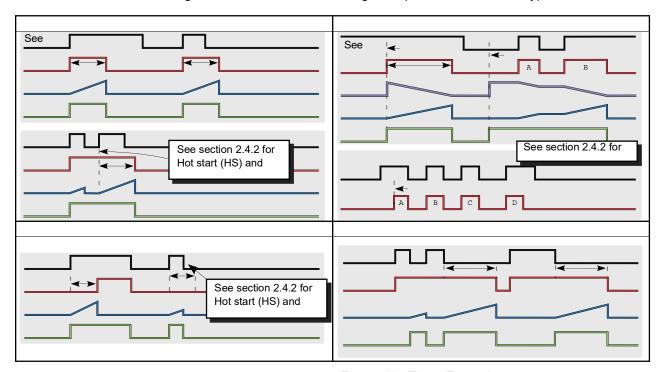


Figure 115 Timer Examples

### **Totaliser Menu**

The totaliser is an instrument function used to calculate a total quantity by integrating a flow rate input over time. The maximum value of the totaliser is +/- 99999. The outputs from a totaliser are its integrated value, and an alarm state.

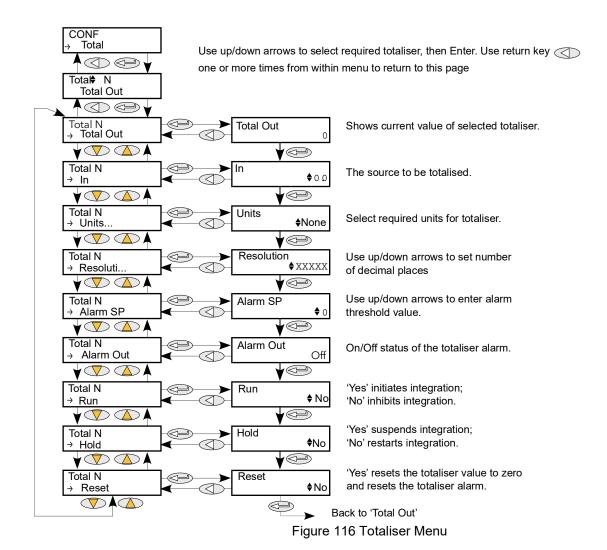

Total Out The integrated total between -10<sup>10</sup> and +10<sup>10</sup>

 $(i.e. \pm 10,000,000,000)$ 

In The parameter to be totalised.

Units Units of the totalised measurement.

Resolution Set the number of decimal places for the totaliser value.

AlarmSP Totaliser alarm setpoint. This threshold is applied to the to-

talised measurement. When totalising positive values, a positive AlarmSP value must be entered; the totaliser alarm being triggered when the totaliser value reaches or exceeds AlarmSP. When totalising negative values, a negative value must be entered; the totaliser alarm being triggered when the totaliser value reaches or goes more

negative than AlarmSP. If set to zero, the alarm is disa-

bled.

AlarmOut The on/off status of the totaliser alarm.

Run Yes initiates integration; No inhibits integration. Hold Yes suspends integration; No restarts integration.

Reset Yes resets the totaliser value to zero and resets the total-

iser alarm.

### **User Value Menu**

This provides storage for a user-defined constant. Typical uses are as a source for a maths function, or as storage for values written over the communications link.

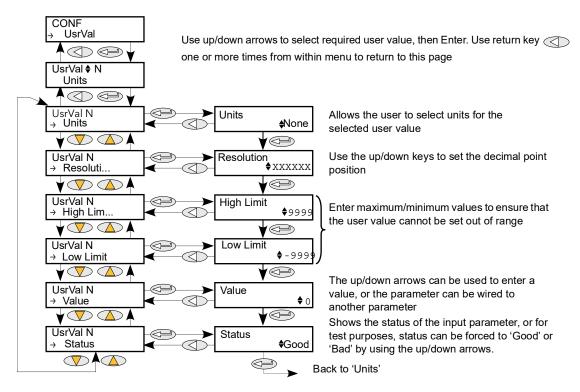


Figure 117 User Value Menu

Units Allows the selection of User value units.

Resolution Set the number of decimal places for the User Value value. High/Low Limit Allows the user to set limits to prevent the user value from

being set out-of-bounds.

Value Allows the user to enter a value, or the parameter is wired

to a suitable parameter.

Status If this parameter is wired, it can be used to force a Good or

Bad status onto the User Value for test purposes (e.g. fall-

back strategy).

If not wired, it reflects the status of the Value input if this

input is wired.

## **Using ITools**

iTools software running on a PC allows quick and easy access to the configuration of the unit. The parameters used are the same as those described in "Engineer and Configuration Level Menus" on page 77 above, with the addition of various diagnostic parameters.

iTools also gives the user the ability to create software wiring between function blocks, something that is not possible from the operator interface. Such wiring is carried out using the Graphical wiring Editor feature.

In addition to the guidance given here, there are two on-line Help systems available within iTools: Parameter help and iTools help. Parameter help is accessed by clicking on 'Help' in the toolbar (opens the complete parameter help system), by right-clicking on a parameter and selecting 'Parameter Help' from the resulting context menu, or by clicking on the Help menu and selecting 'Device Help'. iTools help is accessed by clicking on the Help menu, and selecting 'Contents'. iTools help is also available in manual format under part number HA028838, either as a physical manual or as a pdf file.





Figure 118 Help Access

### **ITools Connection**

The following descriptions assume that iTools software has been correctly installed on the pc.

### **Serial Communications**

Once the serial link has been correctly wired, start iTools and click on the Scan toolbar icon. The iTools scanning feature initiates a search for compatible instruments, and a 'thumbnail' of each one found appears in the 'Panel Views' pane, normally located at the bottom of the screen. The scan can be stopped at any time by clicking on the Scan toolbar icon a second time.

**Note:** "Scanning for Instruments" on page 149 contains more details of the scan process.

### **Ethernet (Modbus TCP) Communications**

#### **Notes:**

 This section is only applicable for Modbus/TCP single port communication module. Modbus/TCP dual port communication module does not support iTools connection.

2. The following description is based on windows XP. Windows 'Vista' is similar.

It is first necessary to determine the IP address of the unit, as described under 'Comms Menu' in page 86. This can be done from either the Engineer menu or the Config menu.

Once the Ethernet link has been correctly installed, carry out the following actions at the pc:

- 1. Click on 'Start'
- 2. Click on 'Control Panel'. (If Control Panel opens in 'Category View' select 'Classic View' instead.)
- 3. Double-click on 'iTools'.
- 4. Click on the TCP/IP tab in the Registry settings configuration.
- 5. Click on Add... The 'New TCP/IP Port' dialogue box opens.
- 6. Type-in a name for the port, then click Add...
- 7. Type the IP address of the unit in the 'Edit Host' box which appears. Click OK.
- 8. Check the details in the 'New TCP/IP Port' box, then click on 'OK'.
- 9. Click on 'OK' in the 'Registry settings' box to confirm the new port.

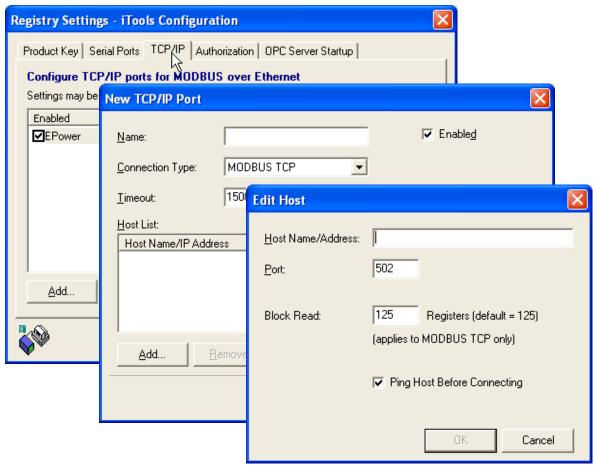


Figure 119 Adding a New Ethernet Port

To check that the pc can now communicate with the instrument, Click 'Start'. 'All Programs', 'Accessories', 'Command Prompt'.

When the Command Prompt box appears, type in:

Ping<Space>IP1.IP2.IP3.IP4<Enter> (where IP1 to IP4 are the IP address of the instrument).

If the Ethernet link to the instrument is operating correctly, the 'successful' reply arrives. Otherwise, the 'failed' reply arrives, in which case, the Ethernet link, IP address, and pc port details should be verified.

```
Microsoft Windows XP [Uersion 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\richardne\Ping 123.456.789.0

Pinging 123.456.789.0 with 32 bytes of data:

Reply from 123.456.789.0: bytes=32 time=1ms ITL=64
Ping statistics for 123.456.789.0:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Documents and Settings\richardne\
```

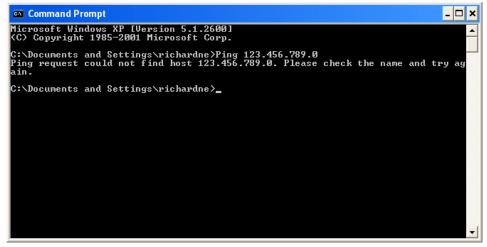


Figure 120 Command prompt 'Ping' screens (typical)

Once the Ethernet link to the instrument has been verified, iTools can be started (or shut down and restarted), and the Scan toolbar icon used, to 'find' the instrument. The scan can be stopped at any time by clicking on the Scan icon a second time.



See "Scanning for Instruments" on page 149 for more details of the scan procedure.

### **Direct Connection**

This section describes how to connect a pc directly to a Driver Module which, for this purpose, must be fitted with the Ethernet communications option.

**Note:** This section is only applicable for Modbus/TCP single port communication modules.

Modbus/TCP dual port communication module does not support an iTools connection.

### Wiring

Connection is made from the Ethernet connector on the front of the Driver Module to an Ethernet RJ45 connector, usually located at the rear of the pc. The cable should be a 'cross-over' cable type.



Once wired correctly, and powered up, it is necessary to enter a suitable IP address and subnet mask into the Comms configuration of the Driver Module. This information can be found as follows:

- 1. At the pc, click 'Start'. 'All Programs', 'Accessories', 'Command Prompt'
- When the Command Prompt box appears, type in: IPConfig<Enter>
   The response is a display, such as that shown below, giving the IP address and Subnet mask of the pc.

Choose an address in the range covered by these two values.

A subnet mask element of 255 means that the equivalent element of the IP address must be used unchanged. A subnet mask element of 0 means that the equivalent element of the IP address may take any value between 1 and 255 (0 is not allowed). In the example below, the range of IP addresses which may be chosen for the Driver Module is 123.456.789.2 to 123.456.789.255. (123.456.789.0 is not allowed and 123.456.789.1 is the same as the pc's address, and may therefore not be used.)

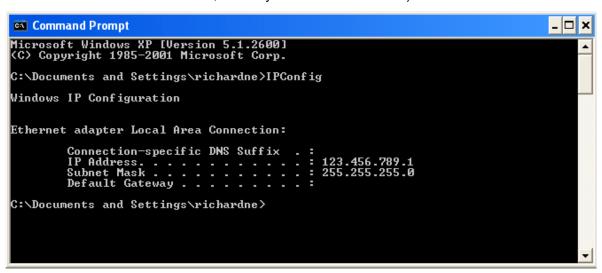


Figure 121 IP Config Command

- 3. In Comms configuration ("Comms Menu" on page 86) enter the selected IP address and the subnet mask (as it appears in the command prompt window) in the relevant parts of the configuration menu.
- 4. Check communications by 'pinging' as described in "Ethernet (Modbus TCP) Communications" on page 145 above.

Once the link to the instrument has been verified, iTools can be started (or shut down and re-started), and the Scan toolbar icon used, to 'find' the instrument. The scan can be stopped at any time by clicking on the Scan icon a second time. See "Scanning for Instruments" on page 149 for more details of the scan procedure.

#### Subnet Masks and IP addresses. Subnet Masks are most readily understood when looked at in binary format. For example, a mask of 255.255.240.10 can be re-written as: 11111111.11111111.11110000.00001010. In such a case, IP addresses 11111111.1111111.11111xxxx.xxxx1x1x would be recognised (where x can be either a 0 or a 1). Subnet mask 1 1 1 1 1 1 1 1 4 4 0 IP addresses (Binary) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 x x x x x x x x x 1 x IP addresses (decimal) 255 240 to 255 10, 11, 14, 15, 26, 27, 30, 31, 42, 43, 46, 47 etc.

### **Scanning for Instruments**

Clicking on the 'Scan' toolbar icon causes a dialogue box (shown below) to appear. This allows the user to define a search range of addresses.

#### **Notes:**

- The relevant instrument address is that entered in the "Comms Menu" on page 86 'Address' item, and it can take any value between 1 and 254 inclusive, as long as it is unique to the comms link.
- 2. The default selection (Scan all device addresses...) will detect any instrument on the serial link, which has a valid address.

As the search progresses, any instruments detected by the scan appear as thumbnails (faceplates) in the 'Panel Views' area, normally located at the bottom of the iTools screen. (options/Panel Views position allows this area to be moved to the top of the window, or the Close icon can be used to close it. Once closed it can be re-opened by clicking on 'Panel Views' in the 'View' menu.)



Figure 122 Scan Range Enable

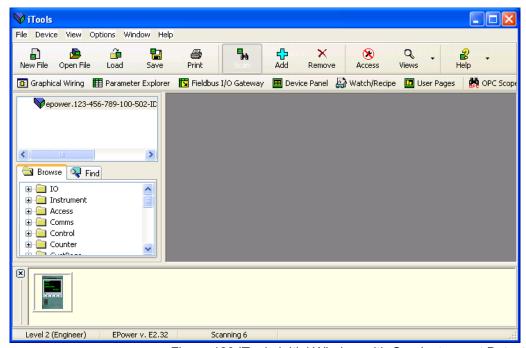


Figure 123 ITools Initial Window with One Instrument Detected

### **Graphical Wiring Editor**

Clicking on the Graphical wiring Editor toolbar icon causes the Graphical wiring window for the current instrument configuration to open. Initially, this reflects the function block wiring as set in the "QuickStart" on page 63.


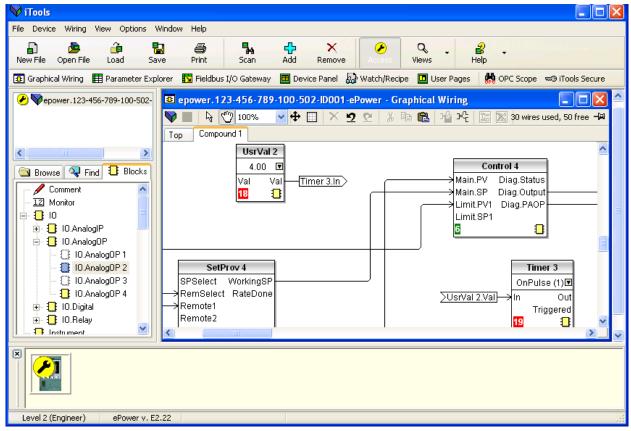


Figure 124 Graphical Wiring Editor

The graphical wiring editor allows:

- 1. Function blocks, notes, comments etc. to be 'drag and dropped' into the wiring diagram from the tree list (left pane).
- 2. Parameters to be wired to one another by clicking on the output, the clicking on the required input.
- 3. Viewing and/or editing of parameter values by right-clicking on a function block and selecting 'Function Block View'.
- The user to select parameter lists and to switch between parameter and wiring editors.
- 5. Completed wiring to be downloaded to the instrument (function blocks and wiring items with dashed outlines are new, or have been edited since the last download).

### **Toolbar**

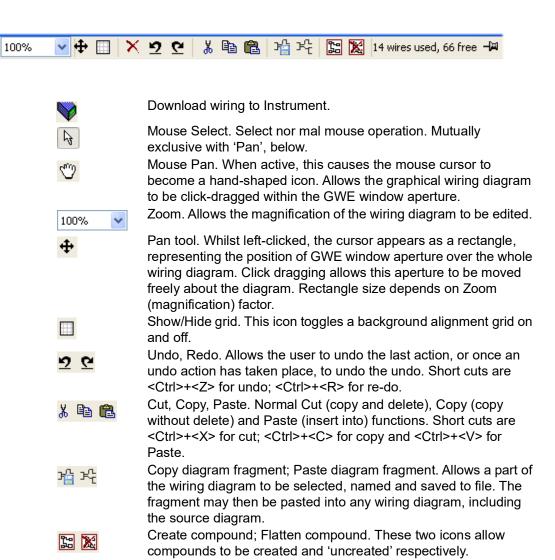

### Wiring Editor Operating Details

#### **Component Selection**

Single wires are shown with boxes at 'corners' when selected. When more than one wire is selected, as part of a group, the wire colour changes to magenta. All other items have a dashed line drawn round them when selected.

Clicking on a single item selects it. An Item can be added to the selection by holding down the control key (ctrl) whilst clicking on the item. (A selected item can be deselected in the same way.) If a block is selected, then all its associated wires are also selected.

Alternatively, the mouse can be click-dragged on the background to create a 'rubber band' round the relevant area; anything within this area being selected when the mouse is released.

<Ctrl>+<A> selects all items on the active diagram.

#### **Block Execution Order**

The order in which the blocks are executed by the instrument depends on the way in which they are wired. The order is automatically worked out, for each 'Task' (or network block) so that the blocks use the most recent data. Each block displays its place in its sequence in a coloured block in the bottom left-hand corner (Figure 125). The colour of the block represents the Task within which the block is running: red = task one, green = task two, black = task 3 and blue = task 4.

#### **Function Blocks**


A Function Block is an algorithm which may be wired to and from other function blocks to make a control strategy. Each function block has inputs and outputs. Any parameter may be wired from, but only parameters that are alterable in Operator Mode may we wired to. A function block includes any parameters that are needed to configure or operate the algorithm. The inputs and outputs which are considered to be of most use are always shown. In most cases all of these need to be wired before the block can perform a useful task.

If a function block is not faded in the tree (left hand pane) it can be dragged onto the diagram. The block can be dragged around the diagram using the mouse.

A Maths block is shown below as an example. When block type information is alterable (as in this case) click on the box with the down arrow in it to display a dialogue box allowing the value to be edited.

If it is required to wire from a parameter, which is not shown as a recommended output, click on the 'Click to Select Output' icon in the bottom right hand corner to display a full list of parameters in the block (Figure 127, below). Click on one of these to start a wire.



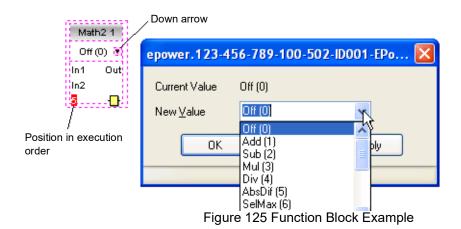

#### **Function Block context menu**

Right click in the function block to display the context menu.

Function block View

Displays a list of parameters associated with the function block. 'Hidden' parameters can be displayed by de-selecting 'Hide Parameters and Lists when not Relevant' in the Options menu 'Parameter availability Settings...' item.

Re-Route wires

Redraws all wiring associated with the function block.

Re-Route Input wires

Redraws all Input wiring associated with the function block.

DIOCK.

Re-Route Output wires

Redraws all Output wiring associated with the function block.


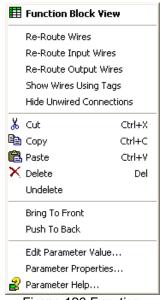


Figure 126 Function Block Context Menu

#### **Show Wires Using Tags**

Wires are not drawn, but their Start and End destinations are indicated by tags instead. Reduces wire 'clutter' in diagrams, where source and destination are widely separated.

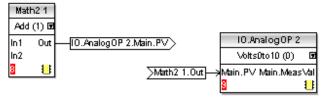

**Hide Unwired Connections** 

Displays only those parameters which are wired.

Cut

Allows one or more selected items to be moved to the Clipboard ready for pasting into another diagram or compound, or for use in a Watch window, or OPC scope. The original items are greyed out, and function blocks and wires are shown dashed until next download, after which they are removed from the diagram. Short cut = <ctrl>+<X>. Cut operations carried out since the last download can be 'undone' by using the 'Undo' toolbar icon, by selecting 'Undelete' or by using the short cut <ctrl>+<Z>.


Copy

Allows one or more selected items to be copied to the Clipboard ready for pasting into another diagram or compound, or for use in a Watch window, or OPC scope. The original items remain in the current wiring diagram. Short cut = <ctrl>+<C>. If items are pasted to the same diagram from which they were copied, the items will be replicated with different block instances. Should this result in more instances of a block than are available, an error display appears showing details of which items couldn't be copied.

Paste

Copies items from the Clipboard to the current wiring diagram. <Ctrl>+<V>. If items are pasted to the same diagram from which they were copied, the items will be replicated with different block instances. Should this result in more in-

stances of a block than are available, a Paste error display appears showing details of which items couldn't be copied.

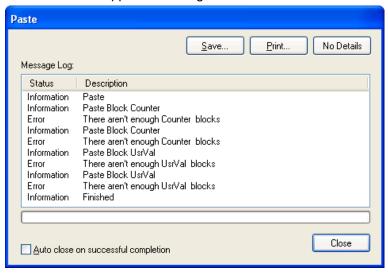

Delete Marks all selected items for deletion. Such items are

shown dashed until next download, after which they are re-

moved from the diagram. Short cut = <Del>.

Undelete Reverses 'Delete' and 'Cut' operations carried out on se-

lected item(s) since the last download.

Bring To Front Brings selected items to the front of the diagram.

Push To back Sends the selected items to the back of the diagram.

Edit Parameter Value...

This menu item is active if the cursor is hovering over an editable parameter. Selecting this menu item causes a pop-up window to appear, which allows the user to edit the parameter value.

parameter value.

Parameter Properties...

This menu item is active if the cursor is hovering over an editable parameter. Selecting this menu item causes a pop-up window to appear, which allows the user to view the parameter properties, and also, to view the parameter

Help (by clicking on the 'Help' tab.

Parameter Help... Produces Parameter Properties and Help information for

the selected function block or parameter, depending on the hover position of the cursor, when the right-click occurs.

•

154

#### Wires

### To make a wire

- Drag two (or more) blocks onto the diagram from the function block tree.
- 2. Start a wire by either clicking on a recommended output or clicking on the 'Click to Select output' icon at the bottom right corner of the block to bring up the connection dialogue, and clicking on the required parameter. Recommended connections are shown with a green plug symbol; other parameters which are available being shown in yellow. Clicking on the red button causes all parameters to be shown. To dismiss the connection dialogue either press the escape key on the keyboard, or click the cross at the bottom left of the dialogue box.

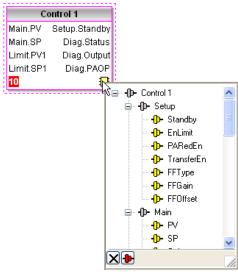


Figure 127 Output Selection Dialogue Box

- 3. Once the wire has started a dashed wire is drawn from the output to the current mouse position. To complete the wire click on the required destination parameter.
- 4. Wires remain dashed until they are downloaded

#### Routing wires

When a wire is placed it is auto-routed. The auto routing algorithm searches for a clear path between the two blocks. A wire can be auto-routed again using the context menus or by double clicking the wire. A wire segment can be edited manually by click-dragging. If the block to which it is connected is moved, the end of the wire moves with it, retaining as much of the path as possible.

If a wire is selected by clicking on it, it is drawn with small boxes on its corners.

### Wire Context Menu

Right click on a wire to display the wire block context menu:

Force Exec Break When wires form a loop, a

break point must be introduced, where the value written to the block comes from a source which was last executed during the previous cycle. A break is automatically placed by iTools, and appears in red. Force Exec Break allows the user to define where a break must be placed. Surplus breaks appear in black.

Task Break

Each Network block, and associated I/O blocks, wiring etc. represents a 'task', which is normally associated with a par-

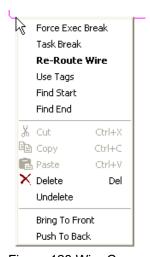


Figure 128 Wire Context Menu

ticular power phase (Network Block one is associated with phase one, Network Block two with phase two and so on). Different tasks are thus often synchronised with different phases. A task break ensures that for any wiring between

tasks, the timing is delayed as necessary to avoid phasing

problems. Task breaks appear in blue.

Re-Route wire Replaces the current wire route with a new route generat-

ed from scratch.

Use Tags Toggles between wire and tag mode between parameters.

Tag mode is useful for sources and destinations which are

widely separated.

Find Start Goes to the source of the wire.

Find End Goes to the destination of the wire.

Cut, Copy, Paste Not used in this context.

Delete Marks the wire for deletion. The wire is redrawn as a

dashed line (or dashed tags) until next download. Opera-

tion can be reversed until after next download.

Undelete Reverses the effect of the Delete operation up until the

next download, after which, Undelete is disabled.

Bring to Front Brings the wire to the front of the diagram.

Push to Back Sends the wire to the back of the diagram.

Wire Colours

Black Normal functioning wire

Red The wire is connected to a non-changeable parameter.

Values are rejected by the destination block.

Magenta A normal functioning wire is being hovered-over by the

mouse cursor.

Purple A red wire is being hovered-over by the mouse cursor.

Green New Wire (dashed green wire changes to solid black after

being downloaded.)

#### **Thick Wires**

When attempting to wire between blocks which are located in different tasks, if no task break is inserted, then all the affected wires are highlighted by being drawn with a much thicker line than usual. Thick wires still execute, but the results are unpredictable, as the unit cannot resolve the strategy.

#### Comments

Comments are added to a wiring diagram by click-dragging them from the Function Block tree onto the diagram. As soon as the mouse is released, a dialogue box opens to allow the comment text to be entered.

Carriage returns are used to control the width of the comment. Once text entry is complete, 'OK' causes the comment to appear on the diagram. There are no restrictions on the size of a comment. Comments are saved to the instrument along with the diagram layout information.

Comments can be linked to function blocks and wires by clicking on the chain icon at the bottom right-hand corner of the comment box and then clicking again on the required block or wire. A dashed line is drawn to the top of the block or to the selected wire segment (Figure 130).

**Note:** once the comment has been linked, the Chain icon disappears. It re-appears when the mouse cursor is hovered over the bottom right-hand corner of the comment box, as shown in Figure 130, below.

#### **Comment Context Menu**

Edit Opens the Comment dialogue box Edit to allow the comment text to be edited. Holink ፠ Unlink Deletes the current link from the Cut Ctrl+X 陷 Сору comment. Ctrl+C Paste Ctrl+V Cut Moves the comment to the Clip-× Delete board, ready to be pasted else-Del where. Short cut =  $\langle \text{ctrl} \rangle + \langle X \rangle$ . Undelete Figure 129 Com-Copy Copies the comment from the wirment Context ing diagram to the Clipboard, Menu ready to be pasted elsewhere. Short cut = <ctrl>+<C>. Paste Copies a comment from the Clipboard to the wiring diagram. Short cut = <ctrl>+<V>. Delete Marks the comment for deletion at next download. Undelete Undoes the Delete command if download has not taken

#### **Monitors**

Monitor points are added to a wiring diagram by click-dragging them from the Function Block tree onto the diagram. A monitor shows the current value (updated at the iTools parameter list update rate) of the parameter to which it is linked. By default the name of the parameter is shown. To hide the parameter name either double click on the monitor box or 'Show Names' in the context (right-click) menu can be used to toggle the parameter name on and off.

place since.

Monitors are linked to function blocks and wires by clicking on the chain icon at the bottom right-hand corner of the box and then clicking again on the required parameter. A dashed line is drawn to the top of the block or the selected wire segment.

**Note:** once the monitor has been linked, the Chain icon disappears. It re-appears when the mouse cursor is hovered over the bottom right-hand corner of the monitor box.

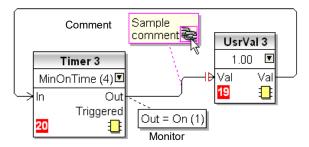


Figure 130 Comment and Monitor Appearance

#### **Monitor Context Menu**

Show names Toggles parameter names on

and off in the monitor box.

Show Names

Ctrl+X

Ctrl+C

Ctrl+V

Del

Unlink

ኤ Cut

陷 Сору

🖺 Paste

× Delete

Undelete

Bring To Front

Push To Back

🎎 Parameter Help...

Figure 131 Monitor

Context Menu

Unlink Deletes the current link from

the monitor.

Cut Moves the monitor to the Clip-

> board, ready to be pasted elsewhere. Short cut =

<ctrl>+<X>.

Copies the monitor from the Copy wiring diagram to the Clip-

board, ready to be pasted elsewhere. Short cut =

<ctrl>+<C>.

Paste Copies a monitor from the

Clipboard to the wiring dia-

gram. Short cut = <ctrl>+<V>. Marks the monitor for deletion at next download.

Undelete Undoes the Delete command if download has not taken

place since.

Bring to Front Moves the item to the 'top' layer of the diagram. Push to Back Moves the item to the 'bottom' layer of the diagram.

Parameter Help Shows parameter help for the item.

### Downloading 💜

Delete



When the wiring editor is opened the current wiring and diagram layout is read from the instrument. No changes are made to the instrument function block execution or wiring until the download button is pressed. Any changes made using the operator interface after the editor is opened are lost on download.

When a block is dropped onto the diagram, instrument parameters are changed to make the parameters for that block available. If changes are made and the editor is closed without saving them there is a delay while the editor clears these parameters.

During download, the wiring is written to the instrument which then calculates the block execution order and starts executing the blocks. The diagram layout including comments and monitors is then written into instrument flash memory along with the current editor settings. When the editor is reopened, the diagram is shown positioned as it was when it was last downloaded.

#### Colours

Items on the diagram are coloured as follows:

Red Items which totally or partially obscure other items and

> items which are totally or partially obscured by other items. Wires that are connected to unalterable or non-available parameters. Execution breaks. Block execution orders for

Task 1.

Blue Non-available parameters in function blocks. Block execu-

tion orders for Task 4. Task breaks.

Green Items added to the diagram since last download are shown

as green dashed lines. Block execution orders for Task 2.

All selected items, or any item over which the cursor is hov-Magenta

Purple Red wires when being hovered over by the mouse cursor. Black All items added to the diagram before the last download.

Block execution orders for Task 3. Redundant execution

breaks. Monitor and comment text.

### **Diagram Context Menu**

Cut Active only when the right

click occurs within the bounding rectangle which appears when more than one item is selected. Moves the selection off the diagram to the Clipboard. Short cut =

<ctrl>+<X>.

Copy As for 'Cut', but the selec-

tion is copied, leaving the original on the diagram.

Short cut = <ctrl>+<C>.

Paste Copies the contents of the

Clipboard to the diagram. Short cut = <ctrl>+<V>.

Re-Route wires Reroutes all selected

wires. If no wires are selected, all wires are

re-routed.

Align Tops Aligns the tops of all

blocks in the selected ar-

ea.

Align Lefts Aligns the left edges of all blocks in the selected area.

Space Evenly Spaces selected items such that their top left corners are

spaced evenly across the width of the diagram. Click on the item which is to be the left-most item, then <ctrl>+<left click> the remaining items in the order in which they are to

ኤ Cut

Copy

🖺 Paste

🗙 Delete

Re-Route Wires

Align Tops

Align Lefts

Undelete

Select All

Rename

Centre

路 Create Compound

Copy Graphic

Save Graphic...

Copy Fragment To File...

Paste Fragment From File...

Figure 132 Dia-

gram Context

Space Evenly

Ctrl+X

Ctrl+C

Ctrl+V

appear.

Delete Marks the item for deletion at next download time.

Can be 'Undeleted' up until download occurs.

Undelete Reverses the action of 'Delete' on the selected item.

Select All Selects all items on the current diagram.

Create Compound Active only when the right click occurs, in the top level dia-

gram, within the bounding rectangle which appears when more than one item is selected. Creates a new wiring dia-

gram as described in 'Compound', below.

Rename Allows a new name to entered for the current wiring dia-

gram. This name appears in the relevant tab.

Copy Graphic Copies the selected items (or the whole diagram if no

items are selected) to the clipboard as a Windows metafile, suitable for pasting into a documentation application. Wiring entering/leaving the selection (if any) are drawn in tag

mode.

Save Graphic... As for 'Copy Graphic' above, but saves to a user-specified

file location instead of the clipboard.

Copy Fragment To File...

Copies selected items to a user-named file in folder 'My iTools Wiring Fragments' located in 'My Documents'.

Paste Fragment From File

Allows the user to select a stored fragment for inclusion in

the wiring diagram.

Centre Places the display window at the centre of the selected

items. If 'Select All' has previously been clicked-on, then the display widow is placed over the centre of the diagram.

### Compounds


Compounds are used to simplify the top level wiring diagram, by allowing the placing of any number of function blocks within one 'box', the inputs and outputs of which operate in the same way as those of a normal function block.

Each time a compound is created, a new tab appears at the top of the wiring diagram. Initially compounds and their tabs are named 'Compound 1', 'Compound 2', etc. but they can be renamed by right clicking either on the compound in the top level diagram, or anywhere within an open Compound, selecting 'Rename' and typing in the required text string (16 characters max.).

Compounds cannot contain other compounds (i.e. they can be created only in the top level diagram).

### Compound creation

- 1. Empty compounds are created within the top level diagram by clicking on the 'Create Compound' toolbar icon.
- Compounds can also be created by highlighting one or more function blocks in the top level diagram and then clicking on the 'Create Compound' toolbar icon. The highlighted items are moved from the top level diagram into a new compound.

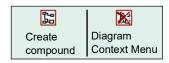

- Compounds are 'uncreated' (flattened), by highlighting the relevant item in the
  top level menu and then clicking on the 'Flatten Compound' toolbar icon. All the
  items previously contained within the compound appear on the top level diagram.
- 4. Wiring between top level and compound parameters is carried out by clicking on the source parameter, then clicking on the compound (or the compound tab) and then clicking on the destination parameter. Wiring from a compound parameter to a top level parameter or from compound to compound is carried out in similar manner.
- 5. Unused function blocks can be moved into compounds by dragging from the tree view. Existing blocks can be dragged from the top level diagram, or from another compound, onto the tab associated with the destination compound. Blocks are moved out of compounds to the top level diagram or to another compound in a similar way. Function blocks can also be 'cut and pasted'.
- Default compound names (e.g. 'Compound 2') are used only once, so that if, for example, Compounds 1 and 2 have been created, and Compound 2 is subsequently deleted, then the next compound to be created will be named 'Compound 3'.
- 7. Top level elements can be click-dragged into compounds.

#### **Tool Tips**

Hovering the cursor over the block displays 'tooltips' describing that part of the block beneath the cursor. For function block parameters the tooltip shows the parameter description, its OPC name, and, if downloaded, its value. Similar tooltips are shown when hovering over inputs, outputs and over many other items on the iTools screen.

A Function Block is enabled by dragging the block onto the diagram, wiring it, and finally downloading it to the instrument. Initially blocks and associated wires are drawn with dashed lines, and when in this state the parameter list for the block is enabled but the block is not executed by the instrument.

The block is added to the instrument function block execution list when the 'Download' icon is operated and the items are redrawn using solid lines.

If a block which has been downloaded is deleted, it is shown on the diagram in a ghosted form until the download button is pressed. (This is because it and any wires to/from it are still being executed in the instrument. On download it will be removed from the instrument execution list and the diagram.) A ghosted block can be 'undeleted' as described in 'Context menu', above.

When a dashed block is deleted it is removed immediately.

### **Parameter Explorer**

This view is displayed:

- 2. by double clicking on the relevant block in the tree pane or in the graphical wiring editor
- by selecting 'Function Block View' from the Function block context menu in the Graphical wiring Editor.
- 4. by selecting 'parameter Explorer from the 'View' menu
- by using the short cut <Alt>+<Enter>

In each case the function block parameters appear in the iTools window in tabular form, such as the example in Figure 133, below.

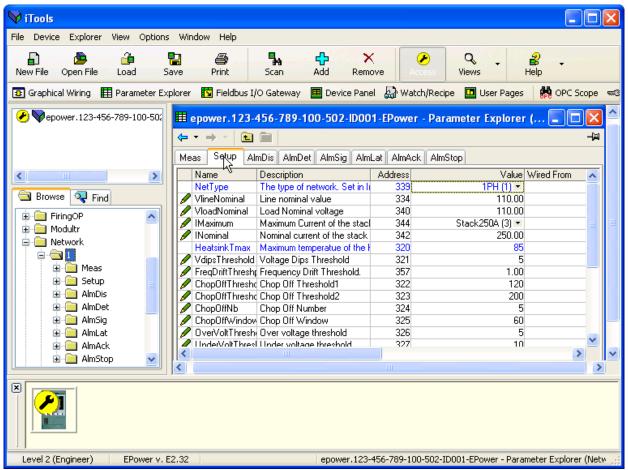


Figure 133 Parameter Table Example

The figure above shows the default table layout. Columns can be added/deleted from the view using the 'Columns' item of the Explorer or context menus (Figure 134).

Shift+F1

Address

Wired From

Limits

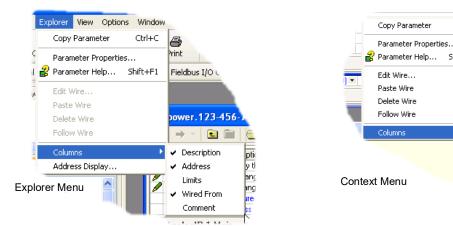


Figure 134 Column Enable/Disable

### Parameter Explorer Detail

Figure 135 shows a typical parameter table. This particular parameter has a number of subfolders associated with it, and each of these is represented by a 'tab' across the top of the table.

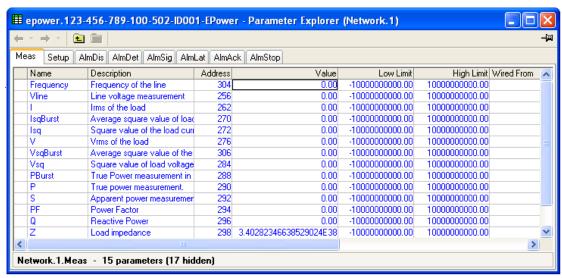


Figure 135 Typical Parameter Table

#### Notes:

- Parameters in blue are non-editable (Read only). In the example above all the
  parameters are read only. Read/write parameters are in black and have a 'pencil'
  symbol in the 'read/Write access column at the left edge of the table. A number of
  such items are shown in Figure 133, above.
- Columns. The default explorer window (Figure 133) contains the columns
   'Name', 'Description', 'Address', 'Value', and 'Wired From'. As can be seen from
   Figure 134, the columns to be displayed can be selected, to a certain extent,
   using either the 'Explorer' menu or the context menu. 'Limits' have been enabled
   for the example above.
- 3. Hidden Parameters. By default, iTools hides parameters which are considered irrelevant in the current context. Such hidden parameters can be shown in the table using the 'Parameter availability' settings item of the options menu (Figure 134). Such items are displayed with a shaded background.

4. The full pathname for the displayed parameter list is shown at the bottom left hand corner of the window.

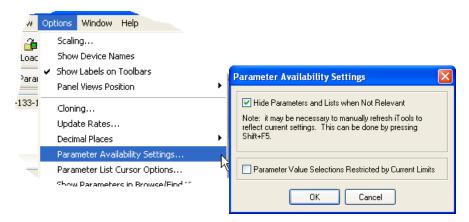


Figure 136 Show/Hide Parameters



Back to: and Forward to:. The parameter explorer contains a history buffer of up to 10 lists that have been browsed in the current instance of the window. The 'Back to: (list name)' and 'Forward to: (list name)' icons allow easy retracing or repeating of the parameter list view sequence.

If the mouse cursor is hovered over the tool icon, the name of the parameter list which will appear if the icon is clicked-on appears. Clicking on the arrow head displays a pick list of up to 10 previously visited lists which the user can select. Short cut = <ctrl>+<B> for 'Back to' or <ctrl>+<F> for 'Forward to'.

Go Up a Level, Go Down a Level. For nested parameters, these buttons allow the user to navigate 'vertically' between levels. Short cut = <ctrl>+<U> for 'Go Up a Level' or <ctrl>+<D> for 'Go Down a Level'



🖭 🖘



Push pin to give the window global scope. Clicking on this icon causes the current parameter list to be permanently displayed, even if another instrument becomes the 'current device'.

### **Explorer Tools**

A number of tool icons appear above the parameter list: Context Menu



Copy Parameter Copies the clicked-on parameter to the clipboard Parameter properties

Displays parameter properties for the clicked-on parameter

Parameter Help... Displays help information for the clicked-on parameter

Edit/Paste/Delete/Follow Wire

Not used in this application

Columns

Allows the user to enable/disable a number of parameter table columns (Figure 134).

### Fieldbus Gateway Fieldbus I/O Gateway

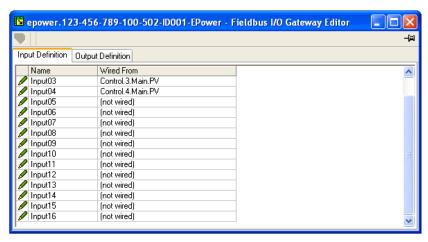


Figure 137 Typical Fieldbus Gateway Parameter List

A Profibus master may be required to work with slaves from different manufacturers and with different functions. Also, there are many parameters which are not required by the network master. Fieldbus Gateway allows the user to define which Input and output parameters are to be available over the Profibus link. The master may then map the selected device parameters into, for example, PLC input/output registers, or, in the case of a supervisory (SCADA) package, to a personal computer.

Values from each slave, (the 'Input Data'), are read by the master, which then runs a control program such as a ladder logic program. The program generates a set of values, (the 'Output Data') and loads them into a pre-defined set of registers for transmission to the slaves. This process is called an 'I/O data exchange' and is repeated continuously, to give a cyclical I/O data exchange.

As shown in Figure 137, above, there are two tabs within the editor, called 'Input definition' and 'Output definition'. 'Inputs' are values sent from the controller to the Profibus master. 'Outputs' are values received from the master and used by the controller, (e.g. set points written from the master).

**Note:** Values from Profibus over write changes made at the operator interface.

The procedure for selecting variables is the same for both input and output definition tabs:

- Double click the next available position, in the 'Wired From' column, in the input or output data table and select the variable to assign to it. A pop-up (Figure 138) provides a browser from which a list of parameters can be opened.
- 2. Double click the parameter to assign it to the input definition.
- Alternatively, drag and drop the parameter from the browser list.

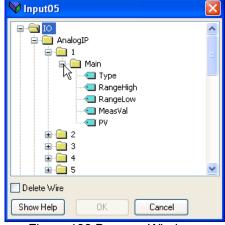


Figure 138 Browser Window

**Note:** Gaps may be left in the table if so desired.

To delete a wire, double click in the 'Wired From' column of the Input/Output Definition window to open the pop up browser window, Figure 7.5b. Tick the 'Delete Wire' box.

When all the required parameters have been added to the lists, notes of how many 'wired' entries are included in the input and output areas should be made as this information is needed when setting up the Profibus Master.


#### Notes:

- A maximum of 32 input and 16 output parameters may be set using the Gateway Editor.
- No checks are made that output variables are writeable, and if a read only variable is included in the output list any values sent to it will be ignored with no error indication.
- 3. For Modbus only:

As shown in figure 7.5b, 'Block Read' and 'Block Write' requests both access the same memory location (0C06), which 'points' to the relevant input definition table or output definition table according to whether the instruction is a read or a write. If a value is written to a parameter at a particular location in the output definition table, and the value of the parameter in the same location in the input definition table is then read, the read value is normally different from the write value because the parameter at a location in the input table is not usually the same as the parameter at that location in the output table (unless the same parameter is placed at the same location in both tables).

Once the changes have been made to the Input and Output definition lists, they must be downloaded to the controller unit. This is done (for both tables simultaneously) by clicking on the 'Update device Flash Memory' button on the top left of the Fieldbus Gateway Editor window. The controller performs a restart after this operation.



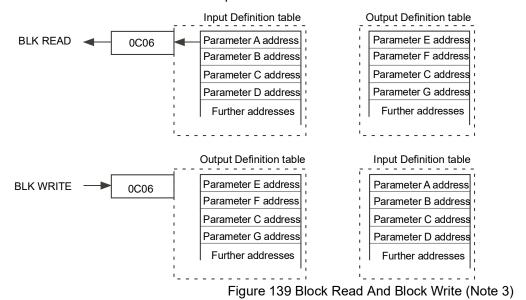

### **EE Checksum Fail Error**

### **NOTICE**

#### **EQUIPMENT PROTECTION**

For software versions prior to version 3 only.

The EEPROM, used to retain configuration parameters whilst power is off, has a lifetime of at least 100,000 writes. If the Fieldbus Gateway is configured to include such configuration parameters (see list below), then the lifetime of the EEPROM may be reduced. In this case an 'EE Checksum Fail Error' message appears at power up, and the Driver Module will fail to start, and will have to be replaced.

Failure to follow these instructions can result in equipment damage.

It is therefore recommended that an alternative method is used when communicating with these parameters. For example, rather than writing directly to the parameter Control.MainSP (saved in EEPROM) it is possible to use a SetProv block and write into SetProv.Remote 1 (not saved in EEPROM) instead.

For software version 3.0 onwards, no parameters modified via the I/O Gateway will be saved in EEPROM. Saving to EEPROM will be achieved by other wiring methods.

The following is a list of parameters which are stored in EEPROM, and which should therefore BE included in the IO Gateway.

Access.ClearMemory Access.ConfigurationPasscode Access.EngineerPasscode Access.IM Access.Keylock Access.QuickStartPasscode AlmDis.Alarm.ExternIn AlmDis.AnalogOP.OutputFault AlmDis.Control.ClosedLoop AlmDis.Control.Limitation AlmDis.Control.PVTransfer AlmDis.LTC.Fuse AlmDis.LTC.Temp AlmDis.Network.ChopOff AlmDis.Network.FreqFault AlmDis.Network.FuseBlown AlmDis.Network.MainsVoltFault AlmDis.Network.MissMains AlmDis.Network.NetworkDips AlmDis.Network.OpenThyr AlmDis.Network.OverCurrent AlmDis.Network.OverTemp AlmDis.Network.PB24VFail AlmDis.Network.PLF AlmDis.Network.PLU AlmDis.Network.PreTemp AlmDis.Network.ThyrSC AlmDis.Network.TLF AlmDis.PLM.PrOverPs AlmLat.Alarm.ExternIn AlmLat.AnalogOP.OutputFault AlmLat.Control.ClosedLoop AlmLat.Control.Limitation AlmLat.Control.PVTransfer AlmLat.LTC.Fuse AlmLat.LTC.Temp AlmLat.Network.FregFault AlmLat.Network.FuseBlown AlmLat.Network.MainsVoltFault AlmLat.Network.MissMains AlmLat.Network.NetworkDips AlmLat.Network.OverCurrent AlmLat.Network.OverTemp AlmLat.Network.PB24VFail AlmLat.Network.PLF AlmLat.Network.PLU AlmLat.Network.PreTemp AlmLat.Network.ThvrSC AlmLat.Network.TLF AlmLat.PLM.PrOverPs AlmStop.Alarm.ExternIn AlmStop.AnalogOP.OutputFault AlmStop.Control.ClosedLoop AlmStop.Network.MainsVoltFault AlmStop.Network.PLF AlmStop.Network.PLU

AlmStop.Network.TLF AnSwitch.Fallback AnSwitch.FallbackVal AnSwitch.HighLimit AnSwitch.In1 AnSwitch.In2 AnSwitch.In3 AnSwitch.In4 AnSwitch.In5 AnSwitch.In6 AnSwitch.In7 AnSwitch.In8 AnSwitch.LowLimit AnSwitch.Select Counter.Clock Counter.Direction Counter.Enable Counter. Target Digital.Invert Digital.Type Energy.AutoScaleUnits Energy.PulseLen Energy.PulseScale Energy.TotEnergyUnit Energy. Type Energy.UsrEnergyUnit Faultdet.GlobalDis FiringOP.DelayedTrigger FiringOP.LoadType FiringOP.SafetyRamp FiringOP.SoftStart FiringOP.SoftStop IPMonitor.AlarmDays IPMonitor.AlarmTime IPMonitor.In IPMonitor.Reset IPMonitor.Threshold Lgc2.FallbackType Lgc2.Hysteresis Lgc2.In1 Lgc2.In2 Lgc2.Invert Lgc2.Oper Lgc8.ln1 Lgc8.In2 Lgc8.In3 Lgc8.In4 Lgc8.In5 Lgc8.In6 Lgc8.In7 Lgc8.In8 Lgc8.InInvert Lgc8.NumIn Lgc8.Oper Lgc8.OutInvert Limit.Control.SP1 Limit.Control.SP2

Limit.Control.SP3

HA179769 Issue 16 167

AlmStop.Network.PreTemp

> Limit.Control.TI Main.AnalogIP.RangeHigh Main.AnalogIP.RangeLow Main.AnalogIP.Type Main.AnalogOP.RangeHigh Main.AnalogOP.RangeLow Main.AnalogOP.Type Main.Control.SP Main.Control.TI Main.Control.TransferSpan Main.PLM.Period Main.PLM.Type MainPrm.LTC.S1 MainPrm.LTC.S2 MainPrm.LTC.S3 MainPrm.LTC.TapNb MainPrm.LTC.Type Math2.Fallback

Math2.FallbackVal Math2.HighLimit Math2.In1 Math2.In1Mul Math2.In2 Math2.In2Mul Math2.LowLimit Math2.Oper

Math2.Resolution Math2.Select Math2.Units Modultr.CycleTime Modultr.LgcMode

Modultr.MinOnTime Modultr.Mode Modultr.SwitchPA Network.PLM.Ps

PLMChan

PLMChan.Group PLMChan.ShedFactor RmtPanel.Comms.Address RmtPanel.Comms.Baud

SetProv.DisRamp SetProv.HiRange SetProv.Limit SetProv.LocalSP SetProv.RampRate SetProv.RemSelect SetProv.SPSelect SetProv.SPTrack SetProv.SPUnits

Setup.Control.BleedScale Setup.Control.EnLimit Setup.Control.FFGain Setup.Control.FFOffset Setup.Control.FFType Setup.Control.NominalPV Setup.Control.TransferEn

Setup.Network.ChopOffNb Setup.Network.ChopOffThreshold1

Setup.Network.ChopOffThreshold2 Setup.Network.ChopOffwindow Setup.Network.FreqDriftThreshold

Setup.Network.HeaterType Setup.Network.HeatsinkPreTemp

Setup.Network.lextScale Setup.Network.IMaximum Setup.Network.INominal

Setup.Network.OverIThreshold Setup.Network.OverVoltThreshold

Setup.Network.PLFSensitivity Setup.Network.PLUthreshold

Setup.Network.UnderVoltThreshold

Setup.Network.VdipsThreshold Setup.Network.VextScale

Setup.Network.VlineNominal Setup.Network.VloadNominal Setup.Network.VMaximum

Station.PLM.Address Timer.In

Timer.Time Timer. Type Total.AlarmSP Total.Hold Total.In Total.Reset Total.Resolution Total.Run

Total.Units

User.Comms.Address User.Comms.Baud

User.Comms.DCHP enable User.Comms.Default Gateway 1 User.Comms.Default\_Gateway\_2 User.Comms.Default\_Gateway\_3 User.Comms.Default\_Gateway 4

User.Comms.Delay

User.Comms.Extension\_Cycles User.Comms.IP\_address\_1 User.Comms.IP\_address\_2 User.Comms.IP\_address\_3 User.Comms.IP\_address\_4 User.Comms.Network Version

User.Comms.Parity

User.Comms.Pref Mstr IP 1 User.Comms.Pref\_Mstr\_IP\_2 User.Comms.Pref\_Mstr\_IP\_3 User.Comms.Pref Mstr IP 4 User.Comms.Protocol User.Comms.ShowMac

User.Comms.Subnet\_Mask\_1 User.Comms.Subnet Mask 2 User.Comms.Subnet\_Mask\_3 User.Comms.Subnet Mask 4

User.Comms.UnitIdent

UsrVal.HighLimit UsrVal.LowLimit UsrVal.Resolution UsrVal.Status UsrVal.Units UsrVal.Val Wire.Dest Wire.Src

### Device Panel Device Panel

When this toolbar icon is clicked on, a representation of the connected instrument (either on-line, or a clone) appears in the iTools window. The operator interface acts as in the real instrument (note 1), but instead of operating the push-buttons by hand, the relevant items are clicked on, using the mouse. Changes made at the operator interface are reflected at the iTools screen and vice-versa.

The display can be scaled as required by click/dragging on the sides/bottom or corners.

#### **Notes:**

 An up/down arrow key appears above the display for operations (e.g. acknowledging system alarms) which require simultaneous operation of the up and down arrow keys.



Real instruments can be recognised by the fact that the representation of the display is in green, whereas for cloned instruments, the display is shown in white (see Figure 140 below).



Figure 140 Device Panel Display On-line (Left) and Clone (Right).

### Watch/Recipe Editor Watch/Recipe

The watch/recipe editor is opened by clicking on the Watch/Recipe tool icon, by selecting 'Watch/Recipe' in the 'Views' menu or by using the short cut <ctrl>+<A>. The window is in two parts: the left part containing the watch list; the right-hand part containing one or more data sets, initially empty and unnamed.

The Watch/Recipe window is used:

- To monitor a list of parameters. This list can contain parameters from many different, and otherwise unrelated parameter lists within the same device. It cannot contain parameters from different devices.
- To create 'data sets' of parameter values which can be selected and downloaded to the device in the sequence defined in the recipe. The same parameter may be used more than once in a recipe.



Figure 141 Watch/Recipe Editor Window (With Context Menu)

### **Creating a Watch List**

After opening the window, parameters can be added to it as described below. The values of the parameters update in real-time, allowing the user to monitor a number of values simultaneously.

### ADDING PARAMETERS TO THE WATCH LIST

- 1. Parameters can be click-dragged into the watch list from another area of the iTools window (for example, the parameter explorer window, the graphical wiring editor, the browse tree). The parameter is placed either in an empty row at the bottom of the list, or if it is dragged on top of an already existing parameter, it is inserted above this parameter, with the remaining parameters being moved down one place.
- 2. Parameters can be dragged from one position in the list to another. In such a case, a copy of the parameter is produced, the source parameter remaining in its original position.
- Parameters can be copied <ctrl>+<C> and pasted <ctrl>+<V> either within the
  list, or from a source external to it, for example the parameter browse window or
  the graphical wiring editor.
- 4. The 'Insert item...' tool button the 'Insert Parameter' item in the Recipe or context menu or the short cut <Insert> can be used to open a browse window from which a parameter is selected for insertion above the currently selected parameter.

#### **DATA SET CREATION**

Once all the required parameters have been added to the list, select the empty data set by clicking on the column header. Fill the data set with current values using one of the following methods:

- 1. Clicking on the 'Capture current values into a data set' tool icon (also known as the 'Snapshot Values' tool).
- 2. Selecting 'Snapshot Values' from the Recipe or Context (right-click) menu.
- 3. Using the short cut <ctrl>+<A>.

Individual data values can now be edited by typing directly into the grid cells. Data values can be left blank or cleared, in which case, no values will be written for those parameters at download. Data values are cleared by deleting all the characters in the cell then either moving to a different cell or typing <Enter>.

The set is called 'Set 1' by default, but it can be renamed by either by using the 'Rename data set...' item in the Recipe or context menus, or by using the short cut <ctrl>+<R>.

New, empty data sets can be added using one of the following:

- 1. Clicking on the 'Create a new empty data set' toolbar icon.
- 2. Selecting 'New Data Set' in the Recipe or context menus
- 3. Using the short cut <ctrl>+<W>

Once created, the data sets are edited as described above.

Finally, once all the required data sets have been created, edited and saved, they can be downloaded the instrument, one at a time, using the Download tool, the 'Download Values' item in the Recipe or context menus, or the short cut <ctrl>+<D>.



### Watch Recipe Toolbar Icons

page 1

Till 1

١

Create a new watch/recipe list. Creates a new list by clearing out all parameters and data sets from an open window. If the current list has not been saved, confirmation is requested. Short cut <ctrl>+<N>

Open an existing watch/recipe file. If the current list or data set has not been saved, confirmation is requested. A file dialogue box then opens allowing the user to select a file to be opened. Short cut <ctrl>+<O>

Save the current watch/recipe list. Allows the current set to be saved to a user specified location. Short cut <ctrl>+<S>.

Download the selected data set to the device. Short cut <ctrl>+<D>

Insert item ahead of selected item. Short cut <Insert>.

Remove recipe parameter. Short cut <ctrl>+<Delete>.

Move selected item. Up arrow moves selected parameter up the list; down arrow move the selected parameter down the list. Create a new empty data set. Short cut <ctrl>+<w>.

Delete an empty data set. Short cut <ctrl>+<Delete>

Capture current values into a data set. Fills the selected data set with values. Short cut <ctrl>+<A>.

Clear the selected data set. Removes values from the selected data set. Short cut <Shift>+<Delete>.

Open OPC Scope. Opens a separate utility that allows trending, data logging and Dynamic Data Exchange (DDE). OPC Scope is an OPC explorer program that can connect to any OPC server that is in the windows registry.

(OPC is an acronym for 'OLE for Process Control, where OLE stands for 'Object Linking and Embedding'.)

### Watch/Recipe Context Menu

The Watch/Recipe Context menu items have the same functions as described above for toolbar items.

### User Pages User Pages

Up to four user pages, each with four lines can be created and downloaded to the unit. These allow the operator interface to display particular sets of values, in various formats. Figure 142 below, shows the initial display when 'User Pages' is first clicked-on.



Figure 142 Blank User Page

### **User Page Creation**

1. Click on the up/down arrow to select the required Page number for configuration.



- 2. Double-click one of the cells in the 'Promote Parameter List' to display the 'Select Item Style' window (Figure 143).
- 3. Click on the required style then on 'OK'.
- 4. A parameter Browse window appears (Figure 144) for the selected row (1 in the figure), allowing the user to select a parameter.
- 5. Click 'OK' to insert the parameter into the list.
- If required, click on white square on the relevant 'Graph Low' or 'Graph High' title bar, and set the low and high values to appear with an associated bargraph (Figure 145).

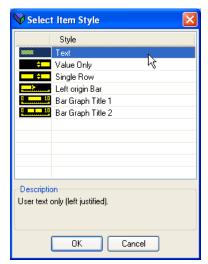






Figure 143 Style Selection Window

Figure 144 Parameter Browse Window

Figure 145 Graph Limit Setting.

### **Style Examples**



Figure 146 Text, Value only, single Row and Left origin Bar styles



Figure 147 Bar Graph Title 1, Left origin bar and Bar Graph Title 2 styles

Text If 'Text' is selected, a text entry window appears allowing

the user to enter the text to appear on the selected line of the display. The display can accommodate 10 characters - any further characters are hidden. This style is shown as

line one in Figure 146.

Value only Displays the value of the selected parameter, right justi-

fied. No User text may be entered for this style. This style

is shown as line two in Figure 146.

Single Row Displays the parameter mnemonic (left justified) and the

parameter value (right justified). User text may be entered, but this will over-write the parameter mnemonic. This style

is shown as line three in Figure 146.

Left origin Bar Displays the parameter value as a left-hand zero bargraph.

This style is shown as line four in Figure 146, and line two

in Figure 147.

Bar Graph Title 1 Supplies low limit (left justified), parameter mnemonic

(centred) and high limit (right justified) displays, normally associated with a Left origin Bar on the line below or above. User text may be entered. As the number of entered characters increases, this overwrites firstly the mnemonic, then the range values. This style is shown as line


one in Figure 147.

Bar Graph Title 2 Similar to Bar Graph Title 1, but includes a numeric value for the parameter as well as its mnemonic. User text may

be entered. As the number of entered characters increases, this over-writes firstly the mnemonic, then the range

values. If the number of entered characters plus the number of value characters exceeds 10, then the user text is hidden, leaving just the parameter value. This style is shown as line three in Figure 147.

### **User Pages Tools**

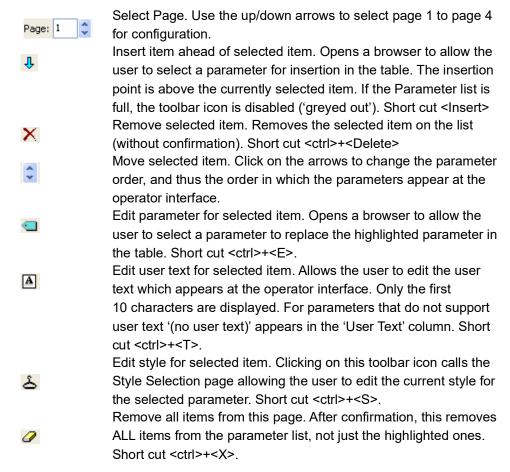

**Note:** Most if the above functions are also to be found in the 'Pages' menu, in the context menu, along with 'Parameter Help' and 'Parameter properties...' items.

# Parameter Addresses (Modbus)

### Introduction

The iTools address fields display each parameter's Modbus address to be used when addressing integer values over the serial communications link. In order to access these values as IEEE floating point values, the calculation: IEEE address =  $\{(Modbus address \times 2) + hex 8000\}$  should be used. The Communications manual HA179770 gives details of how to establish a suitable communications link.

#### **Notes:**

- Certain parameters may have values which exceed the maximum value that can be read from or written to using a 16-bit integer communications. Such parameters have a scaling factor applied to them as described in "Parameter Scaling" on page 175.
- When using 16-bit scaled integer modbus addressing, time parameters can be read from or written to in 10ths of minutes, or in 10ths of seconds as defined in the parameter "Instrument.Configuration.TimerRes" on page 189.

### **Parameter Types**

The following parameter types are used:

bool	Boolean
uint8	Unsigned 8-bit integer
int16	Signed 16-bit integer
uint16	Unsigned 16-bit integer
int32	Signed 32-bit integer
uint32	Unsigned 32-bit integer
time32	Unsigned 32-bit integer (time in milliseconds)
float32	IEEE 32-bit floating point
string	String - an array of unsigned 8-bit integers.

## **Parameter Scaling**

Some parameters might have values which exceed the maximum value (32767) that can be read/written via 16-bit scaled integer comms. For this reason, the following parameters are read/written with a scaling factor applied to them when using scaled integer comms:

Parameter Name Scaling Factor

Network.1-4.Meas.PBurst

Kilo with 1 decimal place

Network.1-4.Meas.P

Kilo with 1decimal place

Network.1-4.Meas.S

Kilo with 1decimal place

Network.1-4.Meas.Q

Kilo with 1decimal place

Network.1-4.Meas.IsqBurst

Kilo with 1decimal place

Network.1-4.Meas.Isq

Kilo with 1decimal place

Network.1-4.Meas.IsqMax

Kilo with 1decimal place

Network.1-4.Meas.VsqBurst

Kilo with 1decimal place

Network.1-4.Meas.Vsq

Kilo with 1decimal place

Network.1-4.Meas.VsqMax

Kilo with 1decimal place

PLM.Network.Pmax Mega with 2 decimal places
PLM.Network.Pt Mega with 2 decimal places
PLM.Network.Ps Mega with 2 decimal places
PLM.Network.Pr Mega with 2 decimal places

PLMChan.1-4.PZmax

Kilo with 1 decimal place

### **Conditional Scaling**

The parameters listed below are conditionally re-scaled as kilo values with 1 decimal place:

Parameter Name Condition Control.n.Setup.NominalPV

When Control.n.Main.PV is wired from Network.n.Meas.P,

Vsq or Isq

Control.n.Main.PV When wired from Network.n.Meas.P, Vsq or Isq

Control.n.Main.TransferPV

When wired from Network.n.Meas.P, Vsq or Isq

Control.n.Main.TransferSpan

When Control.n.Main.PV is wired from Network.n.Meas.P,

Vsq or Isq

Control.n.Limit.PV1 When wired from Network.n.Meas.P, Vsq or Isq

Control.n.Limit.PV2 When wired from Network.n.Meas.P, Vsq or Isq

Control.n.Limit.PV3 When wired from Network.n.Meas.P, Vsq or Isq

Control.n.Limit.SP1 When Control.n.Limit.PV1 is wired from Net-

work.n.Meas.P, Vsq or Isq

Control.n.Limit.SP2 When Control.n.Limit.PV2 is wired from Net-

work.n.Meas.P, Vsq or Isq

Control.n.Limit.SP3 When Control.n.Limit.PV3 is wired from Net-

work.n.Meas.P, Vsq or Isq

SetpProv.n.Remote1 When in Engineering units AND Control.m.Main.PV is

wired from Network.m.Meas.P, Vsq or Isq (where m = the instance of the Control block to which SetpProv.n is wired)

SetpProv.n.Remote2 When in Engineering units AND Control.m.Main.PV is

wired from Network.m.Meas.P, Vsq or lsq (where m =the instance of the Control block to which SetpProv.n is wired)

SetpProv.n.LocalSP When in Engineering units AND Control.m.Main.PV is

wired from Network.m.Meas.P, Vsq or Isq (where m = the instance of the Control block to which SetpProv.n is wired)

## **Parameter Table**

The following table is arranged in alphabetical function block order:

<u>Access</u>	Firing O/P 4	IP Monitor 2	Predictive Load Manager
Comms	Instrument	IP Monitor 3	PLM Chan 1
Control 1	Analogue I/P 1	IP Monitor 4	PLM Chan 2
Control 2	Analogue I/P 2	LGC2 1	PLM Chan 3
Control 3	Analogue I/P 3	LGC2 2	PLM Chan 4
Control 4	Analogue I/P 4	LGC2 3	<u>QuickStart</u>
Counter 1	Analogue I/P 5	LGC2 4	Set Prov 1
Counter 2	Analogue O/P 1	Lgc8 1	Set Prov 2
Counter 3	Analogue O/P 2	Lgc8 2	Set Prov 3
Counter 4	Analogue O/P 3	Lgc8 3	Set Prov 4
Customer Page 1	Analogue O/P 4	Lgc8 4	Timer 1
Customer Page 2	I/O Digital 1	<u>LTC</u>	Timer 2
Customer Page 3	I/O Digital 2	Maths2 1	Timer 3
Customer Page 4	I/O Digital 3	Maths2 2	Timer 4
Energy 1	I/O Digital 4	Maths2 3	<u>Totaliser 1</u>
Energy 2	I/O Digital 5	Maths2 4	<u>Totaliser 2</u>
Energy 3	I/O Digital 6	Modulator 1	<u>Totaliser 3</u>
Energy 4	I/O Digital 7	Modulator 2	<u>Totaliser 4</u>
Energy 5	I/O Digital 8	Modulator 3	<u>User Value 1</u>
Event Log	I/O Relay 1	Modulator 4	<u>User Value 2</u>
Fault detection	I/O Relay 2	Network 1	<u>User Value 3</u>
Firing O/P 1	I/O Relay 3	Network 2	<u>User Value 4</u>
Firing O/P 2	I/O Relay 4	Network 3	
Firing O/P 3	IP Monitor 1	Network 4	

Parameter path	Description	Туре	Hex	Dec
Access.ClearMemory	Cold Start the Instrument	uint8	07EA	2026
Access.ConfigurationPasscode	Configuration Code (Default = 3)	int16	07EA	2021
Access.EngineerPasscode	Engineer Code (Default = 2)	int16	07E5	2020
Access.Goto	Goto	uint8	07E4	2018
Access.IM	Instrument Mode (0= Operating, 1 = Standby, 2 = Configuration)	uint8	00C7	199
Access.Keylock	Lock Instrument (0 = none, 1 = All, 2 = Edit)	uint8	07E9	2025
Access.Passcode	Passcode Request	int16	07E3	2019
Access.QuickStartPasscode	Quick Start Code (Default = 4)	int16	07E6	2022
Comms.RmtPanel.Address	Address (1 to 254)	uint8	0796	1942
Comms.RmtPanel.Baud	Baud Rate (0 = 9600, 1 = 19,200)	uint8	0797	1943
Comms.User.Address	Comms Address (Range depends on protocol)	uint8	076C	1900
Comms.User.Baud	Baud Rate (0 = 9600, 1 = 19,200, 2 = 4800, 3 = 2400, 4 = 1200 10 = 125kb, 250kb, 500kb, 13 = 1Mb)	uint8	076D	1901
Comms.User.DCHP_enable	DHCP Type (0 = fixed, 1 = dynamic)	bool	0780	1920
Comms.User.Default_Gateway_1	1st byte of Default Gateway	uint8	0778	1912
Comms.User.Default_Gateway_2	2nd byte of Default Gateway	uint8	0779	1913
Comms.User.Default_Gateway_3	3rd byte of Default Gateway	uint8	077A	1914
Comms.User.Default_Gateway_4	4th byte of Default Gateway	uint8	077B	1915
Comms.User.Delay	TX Delay time (0 = off, 1 = on)	uint8	076F	1903

Parameter path	Description	Туре	Hex	Dec
Comms.User.Extension_Cycles	Number of CC Link Extension Cycles	uint8	0799	1945
Comms.User.Id	Comms Identity (0 = none, 1 = EIA485, 5 = Ethernet, 10 = Network)	uint8	076A	1898
Comms.User.IP_address_1	1st byte of IP address.	uint8	0770	1904
Comms.User.IP_address_2	2nd byte of IP address.	uint8	0771	1905
Comms.User.IP_address_3	3rd byte of IP address.	uint8	0772	1906
Comms.User.IP_address_4	4th byte of IP address.	uint8	0773	1907
Comms.User.MAC1	MAC address 1	uint8	0789	1929
Comms.User.MAC2	MAC address 2	uint8	078A	1930
Comms.User.MAC3	MAC address 3	uint8	078B	1931
Comms.User.MAC4	MAC address 4	uint8	078C	1932
Comms.User.MAC5	MAC address 5	uint8	078D	1933
Comms.User.MAC6	MAC address 6	uint8	078E	1934
Comms.User.NetStatus	Fieldbus Status	uint8	0795	1941
Comms.User.Network	Ethernet Network status	int16	0781	1921
Comms.User.Network_Version	CC Link Network Version	uint8	0798	1944
Comms.User.Occupied_Stations	Occupied Stations	uint8	079A	1946
Comms.User.Parity	Parity setting (0 = none, 1 = even, 2 = odd)	uint8	076E	1902
Comms.User.PNDevNum	Profibus station number	uint8	0C01	3073
Comms.User.PNinitMode	Profibus initialise mode	uint8	0C00	3072
Comms.User.Pref_Mstr_IP_1	1st byte of Preferred Master IP address	uint8	077C	1916
Comms.User.Pref_Mstr_IP_2	2nd byte of Preferred Master IP address	uint8	077D	1917
Comms.User.Pref_Mstr_IP_3	3rd byte of Preferred Master IP address	uint8	077E	1918
Comms.User.Pref_Mstr_IP_4	4th byte of Preferred Master IP address	uint8	077F	1919
Comms.User.Protocol	Comms Protocol (0 = Modbus, 5 = Ethernet, 10 = Network,11 = Profibus, 12 = DeviceNet, 13 = CanOpen, 14 = CCLink, 16 = Ethernet IP, 17 = Modbus TCP)	uint8	076B	1899
Comms.User.ShowMac	Show MAC address	bool	0788	1928
Comms.User.Subnet Mask 1	1st byte of Subnet mask	uint8	0774	1908
Comms.User.Subnet_Mask_2	2nd byte of Subnet mask	uint8	0775	1909
Comms.User.Subnet_Mask_3	3rd byte of Subnet mask	uint8	0776	1910
Comms.User.Subnet_Mask_4	4th byte of Subnet mask	uint8	0777	1911
Comms.User.UnitIdent	Unit Identity Enable (0 = Strict, 1 = Loose, 2 = Instr.)	uint8	0787	1927
Control.1.AlmAck.ClosedLoop	Process alarm ack: Closed loop break (0 = No Ack, 1 = Ack)	uint8	03B7	951
Control.1.AlmAck.Limitation	Indication alarm ack: Limitation (0 = No Ack, 1 = Ack)	uint8	03B9	953
Control.1.AlmAck.PVTransfer	Indication alarm ack: PV transfer (0 = No Ack, 1 = Ack)	uint8	03B8	952
Control.1.AlmDet.ClosedLoop	Process alarm detection status: Closed loop break (0 = Inactive, 1 = Active)	uint8	03AE	942
Control.1.AlmDet.Limitation	Indication alarm detection status: Limitation (0 = Inactive, 1 = Active)	uint8	03B0	944
Control.1.AlmDet.PVTransfer	Indication alarm detection status: PV transfer (0 = Inactive, 1 = Active)	uint8	03AF	943
Control.1.AlmDis.ClosedLoop	Process alarm: Closed loop break (0 = Enable, 1 = Disable)	uint8	03AB	939
Control.1.AlmDis.Limitation	Indication alarm: Limitation (0 = Enable, 1 = Disable)	uint8	03AD	941
Control.1.AlmDis.PVTransfer	Indication alarm: PV transfer (0 = Enable, 1 = Disable)	uint8	03AC	940

Parameter path	Description	Туре	Hex	Dec
Control.1.AlmLat.ClosedLoop	Process alarm latch: Closed loop break (0 = No Latch, 1 = Latch)	uint8	03B4	948
Control.1.AlmLat.Limitation	Indication alarm latch: Limitation (0 = No Latch, 1 = Latch)	uint8	03B6	950
Control.1.AlmLat.PVTransfer	Indication alarm latch: PV transfer (0 = No Latch, 1 = Latch)	uint8	03B5	949
Control.1.AlmSig.ClosedLoop	Process alarm signalling status: Closed loop break (0 = Not latched, 1 = Latched)	uint8	03B1	945
Control.1.AlmSig.Limitation	Indication alarm signalling status: Limitation (0 = Not latched, 1 = Latched)	uint8	03B3	947
Control.1.AlmSig.PVTransfer	Indication alarm signalling status: PV transfer (0 = Not latched, 1 = Latched)	uint8	03B2	946
Control.1.AlmStop.ClosedLoop	Process alarm stop: Closed loop break (0 = No Stop, 1 = Stop)	uint8	03BA	954
Control.1.AlmStop.Limitation	Indication alarm stop: Limitation	uint8	03BC	956
Control.1.AlmStop.PVTransfer	Indication alarm stop: PV transfer	uint8	03BB	955
Control.1.Diag.Output	Output of the controller	float32	03A9	937
Control.1.Diag.PAOP	Phase angle output for PA reduction in burst firing	float32	03AA	938
Control.1.Diag.Status	Status of the controller (0 = Main PV, 1 = Transfr, 4 = Limit 1,5 = Limit 2, 6 = Limit 3)	uint8	03A8	936
Control.1.Limit.PV1	Threshold Limit PV1	float32	03A1	929
Control.1.Limit.PV2	Threshold Limit PV2	float32	03A2	930
Control.1.Limit.PV3	Threshold Limit PV3	float32	03A3	931
Control.1.Limit.SP1	Threshold limit setpoint 1	float32	03A4	932
Control.1.Limit.SP2	Threshold limit setpoint 2	float32	03A5	933
Control.1.Limit.SP3	Threshold limit setpoint 3	float32	03A6	934
Control.1.Limit.TI	Integral time of the limit loop	float32	03A7	935
Control.1.Main.PV	The main PV of the controller	float32	039C	924
Control.1.Main.SP	Main SP to control at	float32	039D	925
Control.1.Main.TI	Integral time of the main loop	float32	03A0	928
Control.1.Main.TransferPV	The transfer (proportional limit) PV	float32	039E	926
Control.1.Main.TransferSpan	The transfer (proportional limit) span	float32	039F	927
Control.1.Setup.EnLimit	Enable Threshold Limit (0 = No, 1 = Yes)	uint8	0396	918
Control.1.Setup.FFGain	Feedforward gain	float32	0399	921
Control.1.Setup.FFOffset	Feedforward offset	float32	039A	922
Control.1.Setup.FFType	Defines the type of Feed Forward to be used (0 = Off, 1 = Trim, 2 = FFOnly)	uint8	0398	920
Control.1.Setup.NominalPV	Nominal PV of this phase of power control	float32	0395	917
Control.1.Setup.Standby	Put controller into standby (0 = No, 1 = Yes)	uint8	0394	916
Control.1.Setup.TransferEn	Enable Transfer (Proportional limit) (0 = N0, 1 = Yes)	uint8	0397	919
-	Control 2. See Control 1 for enumeration values			
Control.2.AlmAck.ClosedLoop	Process alarm ack: Closed loop break	uint8	03E9	1001
Control.2.AlmAck.Limitation	Indication alarm ack: Limitation	uint8	03EB	1003
Control.2.AlmAck.PVTransfer	Indication alarm ack: PV transfer	uint8	03EA	1002
Control.2.AlmDet.ClosedLoop	Process alarm detection status: Closed loop break	uint8	03E0	992
Control.2.AlmDet.Limitation	Indication alarm detection status: Limitation	uint8	03E2	994
Control.2.AlmDet.PVTransfer	Indication alarm detection status: PV transfer	uint8	03E1	993
	Process alarm: Closed loop break	uint8	03DD	989

Control.2.AlmDis.PVTransfer Control.2.AlmLat.ClosedLoop Control.2.AlmLat.Limitation Control.2.AlmLat.PVTransfer Control.2.AlmSig.ClosedLoop Control.2.AlmSig.Limitation Control.2.AlmSig.PVTransfer Control.2.AlmSig.PVTransfer Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ation alarm: Limitation ation alarm: PV transfer ess alarm latch: Closed loop break ation alarm latch: Limitation ation alarm latch: PV transfer ess alarm signalling status: Closed loop break ation alarm signalling status: Limitation ation alarm signalling status: PV transfer	uint8 uint8 uint8 uint8 uint8 uint8 uint8 uint8 uint8	03DF 03DE 03E6 03E8 03E7 03E3	991 990 998 1000 999
Control.2.AlmLat.ClosedLoop Control.2.AlmLat.Limitation Control.2.AlmLat.PVTransfer Control.2.AlmSig.ClosedLoop Control.2.AlmSig.Limitation Control.2.AlmSig.PVTransfer Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ess alarm latch: Closed loop break ation alarm latch: Limitation ation alarm latch: PV transfer ess alarm signalling status: Closed loop break ation alarm signalling status: Limitation ation alarm signalling status: PV transfer	uint8 uint8 uint8 uint8 uint8 uint8	03E6 03E8 03E7 03E3	998 1000 999
Control.2.AlmLat.Limitation Control.2.AlmLat.PVTransfer Control.2.AlmSig.ClosedLoop Control.2.AlmSig.Limitation Control.2.AlmSig.PVTransfer Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ation alarm latch: Limitation ation alarm latch: PV transfer ess alarm signalling status: Closed loop break ation alarm signalling status: Limitation ation alarm signalling status: PV transfer	uint8 uint8 uint8 uint8	03E8 03E7 03E3	1000 999
Control.2.AlmLat.PVTransfer Control.2.AlmSig.ClosedLoop Control.2.AlmSig.Limitation Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ation alarm latch: PV transfer ess alarm signalling status: Closed loop break ation alarm signalling status: Limitation ation alarm signalling status: PV transfer	uint8 uint8 uint8	03E7 03E3	999
Control.2.AlmSig.ClosedLoop Control.2.AlmSig.Limitation Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ess alarm signalling status: Closed loop break ation alarm signalling status: Limitation ation alarm signalling status: PV transfer	uint8 uint8	03E3	
Control.2.AlmSig.Limitation Indication Control.2.AlmSig.PVTransfer Control.2.AlmStop.ClosedLoop Proce	ation alarm signalling status: Limitation	uint8		995
Control.2.AlmSig.PVTransfer Indication Control.2.AlmStop.ClosedLoop Processing	ation alarm signalling status: PV transfer			1
Control.2.AlmStop.ClosedLoop Proce			03E5	997
		uint8	03E4	996
l l	ess alarm stop: Closed loop break	uint8	03EC	1004
Control.2.AlmStop.Limitation Indica	ation alarm stop: Limitation	uint8	03EE	1006
Control.2.AlmStop.PVTransfer Indica	ation alarm stop: PV transfer	uint8	03ED	1005
Control.2.Diag.Output Output	ut of the controller	float32	03DB	987
Control.2.Diag.PAOP Phas	e angle output for PA reduction in burst firing	float32	03DC	988
Control.2.Diag.Status Statu	s of the controller	uint8	03DA	986
Control.2.Limit.PV1 Three	shold Limit PV1	float32	03D3	979
Control.2.Limit.PV2	shold Limit PV2	float32	03D4	980
Control.2.Limit.PV3	shold Limit PV3	float32	03D5	981
Control.2.Limit.SP1 Thres	shold limit setpoint 1	float32	03D6	982
Control.2.Limit.SP2 Thres	shold limit setpoint 2	float32	03D7	983
Control.2.Limit.SP3 Thres	shold limit setpoint 3	float32	03D8	984
Control.2.Limit.TI Integr	ral time of the limit loop	float32	03D9	985
Control.2.Main.PV The r	nain PV of the controller	float32	03CE	974
Control.2.Main.SP Main	SP to control at	float32	03CF	975
Control.2.Main.TI Integr	ral time of the main loop	float32	03D2	978
Control.2.Main.TransferPV The t	ransfer (proportional limit) PV	float32	03D0	976
Control.2.Main.TransferSpan The t	ransfer (proportional limit) span	float32	03D1	977
Control.2.Setup.EnLimit Enab	le Threshold Limit	uint8	03C8	968
Control.2.Setup.FFGain Feed	forward gain	float32	03CB	971
Control.2.Setup.FFOffset Feed	forward offset	float32	03CC	972
Control.2.Setup.FFType Defin	es the type of Feed Forward to be used	uint8	03CA	970
Control.2.Setup.NominalPV Nomi	nal PV of this phase of power control	float32	03C7	967
Control.2.Setup.Standby Put c	ontroller into standby	uint8	03C6	966
Control.2.Setup.TransferEn Enab	le Transfer (Proportional limit)	uint8	03C9	969
Contr	rol 3. See Control 1 for enumeration values			
Control.3.AlmAck.ClosedLoop Proce	ess alarm ack: Closed loop break	uint8	041B	1051
Control.3.AlmAck.Limitation Indica	ation alarm ack: Limitation	uint8	041D	1053
Control.3.AlmAck.PVTransfer Indica	ation alarm ack: PV transfer	uint8	041C	1052
Control.3.AlmDet.ClosedLoop Proce	ess alarm detection status: Closed loop break	uint8	0412	1042
·	ation alarm detection status: Limitation	uint8	0414	1044
Control.3.AlmDet.PVTransfer Indica	ation alarm detection status: PV transfer	uint8	0413	1043
	ess alarm: Closed loop break	uint8	040F	1039
·	ation alarm: Limitation	uint8	0411	1041
	ation alarm: PV transfer	uint8	0410	1040
	ess alarm latch: Closed loop break	uint8	0418	1048
	ation alarm latch: Limitation	uint8	041A	1050
	ation alarm latch: PV transfer	uint8	0419	1049

Parameter path	Description	Туре	Hex	Dec
Control.3.AlmSig.ClosedLoop	Process alarm signalling status: Closed loop break	uint8	0415	1045
Control.3.AlmSig.Limitation	Indication alarm signalling status: Limitation	uint8	0417	1047
Control.3.AlmSig.PVTransfer	Indication alarm signalling status: PV transfer	uint8	0416	1046
Control.3.AlmStop.ClosedLoop	Process alarm stop: Closed loop break	uint8	041E	1054
Control.3.AlmStop.Limitation	Indication alarm stop: Limitation	uint8	0420	1056
Control.3.AlmStop.PVTransfer	Indication alarm stop: PV transfer	uint8	041F	1055
Control.3.Diag.Output	Output of the controller	float32	040D	1037
Control.3.Diag.PAOP	Phase angle output for PA reduction in burst firing	float32	040E	1038
Control.3.Diag.Status	Status of the controller	uint8	040C	1036
Control.3.Limit.PV1	Threshold Limit PV1	float32	0405	1029
Control.3.Limit.PV2	Threshold Limit PV2	float32	0406	1030
Control.3.Limit.PV3	Threshold Limit PV3	float32	0407	1031
Control.3.Limit.SP1	Threshold limit setpoint 1	float32	0408	1032
Control.3.Limit.SP2	Threshold limit setpoint 2	float32	0409	1033
Control.3.Limit.SP3	Threshold limit setpoint 3	float32	040A	1034
Control.3.Limit.TI	Integral time of the limit loop	float32	040B	1035
Control.3.Main.PV	The main PV of the controller	float32	0400	1024
Control.3.Main.SP	Main SP to control at	float32	0401	1025
Control.3.Main.TI	Integral time of the main loop	float32	0404	1028
Control.3.Main.TransferPV	The transfer (proportional limit) PV	float32	0402	1026
Control.3.Main.TransferSpan	The transfer (proportional limit) span	float32	0403	1027
Control.3.Setup.EnLimit	Enable Threshold Limit	uint8	03FA	1018
Control.3.Setup.FFGain	Feedforward gain	float32		1021
Control.3.Setup.FFOffset	Feedforward offset	float32	03FE	1022
Control.3.Setup.FFType	Defines the type of Feed Forward to be used	uint8	03FC	1020
Control.3.Setup.NominalPV	Nominal PV of this phase of power control	float32	03F9	1017
Control.3.Setup.Standby	Put controller into standby	uint8	03F8	1016
Control.3.Setup.TransferEn	Enable Transfer (Proportional limit)	uint8	03FB	1019
	Control 4. See Control 1 for enumeration values			
Control.4.AlmAck.ClosedLoop	Process alarm ack: Closed loop break	uint8	044D	1101
Control.4.AlmAck.Limitation	Indication alarm ack: Limitation	uint8	044F	1103
Control.4.AlmAck.PVTransfer	Indication alarm ack: PV transfer	uint8	044E	1102
Control.4.AlmDet.ClosedLoop	Process alarm detection status: Closed loop break	uint8	0444	1092
Control.4.AlmDet.Limitation	Indication alarm detection status: Limitation	uint8	0446	1094
Control.4.AlmDet.PVTransfer	Indication alarm detection status: PV transfer	uint8	0445	1093
Control.4.AlmDis.ClosedLoop	Process alarm: Closed loop break	uint8	0441	1089
Control.4.AlmDis.Limitation	Indication alarm: Limitation	uint8	0443	1091
Control.4.AlmDis.PVTransfer	Indication alarm: PV transfer	uint8	0442	1090
Control.4.AlmLat.ClosedLoop	Process alarm latch: Closed loop break	uint8	044A	1098
Control.4.AlmLat.Limitation	Indication alarm latch: Limitation	uint8	044C	1100
Control.4.AlmLat.PVTransfer	Indication alarm latch: PV transfer	uint8	044B	1099
Control.4.AlmSig.ClosedLoop	Process alarm signalling status: Closed loop break	uint8	0447	1095
Control.4.AlmSig.Limitation	Indication alarm signalling status: Limitation	uint8	0449	1097
Control.4.AlmSig.PVTransfer	Indication alarm signalling status: PV transfer	uint8	0448	1096
Control.4.AlmStop.ClosedLoop	Process alarm stop: Closed loop break	uint8	0450	1104
Control.4.AlmStop.Limitation	Indication alarm stop: Limitation	uint8	0452	1106

Parameter path	Description	Туре	Hex	Dec
Control.4.AlmStop.PVTransfer	Indication alarm stop: PV transfer	uint8	0451	1105
Control.4.Diag.Output	Output of the controller	float32	043F	1087
Control.4.Diag.PAOP	Phase angle output for PA reduction in burst firing	float32	0440	1088
Control.4.Diag.Status	Status of the controller	uint8	043E	1086
Control.4.Limit.PV1	Threshold Limit PV1	float32	0437	1079
Control.4.Limit.PV2	Threshold Limit PV2	float32	0438	1080
Control.4.Limit.PV3	Threshold Limit PV3	float32	0439	1081
Control.4.Limit.SP1	Threshold limit setpoint 1	float32	043A	1082
Control.4.Limit.SP2	Threshold limit setpoint 2	float32	043B	1083
Control.4.Limit.SP3	Threshold limit setpoint 3	float32	043C	1084
Control.4.Limit.TI	Integral time of the limit loop	float32	043D	1085
Control.4.Main.PV	The main PV of the controller	float32	0432	1074
Control.4.Main.SP	Main SP to control at	float32	0433	1075
Control.4.Main.TI	Integral time of the main loop	float32	0436	1078
Control.4.Main.TransferPV	The transfer (proportional limit) PV	float32	0434	1076
Control.4.Main.TransferSpan	The transfer (proportional limit) span	float32	0435	1077
Control.4.Setup.EnLimit	Enable Threshold Limit	uint8	042C	1068
Control.4.Setup.FFGain	Feedforward gain	float32	042F	1071
Control.4.Setup.FFOffset	Feedforward offset	float32	0430	1072
Control.4.Setup.FFType	Defines the type of Feed Forward to be used	uint8	042E	1070
Control.4.Setup.NominalPV	Nominal PV of this phase of power control	float32	042B	1067
Control.4.Setup.Standby	Put controller into standby	uint8	042A	1066
Control.4.Setup.TransferEn	Enable Transfer (Proportional limit)	uint8	042D	1069
Counter.1.ClearOverflow	Clear OverFlow Flag (0 = No, 1 = Yes)	bool	0A12	2578
Counter.1.Clock	Clock Input	bool	0A0E	2574
Counter.1.Count	Count Value	int32	0A10	2576
Counter.1.Direction	Direction of Count (0 = Up, 1 = Down)	bool	0A0B	2571
Counter.1.Enable	Enable the Counter (0 = N0, 1 = Yes)	bool	0A0A	2570
Counter.1.OverFlow	Overflow Flag (0 = No, 1 = Yes)	bool	0A0D	2573
Counter.1.Reset	Counter Reset (0 = No, 1 = Yes)	bool	0A11	2577
Counter.1.RippleCarry	Ripple Carry Enable Output (0 = Off, 1 = On)	bool	0A0C	2572
Counter.1.Target	Counter Target	int32	0A0F	2575
Counter.2.ClearOverflow	Clear OverFlow Flag (0 = No, 1 = Yes)	bool	0A25	2597
Counter.2.Clock	Clock Input	bool	0A21	2593
Counter.2.Count	Count Value	int32	0A23	2595
Counter.2.Direction	Direction of Count (0 = Up, 1 = Down)	bool	0A1E	2590
Counter.2.Enable	Enable the Counter (0 = No, 1 = Yes)	bool 	0A1D	2589
Counter.2.OverFlow	Overflow Flag (0 = No, 1 = Yes)	bool	0A20	2592
Counter.2.Reset	Counter Reset (0 = No, 1 = Yes)	bool	0A24	2596
Counter.2.RippleCarry	Ripple Carry Enable Output (0 = Off, 1 = On)	bool	0A1F	2591
Counter.2.Target	Counter Target	int32	0A22	2594
Counter.3.ClearOverflow	Clear OverFlow Flag (0 = No, 1 = Yes)	bool	0A38	2616
Counter.3.Clock	Clock Input	bool	0A34	2612
Counter.3.Count	Count Value	int32	0A36	2614
Counter.3.Direction	Direction of Count (0 = Up, 1 = Down)	bool	0A31	2609
Counter.3.Enable	Enable the Counter (0 = No, 1 = Yes)	bool	0A30	2608

Parameter path	Description	Туре	Hex	Dec
Counter.3.OverFlow	Overflow Flag (0 = No, 1 = Yes)	bool	0A33	2611
Counter.3.Reset	Counter Reset (0 = No, 1 = Yes)	bool	0A37	2615
Counter.3.RippleCarry	Ripple Carry Enable Output (0 = Off, 1 = On)	bool	0A32	2610
Counter.3.Target	Counter Target	int32	0A35	2613
Counter.4.ClearOverflow	Clear OverFlow Flag (0 = No, 1 = Yes)	bool	0A4B	2635
Counter.4.Clock	Clock Input	bool	0A47	2631
Counter.4.Count	Count Value	int32	0A49	2633
Counter.4.Direction	Direction of Count (0 = Up, 1 = Down)	bool	0A44	2628
Counter.4.Enable	Enable the Counter (0 = No, 1 = Yes)	bool	0A43	2627
Counter.4.OverFlow	Overflow Flag (0 = No, 1 = Yes)	bool	0A46	2630
Counter.4.Reset	Counter Reset (0 = No, 1 = Yes)	bool	0A4A	2634
Counter.4.RippleCarry	Ripple Carry Enable Output (0 = Off, 1 = On)	bool	0A45	2629
Counter.4.Target	Counter Target	int32	0A48	2632
CustPage.1.CISP1	Parameter 1	uint32	07F8	2040
CustPage.1.CISP2	Parameter 2	uint32	07F9	2041
CustPage.1.CISP3	Parameter 3	uint32	07FA	2042
CustPage.1.CISP4	Parameter 4	uint32	07FB	2043
CustPage.1.Style1	Custom Line 1 Style	uint8	07FC	2044
CustPage.1.Style2	Custom Line 2 Style	uint8	07FD	2045
CustPage.1.Style3	Custom Line 3 Style	uint8	07FE	2046
CustPage.1.Style4	Custom Line 4 Style	uint8	07FF	2047
CustPage.1.UserText1	Custom Text 1	string	4000	1638
				4
CustPage.1.UserText2	Custom Text 2	string	4005	1638 9
CustPage.1.UserText3	Custom Text 3	string	400A	1639 4
CustPage.1.UserText4	Custom Text 4	string	400F	1639 9
CustPage.2.CISP1	Parameter 1	uint32	080C	2060
CustPage.2.CISP2	Parameter 2	uint32	080D	2061
CustPage.2.CISP3	Parameter 3	uint32	080E	2062
CustPage.2.CISP4	Parameter 4	uint32	080F	2063
CustPage.2.Style1	Custom Line 1 Style	uint8	0810	2064
CustPage.2.Style2	Custom Line 2 Style	uint8	0811	2065
CustPage.2.Style3	Custom Line 3 Style	uint8	0812	2066
CustPage.2.Style4	Custom Line 4 Style	uint8	0813	2067
CustPage.2.UserText1	Custom Text 1	string	4014	1640 4
CustPage.2.UserText2	Custom Text 2	string	4019	1640 9
CustPage.2.UserText3	Custom Text 3	string	401E	1641 4
CustPage.2.UserText4	Custom Text 4	string	4023	1641 9
CustPage.3.CISP1	Parameter 1	uint32	0820	2080
CustPage.3.CISP2	Parameter 2	uint32	0821	2081
CustPage.3.CISP3	Parameter 3	uint32	0822	2082

Parameter path	Description	Туре	Hex	Dec
CustPage.3.CISP4	Parameter 4	uint32	0823	2083
CustPage.3.Style1	Custom Line 1 Style	uint8	0824	2084
CustPage.3.Style2	Custom Line 2 Style	uint8	0825	2085
CustPage.3.Style3	Custom Line 3 Style	uint8	0826	2086
CustPage.3.Style4	Custom Line 4 Style	uint8	0827	2087
CustPage.3.UserText1	Custom Text 1	string	4028	1642 4
CustPage.3.UserText2	Custom Text 2	string	402D	1642 9
CustPage.3.UserText3	Custom Text 3	string	4032	1643 4
CustPage.3.UserText4	Custom Text 4	string	4037	1643 9
CustPage.4.CISP1	Parameter 1	uint32	0834	2100
CustPage.4.CISP2	Parameter 2	uint32	0835	2101
CustPage.4 CISP3	Parameter 3	uint32	0836	2102
CustPage.4.CISP4	Parameter 4	uint32	0837	2103
CustPage.4.Style1	Custom Line 1 Style	uint8	0838	2104
CustPage.4.Style2	Custom Line 2 Style	uint8	0839	2105
CustPage.4.Style3	Custom Line 3 Style	uint8	083A	2106
CustPage.4.Style4	Custom Line 4 Style	uint8	083B	2107
CustPage 4UserText1	Custom Text 1	string	403C	1644 4
CustPage.4.UserText2	Custom Text 2	string	4041	1644 9
CustPage.4 UserText3	Custom Text 3	string	4046	1645 4
CustPage.4.UserText4	Custom Text 4	string	404B	1645 9
Energy.1.AutoScaleUnits	Autoscale energy units (0 = No, 1 = Yes)	bool	0B0F	2831
Energy.1.Hold	Hold the output of the counter	bool	0B05	2821
Energy.1.Input	Input to totalise	float32	0B06	2822
Energy.1.prvTotEnergy	Internal value of the Energy in Watt-hours	float32	0B10	2832
Energy.1.prvUsrEnergy	Internal value of the Energy in Watt-hours	float32	0B11	2833
Energy.1.Pulse	Pulsed output	bool	0B09	2825
Energy.1.PulseLen	Length of the pulse in ms	uint16	0B0A	2826
Energy.1.PulseScale	Amount of energy per pulse (0 = Disabled, 1 = 1, 2 = 10, 3 = 100, 4 = 1k 5 = 10k, 6 = 100k, 7 = 1M)	uint8	0B0C	2828
Energy.1.Reset	Set the user counter back to zero	bool	0B07	2823
Energy.1.TotEnergy	The global energy	float32	0B08	2824
Energy.1.TotEnergyUnit	Total energy counter units multiplier. (0 = 1; 1 = 10, 2 = 100, 3 = 1k, 4 = 10k, 5 = 100k 6 = 1M. 7 = 10M, 8 = 100M, 9 = 1G)	uint8	0B0D	2829
Energy.1.Type	Type of energy counter (0 = Normal, 1 = Global)	bool	0B0E	2830
Energy.1.UsrEnergy	User resetable energy	float32	0B04	2820
Energy.1.UsrEnergyUnit	User energy units multiplier. (0 = 1; 1 = 10, 2 = 100, 3 = 1k, 4 = 10k, 5 = 100k 6 = 1M. 7 = 10M, 8 = 100M, 9 = 1G)	uint8	0B0B	2827

Parameter path	Description	Туре	Hex	Dec
Energy.2.AutoScaleUnits	Autoscale the unit of the energy (0 = No, 1 = Yes)	bool	0B23	2851
Energy.2.Hold	Hold the output of the counter	bool	0B19	2841
Energy.2.Input	Input to totalise	float32	0B1A	2842
Energy.2.prvTotEnergy	Internal value of the Energy in Watt-hours	float32	0B24	2852
Energy.2.prvUsrEnergy	Internal value of the Energy in Watt-hours	float32	0B25	2853
Energy.2.Pulse	Pulsed output	bool	0B1D	2845
Energy.2.PulseLen	Length of the pulse in ms	uint16	0B1E	2846
Energy.2.PulseScale	Amount of energy per pulse (as 'Energy 1')	uint8	0B20	2848
Energy.2.Reset	Set the user counter back to zero	bool	0B1B	2843
Energy.2.TotEnergy	The global energy	float32	0B1C	2844
Energy.2.TotEnergyUnit	Total energy counter units (as 'Energy 1')	uint8	0B21	2849
Energy.2.Type	Type of energy counter (0 = Normal, 1 = Global)	bool	0B22	2850
Energy.2.UsrEnergy	User resetable energy	float32	0B18	2840
Energy.2.UsrEnergyUnit	User energy units multiplier (as 'Energy 1')	uint8	0B1F	2847
Energy.3.AutoScaleUnits	Autoscale the unit of the energy (0 = No, 1 = Yes)	bool	0B37	2871
Energy.3.Hold	Hold the output of the counter	bool	0B2D	2861
Energy.3.Input	Input to totalize	float32	0B2E	2862
Energy.3.prvTotEnergy	Internal value of the Energy in Watt-hours	float32	0B38	2872
Energy.3.prvUsrEnergy	Internal value of the Energy in Watt-hours	float32	0B39	2873
Energy.3.Pulse	Pulsed output	bool	0B31	2865
Energy.3.PulseLen	Length of the pulse in ms	uint16	0B32	2866
Energy.3.PulseScale	Amount of energy per pulse (as 'Energy 1')	uint8	0B34	2868
Energy.3.Reset	Set the user counter back to zero	bool	0B2F	2863
Energy.3.TotEnergy	The global energy	float32	0B30	2864
Energy.3.TotEnergyUnit	Total energy counter units (as 'Energy 1')	uint8	0B35	2869
Energy.3.Type	Type of energy counter (0 = Normal, 1 = Global)	bool	0B36	2870
Energy.3.UsrEnergy	User resetable energy	float32	0B2C	2860
Energy.3.UsrEnergyUnit	User energy units multiplier (as 'Energy 1')	uint8	0B33	2867
Energy.4.AutoScaleUnits	Autoscale the unit of the energy (0 = No, 1 = Yes)	bool	0B4B	2891
Energy.4.Hold	Hold the output of the counter	bool	0B41	2881
Energy.4.Input	Input to totalize	float32	0B42	2882
Energy.4.prvTotEnergy	Internal value of the Energy in Watt-hours	float32	0B4C	2892
Energy.4.prvUsrEnergy	Internal value of the Energy in Watt-hours	float32	0B4D	2893
Energy.4.Pulse	Pulsed output	bool	0B45	2885
Energy.4.PulseLen	Length of the pulse in ms	uint16	0B46	2886
Energy.4.PulseScale	Amount of energy per pulse (as 'Energy 1')	uint8	0B48	2888
Energy.4.Reset	Set the user counter back to zero	bool	0B43	2883
Energy.4.TotEnergy	The global energy	float32	0B44	2884
Energy.4.TotEnergyUnit	Total energy counter units (as 'Energy 1')	uint8	0B49	2889
Energy.4.Type	Type of energy counter (0 = Normal, 1 = Global)	bool	0B4A	2890
Energy.4.UsrEnergy	User resetable energy	float32	0B40	2880
Energy.4.UsrEnergyUnit	User energy units multiplier (as 'Energy 1')	uint8	0B47	2887
Energy.5.AutoScaleUnits	Autoscale the unit of the energy (0 = No, 1 = Yes)	bool	0B5F	2911
Energy.5.Hold	Hold the output of the counter	bool	0B55	2901
Energy.5.Input	Input to totalize	float32	0B56	2902
Energy.5.prvTotEnergy	Internal value of the Energy in Watt-hours	float32	0B60	2912

Energy.5.Pulse Energy.5.PulseLen Length of the pulse in ms Length.5.PulseScale Amount of energy per pulse (as 'Energy 1') Length.5.Reset Length.5.Reset Set the user counter back to zero Length.5.TotEnergy The global energy Total energy counter units (as 'Energy 1') Length.5.Type Type of energy counter (0 = Normal, 1 = Global) Length.5.UsrEnergy Length.5.UsrEnergy Length.5.UsrEnergy Length.5.UsrEnergy Length.6.Len	2913 2905 2906 2908 2903 2904 2909 2910 2907 1807 1806 1809 1808
Energy.5.PulseLen  Length of the pulse in ms  Energy.5.PulseScale  Amount of energy per pulse (as 'Energy 1')  Energy.5.Reset  Set the user counter back to zero  Dool  Dobot  Dolo De57  Energy.5.TotEnergy  Energy.5.TotEnergyUnit  Energy.5.TotEnergyUnit  Energy.5.Type  Type of energy counter (0 = Normal, 1 = Global)  Energy.5.UsrEnergy  Energy.5.UsrEnergyUnit  User energy units multiplier (as 'Energy 1')  User energy units multiplier (as 'Energy 1')  EventLog.Event01ID  Event 1 identification  Event 2 Identification  Event 2 type  Event 3 Identification  Event 3 Identification  Eventum ID  Uint16  0B5A  uint2  Uint8  0B5C  bool  DB57  Float32  DB58  Event 9 I Osa Septimal Inverted Inverte	2906 2908 2903 2904 2909 2910 2900 2907 1807 1806 1809
Energy.5.PulseScale  Amount of energy per pulse (as 'Energy 1')  Set the user counter back to zero  Dool 0B57  Energy.5.TotEnergy  Energy.5.TotEnergy  Energy.5.TotEnergyUnit  Energy.5.Type  Total energy counter units (as 'Energy 1')  Type of energy counter (0 = Normal, 1 = Global)  Energy.5.UsrEnergy  User resetable energy  EventLog.Event01ID  Event 1 identification  Event 2 Identification  Event 2 type  Event 2 type  Event 3 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 2 type  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event ID  Even	2908 2903 2904 2909 2910 2900 2907 1807 1806 1809
Energy.5.PulseScale  Amount of energy per pulse (as 'Energy 1')  Set the user counter back to zero  Dool 0B57  Energy.5.TotEnergy  Energy.5.TotEnergy  Energy.5.TotEnergyUnit  Energy.5.Type  Total energy counter units (as 'Energy 1')  Type of energy counter (0 = Normal, 1 = Global)  Energy.5.UsrEnergy  User resetable energy  EventLog.Event01ID  Event 1 identification  Event 2 Identification  Event 2 type  Event 2 type  Event 3 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 2 type  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event 1 Identification  Event 2 Identification  Event 3 Identification  Event 4 Identification  Event 1 Identification  Event ID  Even	2903 2904 2909 2910 2900 2907 1807 1806 1809
Energy.5.TotEnergy Energy.5.TotEnergyUnit Energy.5.TotEnergyUnit Energy.5.Type Type of energy counter (0 = Normal, 1 = Global) Energy.5.UsrEnergy User resetable energy Energy.5.UsrEnergyUnit User energy units multiplier (as 'Energy 1') EventLog.Event01ID Event 1 identification EventLog.Event01Type Event 2 Identification EventLog.Event02ID Event 2 Identification Event 2 Identification Event 3 Identification Event 1 Identification Event 2 Identification Event 3 Identification Event 1 Identification Event 2 Identification Event 3 Identification Event 1 Identification Eve	2904 2909 2910 2900 2907 1807 1806 1809
Energy.5.TotEnergyUnit Energy.5.Type Type of energy counter (0 = Normal, 1 = Global) Energy.5.UsrEnergy User resetable energy Energy.5.UsrEnergyUnit User energy units multiplier (as 'Energy 1') EventLog.Event01ID Event 1 identification Event 2 Identification Event 2 Identification Event 2 Identification Event 3 Identification Event 3 Identification Event 6 Identify 162 = IM Wismarch 163 = Pwr1 Ribbon Uint8 0710 Uint8 0710 Uint8 0711	2909 2910 2900 2907 1807 1806 1809
Energy.5.Type  Energy.5.UsrEnergy  User resetable energy  User energy units multiplier (as 'Energy 1')  EventLog.Event01ID  Event 1 identification  EventLog.Event02ID  Event 2 Identification  EventLog.Event02ID  EventLog.Event02Type  EventLog.Event03ID  Event 3 Identification  Event 1 Identification  Event 2 Identification  Event 2 Identification  Event 3 Identification  Event 3 Identification  Event 3 Identification  Event 1 Identifi	2910 2900 2907 1807 1806 1809
Energy.5.UsrEnergy User resetable energy User energy units multiplier (as 'Energy 1')  EventLog.Event01ID EventLog.Event01Type EventLog.Event02ID Event 2 Identification EventLog.Event02Type EventLog.Event02Type EventLog.Event03ID  Event 3 Identification Event 3 Identification Event 4 Identify    Conf Exit	2900 2907 1807 1806 1809
Energy.5.UsrEnergyUnit  User energy units multiplier (as 'Energy 1')  EventLog.Event01ID  Event 1 identification  EventLog.Event01Type  Event 1 type  Event 2 Identification  Event 2 type  EventLog.Event02Type  Event 2 type  Event 2 type  Event 3 Identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 1 identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 1 identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 1 identification  Event 1 identification  Event 2 identification  Event 1 identification  Event 2 identification  Event 2 identification  Event 2 identification  Event 2 identification  Event 3 identification  Event 3 identification  Event 3 identification  Event 3 identification  Event 1 identification  Event 2	2907 1807 1806 1809
EventLog.Event01ID	1807 1806 1809
EventLog.Event01Type EventLog.Event02ID EventLog.Event02ID EventLog.Event02Type EventLog.Event03ID  Event 2 Identification Event 1D  Event 1D    0 = No entry	1806 1809
EventLog.Event02ID EventLog.Event02Type EventLog.Event03ID  Event 2 Identification Event ID    Converted by the converted by	1809
EventLog.Event02Type EventLog.Event03ID  Event 2 type    Conf Exit   161 = InvPwrModRev   162 = HW Mismatch   163 = Pwr1 Ribbon   163 = Pwr1 Ribbo	
EventLog.Event02Type EventLog.Event03ID  Event 2 type    0 = No entry	1808
EventLog.Event03ID Event 3 Identification   1 = Conf Exit   162 = HW Mismatch   163 = Pwr1 Ribbon     uint8   0713	
1	1811
EventLog. Event03Type Event 3 type   3 = Power down   164 = Pwr2 Ribbon     uint8   0712	1810
EventLog.Event04ID Event 4 Identification   5 = QuickStart Exit   166 = Pwr4 Ribbon   167 = Pwr1EEprom   167 = Pwr2EEprom   168	1813
EventLog.Event04ID  Event 4 Identification   7 = Global Avk   168 = Pwr2EEprom   170 = Pwr3EEprom   170 = Pwr3EEprom   170 = Pwr4EEprom   171 = Log Fault   171 = Log Faul	1812
EventLog.Event05ID    23 = Thý open cct.   171 = Log Faúlt   172 = PWR1cal   173 = PWR2cal   25 = Over Temp   173 = PWR2cal   26 = Netw Dip   174 = PWR3cal   0717   174 = PWR3cal   175 = PWR	1815
EventLog.Event05Type Event 5 type 27 = Mains Freq 28 = PMod 24 175 = PWR4cal 176 = Watchdog   uint8 0716	1814
EventLog.Event06ID Event 6 Identification   S1 = TLF   177 = StdlOCal   178 = Opt1lOCal   178 = Opt2lOCal   179 = Opt2lO	1817
EventLog. Event06Type Event 6 type   54 = PLU   180 = Opt3lOCal   191 = Ph1Wdog     uint8   0718	1816
	1819
EventLog.Event07Type Event 7 type   S9 = ClosedLp   195 = Ph2ComFrr   196 = Ph2ComTout   197 = Ph3Wdog   vint8   071A	1818
EventLog.Event08ID Event 8 Identification 83 = Load Overl 198 = Ph3ComĚrr 199 = Ph3ComOut 211 = Fuse Blown uint8 071D	1821
EventLog. Event08Type Event 8 type   112 = Low   212 = WdogFault   213 = PwrRailFail   uint8   071C	1820
EventLog.Event09ID Event 9 Identification 114 = Dev Low 214 = CommsTout 215 = Comms Err 241 = InvRamCsum 215 = Comms Tout 215 = C	1823
EventLog.Event09Type  Event 9 type    131 = Fuse Config   241 = InvRamCsum   242 = DSPnoRSP   242 = DSPnoRSP   242 = DSPwdog   uint8   071E	1822
EventLog.Event10ID Event 10 Identification uint8 0721	1825
EventLog.Event10Type Event 10 type uint8 0720	1824
EventLog.Event11ID Event 11 Identification Event types uint8 0723	1827
EventLog.Event11Type Event 11 type 1 = Instrument 2 = Sys Alm N1 Act 34 = Ind Alm N3 InAct 34 = Ind Alm N3 Ackd 2 = Sys Alm N1 Act 34 = Ind Alm N3 Ackd 34 =	1826
	1829
EventLog. Event12Type	1828
Event og Event 13 Identification   8 = Sýs Alm N3 Act   40 = Prc Alm Ex1Ackd	1831
EventLog.Event13Type    10 = Sys Alm N3 Ackd   42 = Prc Alm Ex2InAct   43 = Prc Alm Ex2Ackd   44 = Prc Alm Ex3Act   45 = Prc Alm Ex3Act   46 = Prc Alm Ex3Act   47 = Prc Alm Ex3Act   48 = Prc Alm Ex3Act   49 = Prc Alm Ex3Act   40 = Prc Alm Ex3	1830
EventLog. Event14ID    Signature   Signatu	1833
EventLog.Event14Type Event 14 type   16 = Prc Alm N1 Ackd   48 = Prc Alm Ex4lnAct   49 = Prc Alm Ex4lnAct   50 = Err Fatal	1832
EventLog. Event15ID Event 15 Identification 19 = Prc Alm N2 Ackd 20 = Prc Alm N3 Act 51 = Err Config 52 = Err General uint8 072B	1835
EventLog.Event15Type	1834
EventLog.Event16ID Event 16 Identification 24 = Prc Alm N4 InAct 25 = Prc Alm N4 NA Ackd 25 = Prc Alm N4 Ackd 26 = InF Pwr1 57 = Err Pwr2 uint8 072D	1837
EventLog.Event16Type   Event 16 type   27 = lnd Alm N1 lnAct   59 = Err Pwr3     uint8   072C	1836
EventLog.Event17ID Event 17 Identification 29 = Ind Alm N2 Act 30 = Ind Alm N2 Index 63 = Err DSP 62 = Err Restart 63 = Err Standby uint8 072F	1839
EventLog.Event17Type Event 17 type uint8 072E	1838
EventLog.Event18ID Event 18 Identification uint8 0731	1841
EventLog.Event18Type Event 18 type uint8 0730	1840

Parameter path	Description	Туре	Hex	Dec
EventLog.Event19ID	Event 19 Identification	uint8	0733	1843
EventLog.Event19Type	Event 19 type	uint8	0732	1842
EventLog.Event20ID	Event 20 Identification	uint8	0735	1845
EventLog.Event20Type	Event 20 type	uint8	0734	1844
EventLog.Event21ID	Event 21 Identification	uint8	0737	1847
EventLog.Event21Type	Event 21 type	uint8	0736	1846
EventLog.Event22ID	Event 22 Identification	uint8	0739	1849
EventLog.Event22Type	Event 22 type	uint8	0738	1848
EventLog.Event23ID	Event 23 Identification	uint8	073B	1851
EventLog.Event23Type	Event 23 type	uint8	073A	1850
EventLog.Event24ID	Event 24 Identification	uint8	073D	1853
EventLog.Event24Type	Event 24 type	uint8	073C	1852
EventLog.Event25ID	Event 25 Identification	uint8	073F	1855
EventLog.Event25Type	Event 25 type	uint8	073E	1854
EventLog.Event26ID	Event 26 Identification	uint8	0741	1857
EventLog.Event26Type	Event 26 type	uint8	0740	1856
EventLog.Event27ID	Event 27 Identification	uint8	0743	1859
EventLog.Event27Type	Event 27 type	uint8	0742	1858
EventLog.Event28ID	Event 28 Identification	uint8	0745	1861
EventLog.Event28Type	Event 28 type	uint8	0744	1860
EventLog.Event29ID	Event 29 Identification	uint8	0747	1863
EventLog.Event29Type	Event 29 type	uint8	0746	1862
EventLog.Event30ID	Event 30 Identification	uint8	0749	1865
EventLog.Event30Type	Event 30 type	uint8	0748	1864
EventLog.Event31ID	Event 31 Identification	uint8	074B	1867
EventLog.Event31Type	Event 31 type	uint8	074A	1866
EventLog.Event32ID	Event 32 Identification	uint8	074D	1869
EventLog.Event32Type	Event 32 type	uint8	074C	1868
EventLog.Event33ID	Event 33 Identification	uint8	074F	1871
EventLog.Event33Type	Event 33 type	uint8	074E	1870
EventLog.Event34ID	Event 34 Identification	uint8	0751	1873
EventLog.Event34Type	Event 34 type	uint8	0750	1872
EventLog.Event35ID	Event 35 Identification	uint8	0753	1875
EventLog.Event35Type	Event 35 type	uint8	0752	1874
EventLog.Event36ID	Event 36 Identification	uint8	0755	1877
EventLog.Event36Type	Event 36 type	uint8	0754	1876
EventLog.Event37ID	Event 37 Identification	uint8	0757	1879
EventLog.Event37Type	Event 37 type	uint8	0756	1878
EventLog.Event38ID	Event 38 Identification	uint8	0759	1881
EventLog.Event38Type	Event 38 type	uint8	0758	1880
EventLog.Event39ID	Event 39 Identification	uint8	075B	1883
EventLog.Event39Type	Event 39 type	uint8	075A	1882
EventLog.Event40ID	Event 40 Identification	uint8	075D	1885
EventLog.Event40Type	Event 40 type	uint8	075C	1884
EventLog.Status	Status word to indicate instrument errors via comms	uint8	075F	1887
Faultdet.AlarmStatus1	Alarm Status Word 1	uint16	06A8	1704

Parameter path	Description	Туре	Hex	Dec
Faultdet.AlarmStatus2	Alarm Status Word 2	uint16	06A9	1705
Faultdet.AnyFuseAl	Any Fuse Blown alarm	uint8	06A3	1699
Faultdet.AnyNetwAl	Any Network Process Alarm	uint8	06A2	1698
Faultdet.GeneralAck	Global Acknowledge	uint8	069F	1695
Faultdet.GlobalDis	Global Disable all alarms	uint8	06A4	1700
Faultdet.StratStatus	Strategy Status Word	uint16	06A6	1702
	Bit 0 = Network 1 not firing			
	Bit 1 = Network 1 not synchronised			
	Bit 2 = Network 2 not firing			
	Bit 3 = Network 2 not synchronised			
	Bit 4 = Network 3 not firing			
	Bit 5 = Network 3 not synchronised			
	Bit 6 = Network 4 not firing			
	Bit 7 = Network 4 not synchronised			
	Bit 8= Strategy in Standby Mode			
	Bit 9 = Strategy in Telemetry Mode			
	Bits 10 to 15 Reserved.			
Faultdet.Watchdog	Indicates Watchdog Relay Status (1 = Active)	uint8	06A7	1703
FiringOP.1.DelayedTrigger	Delayed Triggering for transformer loads	uint8	04BA	1210
FiringOP.1.Enable	Enable of the firing output block	uint8	04BE	1214
FiringOP.1.In	Input of the firing output block	float32	04BB	1214
FiringOP.1.LoadCoupling	Load coupling configuration (0 = 3S, 1 = 3D, 2 = 4S,	uint8	04B4	1204
TimigOt : 1.Eoadoodpiing	3 = 6D)	dirito	0404	1204
FiringOP.1.LoadType	Load type configuration (0 = Resistive, 1 = XFMR)	uint8	04B5	1205
FiringOP.1.Mode	Firing Mode indication (0 = IHC, 1 = Burst, 2 = PA, 3 = None)	uint8	04B6	1206
FiringOP.1.PaLimitIn	Phase angle input for PA reduction in burst firing	float32	04BC	1212
FiringOP.1.SafetyRamp	Safety ramp duration	float32	04B7	1207
FiringOP.1.SafetyRampStatus	Status of the safety ramp (0 = Ramping, 1 = Finished)	uint8	04BD	1213
FiringOP.1.SoftStart	Soft start duration	float32	04B8	1208
FiringOP.1.SoftStop	Soft stop duration (0 = Off, 1 = On)	float32	04B9	1209
FiringOP.2.DelayedTrigger	Delayed Triggering for transformer loads	uint8	04CF	1231
FiringOP.2.Enable	Enable of the firing output block	uint8	04D3	1235
FiringOP.2.In	Input of the firing output block	float32	04D0	1232
FiringOP.2.LoadCoupling	Load coupling configuration (0 = 3S, 1 = 3D, 2 = 4S, 3 = 6D)	uint8	04C9	1225
FiringOP.2.LoadType	Load type configuration (0 = Resistive, 1 = XFMR)	uint8	04CA	1226
FiringOP.2.Mode	Firing Mode indication (0 = IHC, 1 = Burst, 2 = PA, 3 = None)	uint8	04CB	1227
FiringOP.2.PaLimitIn	Phase angle input for PA reduction in burst firing	float32	04D1	1233
FiringOP.2.SafetyRamp	Safety ramp duration	float32	04CC	1228
FiringOP.2.SafetyRampStatus	Status of the safety ramp (0 = Ramping, 1 = Finished)	uint8	04D2	1234
i illigor.z.oalctyrtailipotatus		I		4000
FiringOP.2.SoftStart	Soft start duration	float32	04CD	1229
	Soft start duration Soft stop duration (0 = Off, 1 = On)	float32 float32		1229
FiringOP.2.SoftStart				
FiringOP.2.SoftStart FiringOP.2.SoftStop	Soft stop duration (0 = Off, 1 = On)	float32	04CE	1230

Parameter path	Description	Туре	Hex	Dec
FiringOP.3.LoadCoupling	Load coupling configuration (0 = 3S, 1 = 3D, 2 = 4S,	uint8	04DE	1246
FiringOP.3.LoadType	3 = 6D) Load type configuration (0 = Resistive, 1 = XFMR)	uint8	04DF	1247
FiringOP.3.Mode	Firing Mode indication	uint8	04E0	1248
Timigor .o.iwodo	(0 = IHC, 1 = Burst, 2 = PA, 3 = None)	dirito	0420	1240
FiringOP.3.PaLimitIn	Phase angle input for PA reduction in burst firing	float32	04E6	1254
FiringOP.3.SafetyRamp	Safety ramp duration	float32	04E1	1249
FiringOP.3.SafetyRampStatus	Status of the safety ramp (0 = Ramping, 1 = Finished)	uint8	04E7	1255
FiringOP.3.SoftStart	Soft start duration	float32	04E2	1250
FiringOP.3.SoftStop	Soft stop duration (0 = Off, 1 = On)	float32	04E3	1251
FiringOP.4.DelayedTrigger	Delayed Triggering for transformer loads	uint8	04F9	1273
FiringOP.4.Enable	Enable of the firing output block	uint8	04FD	1277
FiringOP.4.In	Input of the firing output block	float32	04FA	1274
FiringOP.4.LoadCoupling	Load coupling configuration (0 = 3S, 1 = 3D, 2 = 4S, 3 = 6D)	uint8	04F3	1267
FiringOP.4.LoadType	Load type configuration (0 = Resistive, 1 = XFMR)	uint8	04F4	1268
FiringOP.4.Mode	Firing Mode indication (0 = IHC, 1 = Burst, 2 = PA, 3 = None)	uint8	04F5	1269
FiringOP.4.PaLimitIn	Phase angle input for PA reduction in burst firing	float32	04FB	1275
FiringOP.4.SafetyRamp	Safety ramp duration	float32	04F6	1270
FiringOP.4.SafetyRampStatus	Status of the safety ramp (0 = Ramping, 1 = Finished)	uint8	04FC	1276
FiringOP.4.SoftStart	Soft start duration	float32	04F7	1271
FiringOP.4.SoftStop	Soft stop duration (0 = Off, 1 = On)	float32	04F8	1272
Instrument.Configuration.IOModule	Number of Option IO Modules fitted	uint8	08A1	2209
s				
Instrument.Configuration.PwrModT ype	Type of module. (0 = None, 1 = External. 2 = Internal 3 = MC Air cooled; 4 = MC Water cooled)	uint8	08B4	2228
Instrument.Configuration.LoadCou pling	Load coupling configuration (0 = 3S, 1 = 3D, 2 = 4S, 3 = 6D)	uint8	089A	2202
Instrument.Configuration.				
LoadCoupling2ndNetwork				
LoadCoupling2ndNetwork	Load 2 coupling configuration (as Load Coupling)	uint8	08A2	2210
Instrument.Configuration.LoadMFit ted	Load Management Card Fitted (0 = No, 1 = Yes)	bool	08A4	2212
Instrument.Configuration.NetType	The type of network (0 = 3Ph, 1 = 1Ph, 2 = 2Ph)	uint8	0897	2199
Instrument.Configuration.PowerMo dules	Number of power modules fitted	uint8	0896	2198
Instrument.Configuration.PwrMod1 Rev	Power Module 1 Revision (0 = invalid)	uint8	089C	2204
Instrument.Configuration.PwrMod2 Rev	Power Module 2 Revision (0 = invalid)	uint8	089D	2205
Instrument.Configuration.PwrMod3	Power Module 3 Revision (0 = invalid)	uint8	089E	2206
Instrument.Configuration.PwrMod4 Rev	Power Module 4 Revision (0 = invalid)	uint8	089F	2207
Instrument.Configuration.RemoteP	Remote PV	float32	08A3	2211
Instrument.Configuration.TimerRes	Sets resolution of time parameters (0 = 0.1sec, 1 = 0.1 min)	uint8	08A0	2208

Parameter path	Description	Туре	Hex	Dec
Instrument.Display.Language	Selected Language (1 = Eng, 2 = Fra, 4 = Ger, 8 = Ita, 16 = Spa)	uint8	0879	2169
Instrument.Display.SerialNo	Serial Number	int32	087A	2170
Instrument.ID	Instrument Identifier (E190h)	int16	007A	122
Instrument.Mode	Instrument Mode (0 = Operator mode, 1 = Standby, 2 = Config)	uint8	00C7	199
IO.AnalogIP.1.Main.MeasVal	Measured value	float32	05D3	1491
IO.AnalogIP.1.Main.PV	Process variable	float32	05D4	1492
IO.AnalogIP.1.Main.RangeHigh	High input range for scaling to process units	float32	05D1	1489
IO.AnalogIP.1.Main.RangeLow	Low input range for scaling to process units	float32	05D2	1490
IO.AnalogIP.1.Main.Type	Specify the input type 0 = 0 to 10V	uint8	05D0	1488
IO.AnalogIP.2.Main.MeasVal	Measured value	float32	05E2	1506
IO.AnalogIP.2.Main.PV	Process variable	float32	05E3	1507
IO.AnalogIP.2.Main.RangeHigh	High input range for scaling to process units	float32	05E0	1504
IO.AnalogIP.2.Main.RangeLow	Low input range for scaling to process units	float32	05E1	1505
IO.AnalogIP.2.Main.Type	Specify the input type (as IP1 above)	uint8	05DF	1503
IO.AnalogIP.3.Main.MeasVal	Measured value	float32	05F1	1521
IO.AnalogIP.3.Main.PV	Process variable	float32	05F2	1522
IO.AnalogIP.3.Main.RangeHigh	High input range for scaling to process units	float32	05EF	1519
IO.AnalogIP.3.Main.RangeLow	Low input range for scaling to process units	float32	05F0	1520
IO.AnalogIP.3.Main.Type	Specify the input type (as IP1 above)	uint8	05EE	1518
IO.AnalogIP.4.Main.MeasVal	Measured value	float32	0600	1536
IO.AnalogIP.4.Main.PV	Process variable	float32	0601	1537
IO.AnalogIP.4.Main.RangeHigh	High input range for scaling to process units	float32	05FE	1534
IO.AnalogIP.4.Main.RangeLow	Low input range for scaling to process units	float32	05FF	1535
IO.AnalogIP.4.Main.Type	Specify the input type (as IP1 above)	uint8	05FD	1533
IO.AnalogIP.5.Main.MeasVal	Measured value	float32	060F	1551
IO.AnalogIP.5.Main.PV	Process variable	float32	0610	1552
IO.AnalogIP.5.Main.RangeHigh	High input range for scaling to process units	float32	060D	1549
IO.AnalogIP.5.Main.RangeLow	Low input range for scaling to process units	float32	060E	1550
IO.AnalogIP.5.Main.Type	Specify the input type (as IP1 above)	uint8	060C	1548
IO.AnalogOP.1.AlmAck.OutputFault	Process alarm acknowledge: Output Fault (0 = NoAck, 1 = Ack)	uint8	0624	1572
IO.AnalogOP.1.AlmDet.OutputFault	Process alarm detection status: Output Fault (0 = Inactive; 1 = Active)	uint8	0621	1569
IO.AnalogOP.1.AlmDis.OutputFault	Process alarm: Output Fault (0 = Enable, 1 = Disable)	uint8	0620	1568
IO.AnalogOP.1.AlmLat.OutputFault	Process alarm latch request: Output Fault (0 = NoLatch, 1 = Latch)	uint8	0623	1571
IO.AnalogOP.1.AlmSig.OutputFault	Process alarm signalling status: Output Fault (0 = Not Latched, 1 = Latched)	uint8	0622	1570
IO.AnalogOP.1.AlmStop.OutputFau	Process alarm stop request: Output Fault (0 = No stop, 1 = Stop)	uint8	0625	1573
IO.AnalogOP.1.Main.MeasVal	Measured value	float32	061F	1567
IO.AnalogOP.1.Main.PV	Process variable	float32	061E	1566
IO.AnalogOP.1.Main.RangeHigh	High input range for scaling from process units	float32	061C	1564

Parameter path	Description	Туре	Hex	Dec
IO.AnalogOP.1.Main.RangeLow	Low input range for scaling from process units	float32	061D	1565
IO.AnalogOP.1.Main.Type	Specify the output type	uint8	061B	1563
	0 = 0 to 10V			
IO.AnalogOP.2.AlmAck.OutputFaul	Process alarm acknowledge: Output Fault (as OP.1)	uint8	0639	1593
t				
IO.AnalogOP.2.AlmDet.OutputFault	Process alarm detection status: Output Fault (as OP.1)	uint8	0636	1590
IO.AnalogOP.2.AlmDis.OutputFault	Process alarm: Output Fault (as OP.1)	uint8	0635	1589
IO.AnalogOP.2.AlmLat.OutputFault	Process alarm latch request: Output Fault (as OP.1)	uint8	0638	1592
IO.AnalogOP.2.AlmSig.OutputFault	Process alarm signalling status: Output Fault (as OP.1)	uint8	0637	1591
IO.AnalogOP.2.AlmStop.OutputFau	Process alarm stop request: Output Fault (as OP.1)	uint8	063A	1594
IO.AnalogOP.2.Main.MeasVal	Measured value	float32	0634	1588
IO.AnalogOP.2.Main.PV	Process variable	float32	0633	1587
IO.AnalogOP.2.Main.RangeHigh	High input range for scaling from process	float32	0631	1585
IO.AnalogOP.2.Main.RangeLow	Low input range for scaling from process	float32	0632	1586
IO.AnalogOP.2.Main.Type	Specify the output type (as OP.1)	uint8	0630	1584
IO.AnalogOP.3.AlmAck.OutputFault	Process alarm acknowledge: Output Fault (as OP.1)	uint8	064E	1614
IO.AnalogOP.3.AlmDet.OutputFault	Process alarm detection status: Output Fault (as OP.1)	uint8	064B	1611
IO.AnalogOP.3.AlmDis.OutputFault	Process alarm: Output Fault (as OP.1)	uint8	064A	1610
IO.AnalogOP.3.AlmLat.OutputFault	Process alarm latch request: Output Fault (as OP.1)	uint8	064D	1613
IO.AnalogOP.3.AlmSig.OutputFault	Process alarm signalling status: Output Fault (as OP.1)	uint8	064C	1612
IO.AnalogOP.3.AlmStop.OutputFau	Process alarm stop request: Output Fault (as OP.1)	uint8	064F	1615
IO.AnalogOP.3.Main.MeasVal	Measured value	float32	0649	1609
IO.AnalogOP.3.Main.PV	Process variable	float32		1608
IO.AnalogOP.3.Main.RangeHigh	High input range for scaling from process	float32	0646	1606
IO.AnalogOP.3.Main.RangeLow	Low input range for scaling from process	float32	0647	1607
IO.AnalogOP.3.Main.Type	Specify the output type (as OP.1)	uint8	0645	1605
IO.AnalogOP.4.AlmAck.OutputFaul	Process alarm acknowledge: Output Fault (as OP.1)	uint8	0663	1635
IO.AnalogOP.4.AlmDet.OutputFault	Process alarm detection status: Output Fault (as OP.1)	uint8	0660	1632
IO.AnalogOP.4.AlmDis.OutputFault	Process alarm: Output Fault (as OP.1)	uint8	065F	1631
IO.AnalogOP.4.AlmLat.OutputFault	Process alarm latch request: Output Fault (as OP.1)	uint8	0662	1634
IO.AnalogOP.4.AlmSig.OutputFault	Process alarm signalling status: Output Fault (as OP.1)	uint8	0661	1633
IO.AnalogOP.4.AlmStop.OutputFau		uint8	0664	1636
IO.AnalogOP.4.Main.MeasVal	Measured value	float32	065E	1630
IO.AnalogOP.4.Main.PV	Process variable	float32		1629
IO.AnalogOP.4.Main.RangeHigh	High input range for scaling from process	float32		1627
IO.AnalogOP.4.Main.RangeLow	Low input range for scaling from process	float32		1628
IO.AnalogOP.4.Main.Type	Specify the output type (as OP.1)	uint8	065A	1626
	1 71 \ - 7		l	

Parameter path	Description	Туре	Hex	Dec
IO.Digital.1.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	0559	1369
IO.Digital.1.MeasVal	Measured value (for outputs, 1 = output high)	bool	055A	1370
IO.Digital.1.PV	Process variable	bool	055B	1371
IO.Digital.1.Type	Specify the digital IO type 0 = Logic input; 1 = Contact input; 2 = Logic output.	uint8	0558	1368
IO.Digital.2.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	0568	1384
IO.Digital.2.MeasVal	Measured value (for outputs, 1 = output high)	bool	0569	1385
IO.Digital.2.PV	Process variable	bool	056A	1386
IO.Digital.2.Type	As IO.Digital.1.Type	uint8	0567	1383
IO.Digital.3.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	0577	1399
IO.Digital.3.MeasVal	Measured value (for outputs, 1 = output high)	bool	0578	1400
IO.Digital.3.PV	Process variable	bool	0579	1401
IO.Digital.3.Type	As IO.Digital.1.Type	uint8	0576	1398
IO.Digital.4.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	0586	1414
IO.Digital.4.MeasVal	Measured value (for outputs, 1 = output high)	bool	0587	1415
IO.Digital.4.PV	Process variable	bool	0588	1416
IO.Digital.4.Type	As IO.Digital.1.Type	uint8	0585	1413
IO.Digital.5.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	0595	1429
IO.Digital.5.MeasVal	Measured value (for outputs, 1 = output high)	bool	0596	1430
IO.Digital.5.PV	Process variable	bool	0597	1431
IO.Digital.5.Type	As IO.Digital.1.Type	uint8	0594	1428
IO.Digital.6.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	05A4	1444
IO.Digital.6.MeasVal	Measured value (for outputs, 1 = output high)	bool	05A5	1445
IO.Digital.6.PV	Process variable	bool	05A6	1446
IO.Digital.6.Type	As IO.Digital.1.Type	uint8	05A3	1443
IO.Digital.7.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	05B3	1459
IO.Digital.7.MeasVal	Measured value (for outputs, 1 = output high)	bool	05B4	1460
IO.Digital.7.PV	Process variable	bool	05B5	1461
IO.Digital.7.Type	As IO.Digital.1.Type	uint8	05B2	1458
IO.Digital.8.Invert	Invert the sense of the digital IO (0 = No; 1 = Invert)	bool	05C2	1474
IO.Digital.8.MeasVal	Measured value (for outputs, 1 = output high)	bool	05C3	1475
IO.Digital.8.PV	Process variable	bool	05C4	1476
IO.Digital.8.Type	As IO.Digital.1.Type	uint8	05C1	1473
IO.Relay.1.MeasVal	Measured value	bool	0670	1648
IO.Relay.1.PV	Process Variable	bool	066F	1647
IO.Relay.2.MeasVal	Measured value	bool	067C	1660
IO.Relay.2.PV	Process Variable	bool	067B	1659
IO.Relay.3.MeasVal	Measured value	bool	0688	1672
IO.Relay.3.PV	Process Variable	bool	0687	1671
IO.Relay.4.MeasVal	Measured value	bool	0694	1684
IO.Relay.4.PV	Process Variable	bool	0693	1683
IPMonitor.1.AlarmDays	Alarm time (in days) above threshold	uint8	0A5F	2655
IPMonitor.1.AlarmTime	Alarm time above threshold	time32	0A5D	2653
IPMonitor.1.DaysAbove	Days Above Threshold	uint8	0A5E	2654
IPMonitor.1.In	Input	float32	0A57	2647
IPMonitor.1.InStatus	Input Status (0 = Good, 1 = Bad)	bool	0A60	2656

Parameter path	Description	Туре	Hex	Dec
IPMonitor.1.Max	Maximum value	float32	0A59	2649
IPMonitor.1.Min	Minimum value	float32	0A5A	2650
IPMonitor.1.Out	Timer Alarm Output (0 = Off, 1 = On)	bool	0A5C	2652
IPMonitor.1.Reset	Reset All Monitor Functions (0 = No, 1 = Yes)	bool	0A58	2648
IPMonitor.1.Threshold	Timer Threshold Value	float32	0A56	2646
IPMonitor.1.TimeAbove	Time in Hours Above Threshold	time32	0A5B	2651
IPMonitor.2.AlarmDays	Alarm time (in days) above threshold	uint8	0A75	2677
IPMonitor.2.AlarmTime	Alarm time above threshold	time32	0A73	2675
IPMonitor.2.DaysAbove	Days Above Threshold	uint8	0A74	2676
IPMonitor.2.In	Input	float32	0A6D	2669
IPMonitor.2.InStatus	Input Status (0 = Good, 1 = Bad)	bool	0A76	2678
IPMonitor.2.Max	Maximum value	float32	0A6F	2671
IPMonitor.2.Min	Minimum value	float32	0A70	2672
IPMonitor.2.Out	Timer Alarm Output (0 = Off, 1 = On)	bool	0A72	2674
IPMonitor.2.Reset	Reset All Monitor Functions (0 = No, 1 = Yes)	bool	0A6E	2670
IPMonitor.2.Threshold	Timer Threshold Value	float32	0A6C	2668
IPMonitor.2.TimeAbove	Time in Hours Above Threshold	time32	0A71	2673
IPMonitor.3.AlarmDays	Alarm time (in days) above threshold	uint8	0A8B	2699
IPMonitor.3.AlarmTime	Alarm time above threshold	time32	0A89	2697
IPMonitor.3.DaysAbove	Days Above Threshold	uint8	0A8A	2698
IPMonitor.3.In	Input	float32	0A83	2691
IPMonitor.3.InStatus	Input Status (0 = Good, 1 = Bad)	bool	0A8C	2700
IPMonitor.3.Max	Maximum value	float32	0A85	2693
IPMonitor.3.Min	Minimum value	float32	0A86	2694
IPMonitor.3.Out	Timer Alarm Output (0 = Off, 1 = On)	bool	0A88	2696
IPMonitor.3.Reset	Reset All Monitor Functions (0 = No, 1 = Yes)	bool	0A84	2692
IPMonitor.3.Threshold	Timer Threshold Value	float32	0A82	2690
IPMonitor.3.TimeAbove	Time in Hours Above Threshold	time32	0A87	2695
IPMonitor.4.AlarmDays	Alarm time (in days) above threshold	uint8	0AA1	2721
IPMonitor.4.AlarmTime	Alarm time above threshold	time32	0A9F	2719
IPMonitor.4.DaysAbove	Days Above Threshold	uint8	0AA0	2720
IPMonitor.4.In	Input	float32	0A99	2713
IPMonitor.4.InStatus	Input Status (0 = Good, 1 = Bad)	bool	0AA2	2722
IPMonitor.4.Max	Maximum value	float32	0A9B	2715
IPMonitor.4.Min	Minimum value	float32	0A9C	2716
IPMonitor.4.Out	Timer Alarm Output (0 = No, 1 = Yes)	bool	0A9E	2718
IPMonitor.4.Reset	Reset All Monitor Functions (0 = No, 1 = Yes)	bool	0A9A	2714
IPMonitor.4.Threshold	Timer Threshold Value	float32	0A98	2712
IPMonitor.4.TimeAbove	Time in Hours Above Threshold	time32	0A9D	2717
Lgc2.1.FallbackType	Fallback Condition (False good, False bad, True Good, True Bad)	uint8	0AB7	2743
Lgc2.1.Hysteresis	Hysteresis	float32	0ABB	2747
Lgc2.1.ln1	Input Value 1	float32	0AB5	2741
Lgc2.1.ln2	Input Value 2	float32	0AB6	2742
Lgc2.1.Invert	Sense of Input Value	uint8	0AB8	2744

Parameter path	Description	Туре	Hex	Dec
Lgc2.1.Oper	Logic Operation (If True; Output = 1 (on))	uint8	0AB4	2740
Lgc2.1.Out	The Result (0 = Off, 1 = On)	bool	0AB9	2745
Lgc2.1.Status	Output Status (0 = Good, 1 = Bad)	bool	0ABA	2746
Lgc2.2.FallbackType	Fallback Condition (as Lgc2.1)	uint8	0AC1	2753
Lgc2.2.Hysteresis	Hysteresis	float32	0AC5	2757
Lgc2.2.In1	Input Value 1	float32	0ABF	2751
Lgc2.2.In2	Input Value 2	float32	0AC0	2752
Lgc2.2.Invert	Sense of Input Value	uint8	0AC2	2754
Lgc2.2.Oper	Logic Operation (as Lgc2.1)	uint8	0ABE	2750
Lgc2.2.Out	The Result (0 = Off, 1 = On)	bool	0AC3	2755
Lgc2.2.Status	Output Status (0 = Good, 1 = Bad)	bool	0AC4	2756
Lgc2.3.FallbackType	Fallback Condition (as Lgc2.1)	uint8	0ACB	2763
Lgc2.3.Hysteresis	Hysteresis	float32	0ACF	2767
Lgc2.3.In1	Input Value 1	float32	0AC9	2761
Lgc2.3.In2	Input Value 2	float32	0ACA	2762
Lgc2.3.Invert	Sense of Input Value	uint8	0ACC	2764
Lgc2.3.Oper	Logic Operation (as Lgc2.1)	uint8	0AC8	2760
Lgc2.3.Out	The Result (0 = Off, 1 = On)	bool	0ACD	2765
Lgc2.3.Status	Output Status (0 = Good, 1 = Bad)	bool	0ACE	2766
Lgc2.4.FallbackType	Fallback Condition (as Lgc2.1)	uint8	0AD5	2773
Lgc2.4.Hysteresis	Hysteresis	float32	0AD9	2777
Lgc2.4.In1	Input Value 1	float32	0AD3	2771
Lgc2.4.In2	Input Value 2	float32	0AD4	2772
Lgc2.4.Invert	Sense of Input Value	uint8	0AD6	2774
Lgc2.4.Oper	Logic Operation (as Lgc2.1)	uint8	0AD2	2770
Lgc2.4.Out	The Result (0 = Off, 1 = On)	bool	0AD7	2775
Lgc2.4.Status	Output Status (0 = Good, 1 = Bad)	bool	0AD8	2776
Lgc8.1.In1	Input 1 Value (0 = Off, 1 = On)	bool	09B1	2481
Lgc8.1.In2	Input 2 Value (0 = Off, 1 = On)	bool	09B2	2482
Lgc8.1.In3	Input 3 Value (0 = Off, 1 = On)	bool	09B3	2483
Lgc8.1.In4	Input 4 Value (0 = Off, 1 = On)	bool	09B4	2484
Lgc8.1.In5	Input 5 Value (0 = Off, 1 = On)	bool	09B5	2485
Lgc8.1.In6	Input 6 Value (0 = Off, 1 = On)	bool	09B6	2486
Lgc8.1.ln7	Input 7 Value (0 = Off, 1 = On)	bool	09B7	2487
Lgc8.1.ln8	Input 8 Value (0 = Off, 1 = On)	bool	09B8	2488
Lgc8.1.InInvert	Invert Selected Inputs	uint8	09AF	2479
Lgc8.1.NumIn	Number of Inputs	uint8	09B0	2480
Lgc8.1.Oper	Operation (0 = Off, 1 = AND, 2 = OR, 3 = XOR)	uint8	09AE	2478
Lgc8.1.Out	Output Value	bool	09B9	2489
Lgc8.1.OutInvert	Invert the Output (0 = No, 1 = Yes)	bool	09BA	2490
Lgc8.2.In1	Input 1 Value (0 = Off, 1 = On)	bool	09C8	2504
Lgc8.2.ln2	Input 2 Value (0 = Off, 1 = On)	bool	09C9	2505
Lgc8.2.ln3	Input 3 Value (0 = Off, 1 = On)	bool	09CA	2506
Lgc8.2.ln4	Input 4 Value (0 = Off, 1 = On)	bool	09CA	2507
L900.2.111 <del>4</del>	Imput + value (0 - OII, 1 - OII)	וטטו	USCD	2307

Parameter path	Description	Туре	Hex	Dec
Lgc8.2.In5	Input 5 Value (0 = Off, 1 = On)	bool	09CC	2508
Lgc8.2.In6	Input 6 Value (0 = Off, 1 = On)	bool	09CD	2509
Lgc8.2.In7	Input 7 Value (0 = Off, 1 = On)	bool	09CE	2510
Lgc8.2.ln8	Input 8 Value	bool	09CF	2511
Lgc8.2.InInvert	Invert Selected Inputs	uint8	09C6	2502
Lgc8.2.NumIn	Number of Inputs	uint8	09C7	2503
Lgc8.2.Oper	Operation (0 = Off, 1 = AND, 2 = OR, 3 = XOR)	uint8	09C5	2501
Lgc8.2.Out	Output Value	bool	09D0	2512
Lgc8.2.OutInvert	Invert the Output (0 = No, 1 = Yes)	bool	09D1	2513
Lgc8.3.In1	Input 1 Value (0 = Off, 1 = On)	bool	09DF	2527
Lgc8.3.In2	Input 2 Value (0 = Off, 1 = On)	bool	09E0	2528
Lgc8.3.In3	Input 3 Value (0 = Off, 1 = On)	bool	09E1	2529
Lgc8.3.In4	Input 4 Value (0 = Off, 1 = On)	bool	09E2	2530
Lgc8.3.In5	Input 5 Value (0 = Off, 1 = On)	bool	09E3	2531
Lgc8.3.In6	Input 6 Value (0 = Off, 1 = On)	bool	09E4	2532
Lgc8.3.In7	Input 7 Value (0 = Off, 1 = On)	bool	09E5	2533
Lgc8.3.In8	Input 8 Value (0 = Off, 1 = On)	bool	09E6	2534
Lgc8.3.InInvert	Invert Selected Inputs	uint8	09DD	2525
Lgc8.3.NumIn	Number of Inputs	uint8	09DE	2526
Lgc8.3.Oper	Operation (0 = Off, 1 = AND, 2 = OR, 3 = XOR)	uint8	09DC	2524
Lgc8.3.Out	Output Value	bool	09E7	2535
Lgc8.3.OutInvert	Invert the Output (0 = No, 1 = Yes)	bool	09E8	2536
Lgc8.4.In1	Input 1 Value (0 = Off, 1 = On)	bool	09F6	2550
Lgc8.4.In2	Input 2 Value (0 = Off, 1 = On)	bool	09F7	2551
Lgc8.4.In3	Input 3 Value (0 = Off, 1 = On)	bool	09F8	2552
Lgc8.4.In4	Input 4 Value (0 = Off, 1 = On)	bool	09F9	2553
Lgc8.4.In5	Input 5 Value (0 = Off, 1 = On)	bool	09FA	2554
Lgc8.4.In6	Input 6 Value (0 = Off, 1 = On)	bool	09FB	2555
Lgc8.4.In7	Input 7 Value (0 = Off, 1 = On)	bool	09FC	2556
Lgc8.4.In8	Input 8 Value (0 = Off, 1 = On)	bool	09FD	2557
Lgc8.4.InInvert	Invert Selected Inputs	uint8	09F4	2548
Lgc8.4.NumIn	Number of Inputs	uint8	09F5	2549
Lgc8.4.Oper	Operation (0 = Off, 1 = AND, 2 = OR, 3 = XOR)	uint8	09F3	2547
Lgc8.4.Out	Output Value	bool	09FE	2558
Lgc8.4.OutInvert	Invert the Output (0 = No, 1 = Yes)	bool	09FF	2559
LTC.AlmAck.Fuse	System alarm ack: Fuse blown	uint8	0AF2	2802
LTC.AlmAck.Temp	System alarm ack: Over Temp	uint8	0AF3	2803
LTC.AlmDet.Fuse	System alarm detection status: Fuse Blown	uint8	0AEC	2796
LTC.AlmDet.Temp	System alarm detection status: Over Temp	uint8	0AED	2797
LTC.AlmDis.Fuse	System alarm Disable: External Fuse blown	uint8	0AEA	2794
LTC.AlmDis.Temp	System alarm Disable: External Over Temp	uint8	0AEB	2795
LTC.AlmLat.Fuse	System alarm latch: External Fuse Blown	uint8	0AF0	2800
LTC.AlmLat.Temp	System alarm latch: External Over Temp	uint8	0AF1	2801
•	· ·	1		
LTC.AlmSig.Fuse	System alarm signalling status: external Fuse Blown	uint8	0AEE	2798
LTC.AlmSig.Fuse LTC.AlmSig.Temp	System alarm signalling status: external Fuse Blown System alarm signalling status: external Over Temp	uint8 uint8	0AEE 0AEF	2798

Parameter path	Description	Туре	Hex	Dec
LTC.AlmStop.Temp	System alarm stop: Over Tempuint8	uint8	0AF5	2805
LTC.MainPrm.AlFuseIn	External Fuse Fail Alarm Input (1 = Active)	uint8	0AE8	2792
LTC.MainPrm.AlTempIn	External Temperature Failure Alarm Input (1 = active)	uint8	0AE9	2793
LTC.MainPrm.IP	Input of LTC block.	float32	0ADE	2782
LTC.MainPrm.OP1	Output1 of the block.	float32	0AE4	2788
LTC.MainPrm.OP2	Output2 of the block.	float32	0AE5	2789
LTC.MainPrm.OP3	Output3 of the block.	float32	0AE6	2790
LTC.MainPrm.OP4	Output3 of the block.	float32	0AE7	2791
LTC.MainPrm.PAOP	Phase angle input for PA reduction in burst firing	float32	0ADF	2783
LTC.MainPrm.S1	Turn ratio of tap1.	float32	0AE0	2784
LTC.MainPrm.S2	Turn ratio of tap2.	float32	0AE1	2785
LTC.MainPrm.S3	Turn ratio of tap3.	float32	0AE2	2786
LTC.MainPrm.S4	Turn ratio of tap4.	float32	0AE3	2787
LTC.MainPrm.TapNb	Transformer tap number (2 = 2, 3 = 3, 4 = 4)	uint8	0ADD	2781
LTC.MainPrm.Type	LTC Type (0 = Primary, 1 = Secondary)	uint8	0ADC	2780
Math2.1.Fallback	Fallback strategy 0 = ClipBad 1 = ClipGood 2 = FallBad 3 = FallGood 4 = UpscaleBad 6 = DownscaleBad	uint8	08C2	2242
Math2.1.FallbackVal	Fallback Value	float32	08BB	2235
Math2.1.HighLimit	Output High Limit	float32	08BC	2236
Math2.1.In1	Input 1 Value	float32	08B7	2231
Math2.1.In1Mul	Input 1 Scale	float32	08B6	2230
Math2.1.In2	Input 2 Value	float32	08B9	2233
Math2.1.In2Mul	Input 2 Scale	float32	08B8	2232
Math2.1.LowLimit	Output Low Limit	float32	08BD	2237
Math2.1.Oper	Operator       0 = None       6 = SelMax       12 = Log         1 = Add       7 = SelMin       13 = Ln         2 = Sub       8 = HotSwap       14 = Exp         3 = Mul       9 = SmpHld       15 = 10 x         4 = Div       10 = Power       51 = Sel 1         5 = AbsDif       11 = Sqrt	uint8	08BA	2234
Math2.1.Out	Output Value	float32	08BF	2239
Math2.1.Resolution	Output Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XXX, 4 = X.XXXX)	uint8	08C0	2240
Math2.1.Select	Select Between Input 1 (0) and Input 2 (1)	bool	08C3	2243
Math2.1.Status	Status (Good = 0; Bad = 1)	bool	08BE	2238
Math2.1.Units	Output Units (0 = None, 1 = Temp, 2 = V, 3 = mV 4 = A, 5 = mA, 6 = pH, 7 = mmHg)	uint8	08C1	2241
Math2.2.Fallback	Fallback strategy (as for Math2.1)	uint8	08DA	2266
Math2.2.FallbackVal	Fallback Value	float32	08D3	2259
Math2.2.HighLimit	Output High Limit	float32	08D4	2260
Math2.2.In1	Input 1 Value	float32	08CF	2255
Math2.2.In1Mul	Input 1 Scale	float32	08CE	2254
Math2.2.In2	Input 2 Value	float32	08D1	2257
Math2.2.In2Mul	Input 2 Scale	float32	08D0	2256
Math2.2.LowLimit	Output Low Limit	float32	08D5	2261

Parameter path	Description	Туре	Hex	Dec
Math2.2.Oper	Operator (as for Math2.1) 2258	uint8	08D2	2258
Math2.2.Out	Output Value	float32	08D7	2263
Math2.2.Resolution	Output Resolution (as for Math2.1)	uint8	08D8	2264
Math2.2.Select	Select Between Input 1 (0) and Input 2 (1)	bool	08DB	2267
Math2.2.Status	Status (Good = 0; Bad = 1)	bool	08D6	2262
Math2.2.Units	Output Units (as for Math2.1)	uint8	08D9	2265
Math2.3.Fallback	Fallback strategy (as for Math2.1)	uint8	08F2	2290
Math2.3.FallbackVal	Fallback Value	float32	08EB	2283
Math2.3.HighLimit	Output High Limit	float32	08EC	2284
Math2.3.In1	Input 1 Value	float32	08E7	2279
Math2.3.In1Mul	Input 1 Scale	float32	08E6	2278
Math2.3.In2	Input 2 Value	float32	08E9	2281
Math2.3.In2Mul	Input 2 Scale	float32	08E8	2280
Math2.3.LowLimit	Output Low Limit	float32	08ED	2285
Math2.3.Oper	Operator (as for Math2.1)	uint8	08EA	2282
Math2.3.Out	Output Value	float32	08EF	2287
Math2.3.Resolution	Output Resolution (as for Math2.1)	uint8	08F0	2288
Math2.3.Select	Select Between Input 1 (0) and Input 2 (1)	bool	08F3	2291
Math2.3.Status	Status (Good = 0; Bad = 1)	bool	08EE	2286
Math2.3.Units	Output Units (as for Math2.1)	uint8	08F1	2289
Math2.4.Fallback	Fallback strategy (as for Math2.1)	uint8	090A	2314
Math2.4.FallbackVal	Fallback Value	float32	0903	2307
Math2.4.HighLimit	Output High Limit	float32	0904	2308
Math2.4.In1	Input 1 Value	float32	08FF	2303
Math2.4.In1Mul	Input 1 Scale	float32	08FE	2302
Math2.4.In2	Input 2 Value	float32	0901	2305
Math2.4.In2Mul	Input 2 Scale	float32	0900	2304
Math2.4.LowLimit	Output Low Limit	float32	0905	2309
Math2.4.Oper	Operator (as for Math2.1)	uint8	0902	2306
Math2.4.Out	Output Value	float32	0907	2311
Math2.4.Resolution	Output Resolution (as for Math2.1)	uint8	0908	2312
Math2.4.Select	Select Between Input 1 (0) and Input 2 (1)	bool	090B	2315
Math2.4.Status	Status (Good = 0; Bad = 1)	bool	0906	2310
Math2.4.Units	Output Units (as for Math2.1)	uint8	0909	2313
Modultr.1.CycleTime	Cycle time for fixed modulator	uint16	045F	1119
Modultr.1.In	Input of the modulator block	float32	045D	1117
Modultr.1.LgcMode	Logic mode cycle selection (0 = 1/2 cycle, 1 = Full cycle)	uint8	0460	1120
Modultr.1.MinOnTime	Minimum on time for variable modulator	uint16	045E	1118
Modultr.1.Mode	Modulator mode (0 = IHC, 1 = BurstVar, 2 = BurstFix, 3 = Lgc, 4 = PA)	uint8	0462	1122
Modultr.1.Out	Modulator logical output	float32	045C	1116
Modultr.1.PLMin	Load management interface input	uint16	0461	1121
Modultr.1.SwitchPA	Switch Burst PA (0 = Burst, 1 = PA)	uint8	0466	1126
Modultr.2.CycleTime	Cycle time for fixed modulator	uint16	0475	1141
	1			

Parameter path	Description	Туре	Hex	Dec
Modultr.2.In	Input of the modulator block	float32	0473	1139
Modultr.2.LgcMode	Logic mode cycle selection (as Modultr1)	uint8	0476	1142
Modultr.2.MinOnTime	Minimum on time for variable modulator	uint16	0474	1140
Modultr.2.Mode	Modulator mode (as Modultr1)	uint8	0478	1144
Modultr.2.Out	Modulator logical output	float32	0472	1138
Modultr.2.PLMin	Load management interface input	uint16	0477	1143
Modultr.2.SwitchPA	Switch Burst PA (as Modultr1)	uint8	047C	1148
Modultr.3.CycleTime	Cycle time for fixed modulator	uint16	048B	1163
Modultr.3.In	Input of the modulator block	float32	0489	1161
Modultr.3.LgcMode	Logic mode cycle selection (as Modultr1)	uint8	048C	1164
Modultr.3.MinOnTime	Minimum on time for variable modulator	uint16	048A	1162
Modultr.3.Mode	Modulator mode (as Modultr1)	uint8	048E	1166
Modultr.3.Out	Modulator logical output	float32	0488	1160
Modultr.3.PLMin	Load management interface input	uint16	048D	1165
Modultr.3.SwitchPA	Switch Burst PA (as Modultr1)	uint8	0492	1170
Modultr.4.CycleTime	Cycle time for fixed modulator	uint16	04A1	1185
Modultr.4.In	Input of the modulator block	float32	049F	1183
Modultr.4.LgcMode	Logic mode cycle selection (as Modultr1)	uint8	04A2	1186
Modultr.4.MinOnTime	Minimum on time for variable modulator	uint16	04A0	1184
Modultr.4.Mode	Modulator mode (as Modultr1)	uint8	04A4	1188
Modultr.4.Out	Modulator logical output	float32	049E	1182
Modultr.4.PLMin	Load management interface input	uint16	04A3	1187
Modultr.4.SwitchPA	Switch Burst PA (as Modultr1)	uint8	04A8	1192
Network.1.AlmAck.ChopOff	Process alarm ack: Chop Off (0 = NoAck, 1 = Ack)	uint8	0187	391
Network.1.AlmAck.FreqFault	System alarm ack: Frequency Fault (as ChopOff)	uint8	0184	388
Network.1.AlmAck.FuseBlown	System alarm ack: Fuse Blown (as ChopOff)	uint8	0181	385
Network.1.AlmAck.MainsVoltFault	Process alarm ack: Mains Voltage Fault (as ChopOff)	uint8	018A	394
Network.1.AlmAck.MissMains	System alarm ack: Missing Mains (as ChopOff)	uint8	017E	382
Network.1.AlmAck.NetworkDips	System alarm ack: Mains Voltage Dips (as ChopOff)	uint8	0183	387
Network.1.AlmAck.OpenThyr	System alarm ack: Open Thyristor (as ChopOff)	uint8	0180	384
Network.1.AlmAck.OverCurrent	Indication alarm ack: Over Current (as ChopOff)	uint8	018C	396
Network.1.AlmAck.OverTemp	System alarm ack: Over Temperature (as ChopOff)	uint8	0182	386
Network.1.AlmAck.PB24VFail	System alarm ack: Power Board 24V Failure (as ChopOff)	uint8	0185	389
Network.1.AlmAck.PLF	Process alarm ack: Partial Load Failure (as ChopOff)	uint8	0188	392
Network.1.AlmAck.PLU	Process alarm ack: Partial Load Unbalance (as ChopOff)	uint8	0189	393
Network.1.AlmAck.PreTemp	Process alarm ack: Pre-Temperature (as ChopOff)	uint8	018B	395
Network.1.AlmAck.ThyrSC	System alarm ack: Thyristor Short Circuit (as ChopOff)	uint8	017F	383
Network.1.AlmAck.TLF	Process alarm ack: Total Load Failure (as ChopOff)	uint8	0186	390
Network.1.AlmDet.ChopOff	Process alarm detection status: Chop Off (0 = Inactive, 1 = Active)	uint8	015A	346
Network.1.AlmDet.FreqFault	System alarm detection status: Frequency Fault (0 = Inactive, 1 = Active)	uint8	0157	343
Network.1.AlmDet.FuseBlown	System alarm detection status: Fuse Blown (0 = Inactive, 1 = Active)	uint8	0154	340

Parameter path	Description	Туре	Hex	Dec
Network.1.AlmDet.MainsVoltFault	Process alarm detection Status: Mains Voltage Fault (0 = Inactive, 1 = Active)	uint8	015D	349
Network.1.AlmDet.MissMains	System alarm detection status: Missing Mains (0 = Inactive, 1 = Active)	uint8	0151	337
Network.1.AlmDet.NetworkDips	System alarm detection status: Mains Voltage Dips (0 = Inactive, 1 = Active)	uint8	0156	342
Network.1.AlmDet.OpenThyr	System alarm detection status: Open Thyristor (0 = Inactive, 1 = Active)	uint8	0153	339
Network.1.AlmDet.OverCurrent	Indication alarm detection Status: Over Current (0 = Inactive, 1 = Active)	uint8	015F	351
Network.1.AlmDet.OverTemp	System alarm detection status: Over Temperature (0 = Inactive, 1 = Active)	uint8	0155	341
Network.1.AlmDet.PB24VFail	System alarm detection status:  Power Board 24V Failure (0 = Inactive, 1 = Active)  (0 = Inactive, 1 = Active)	uint8	0158	344
Network.1.AlmDet.PLF	Process alarm detection status: Partial Load Failure (0 = Inactive, 1 = Active)	uint8	015B	347
Network.1.AlmDet.PLU	Process alarm detection status: Partial Load Unbalance (0 = Inactive, 1 = Active)	uint8	015C	348
Network.1.AlmDet.PreTemp	Process alarm detection Status: Pre-Temperature (0 = Inactive, 1 = Active)	uint8	015E	350
Network.1.AlmDet.ThyrSC	System alarm detection status: Thyristor Short Circuit (0 = Inactive, 1 = Active)	uint8	0152	338
Network.1.AlmDet.TLF	Process alarm detection status: Total Load Failure (0 = Inactive, 1 = Active)	uint8	0159	345
Network.1.AlmDis.ChopOff	Process alarm: Chop Off (0 = Enable, 1 = Disable)	uint8	014B	331
Network.1.AlmDis.FreqFault	System alarm: Frequency Fault (as for ChopOff)	uint8	0148	328
Network.1.AlmDis.FuseBlown	System alarm: Fuse Blown (as for ChopOff)	uint8	0145	325
Network.1.AlmDis.MainsVoltFault	Process alarm: Mains Voltage Fault (as for ChopOff)	uint8	014E	334
Network.1.AlmDis.MissMains	System alarm: Missing Mains (as for ChopOff)	uint8	0142	322
Network.1.AlmDis.NetworkDips	System alarm: Mains Voltage Dips (as for ChopOff)	uint8	0147	327
Network.1.AlmDis.OpenThyr	System alarm: Open Thyristor (as for ChopOff)	uint8	0144	324
Network.1.AlmDis.OverCurrent	Indication alarm: Over Current (as for ChopOff)	uint8	0150	336
Network.1.AlmDis.OverTemp	System alarm: Over Temperature (as for ChopOff)	uint8	0146	326
Network.1.AlmDis.PB24VFail	System alarm: Power Board 24V Failure (as for ChopOff)	uint8	0149	329
Network.1.AlmDis.PLF	Process alarm: Partial Load Failure (as for ChopOff)	uint8	014C	332
Network.1.AlmDis.PLU	Process alarm: Partial Load Unbalance (as for ChopOff)	uint8	014D	333
Network.1.AlmDis.PreTemp	Process alarm: Pre-Temperature (as for ChopOff)	uint8	014F	335
Network.1.AlmDis.ThyrSC	System alarm: Thyristor Short Circuit (as for ChopOff)	uint8	0143	323
Network.1.AlmDis.TLF	Process alarm: Total Load Failure (as for ChopOff)	uint8	014A	330
Network.1.AlmLat.ChopOff	Process alarm latch: Chop Off (0 = NoLatch, 1 = Latch)	uint8	0178	376
Network.1.AlmLat.FreqFault	System alarm latch: Frequency Fault (as for ChopOff)	uint8	0175	373
Network.1.AlmLat.FuseBlown	System alarm latch: Fuse Blown (as for ChopOff)	uint8	0172	370
Network.1.AlmLat.MainsVoltFault	Process alarm latch: Mains Voltage Fault (as for ChopOff)	uint8	017B	379
Network.1.AlmLat.MissMains	System alarm latch: Missing Mains (as for ChopOff)	uint8	016F	367
Network.1.AlmLat.NetworkDips	System alarm latch: Mains Voltage Dips	uint8	0174	372

Parameter path	Description	Туре	Hex	Dec
Network.1.AlmLat.OpenThyr	System alarm latch: Open Thyristor (as for ChopOff)	uint8	0171	369
Network.1.AlmLat.OverCurrent	Indication alarm latch: Over Current (as for ChopOff)	uint8	017D	381
Network.1.AlmLat.OverTemp	System alarm latch: Over Temperature (as for ChopOff)	uint8	0173	371
Network.1.AlmLat.PB24VFail	System alarm latch: Power Board 24V Failure (as for ChopOff)	uint8	0176	374
Network.1.AlmLat.PLF	Process alarm latch: Partial Load Failure (as for ChopOff)	uint8	0179	377
Network.1.AlmLat.PLU	Process alarm latch: Partial Load Unbalance (as for ChopOff)	uint8	017A	378
Network.1.AlmLat.PreTemp	Process alarm latch: Pre-Temperature (as for ChopOff)	uint8	017C	380
Network.1.AlmLat.ThyrSC	System alarm latch: Thyristor Short Circuit (as for ChopOff)	uint8	0170	368
Network.1.AlmLat.TLF	Process alarm latch: Total Load Failure (as for ChopOff)	uint8	0177	375
Network.1.AlmSig.ChopOff	Process alarm signalling status: Chop Off (0 = Not latched, 1 = Latched)	uint8	0169	361
Network.1.AlmSig.FreqFault	System alarm signalling status: Frequency Fault 0 = Not Latched 1 = Ph1 latched 2 = Ph2 latched 3 = Ph1&Ph2 latched 4 = Ph3 latched 5 = Ph1&Ph3 latched 6 = Ph2&Ph3 latched 7 = Ph1, Ph2 7 Ph3 latched	uint8	0166	358
Network.1.AlmSig.FuseBlown	System alarm signalling status: Fuse Blown (As FreqFault)	uint8	0163	355
Network.1.AlmSig.MainsVoltFault	Process alarm signalling status: Mains Voltage Fault (As FreqFault)	uint8	016C	364
Network.1.AlmSig.MissMains	System alarm signalling status: Missing Mains (As FreqFault)	uint8	0160	352
Network.1.AlmSig.NetworkDips	System alarm signalling status: Mains Voltage Dips (As FreqFault)	uint8	0165	357
Network.1.AlmSig.OpenThyr	System alarm signalling status: Open Thyristor (As FreqFault)	uint8	0162	354
Network.1.AlmSig.OverCurrent	Indication alarm signalling status: Over Current (As FreqFault)	uint8	016E	366
Network.1.AlmSig.OverTemp	System alarm signalling status: Over Temperature (As FreqFault)	uint8	0164	356
Network.1.AlmSig.PB24VFail	System alarm signalling status: Power Board 24V Failure (As FreqFault)	uint8	0167	359
Network.1.AlmSig.PLF	Process alarm signalling status: Partial Load Failure (As FreqFault)	uint8	016A	362
Network.1.AlmSig.PLU	Process alarm signalling status: Partial Load Unbalance (As ChopOff)	uint8	016B	363
Network.1.AlmSig.PreTemp	Process alarm signalling status: Pre-Temperature (As FreqFault)	uint8	016D	365
Network.1.AlmSig.ThyrSC	System alarm signalling status: Thyristor Short Circuit (As FreqFault)	uint8	0161	353
Network.1.AlmSig.TLF	Process alarm signalling status: Total Load Failure (As FreqFault)	uint8	0168	360
Network.1.AlmStop.ChopOff	Process alarm stop: Chop Off For all Stop parameters: 0= No stop 1= Stop	uint8	0196	406

Parameter path	Description	Туре	Hex	Dec
Network.1.AlmStop.FreqFault	System alarm stop: Frequency Fault	uint8	0193	403
Network.1.AlmStop.FuseBlown	System alarm stop: Fuse Blown	uint8	0190	400
Network.1.AlmStop.MainsVoltFault	Process alarm stop: Mains Voltage Fault	uint8	0199	409
Network.1.AlmStop.MissMains	System alarm stop: Missing Mains	uint8	018D	397
Network.1.AlmStop.NetworkDips	System alarm stop: Mains Voltage Dips	uint8	0192	402
Network.1.AlmStop.OpenThyr	System alarm stop: Open Thyristor	uint8	018F	399
Network.1.AlmStop.OverCurrent	Indication alarm stop: Over Current	uint8	019B	411
Network.1.AlmStop.OverTemp	System alarm stop: Over Temperature	uint8	0191	401
Network.1.AlmStop.PB24VFail	System alarm stop: Power Board 24V Failure	uint8	0194	404
Network.1.AlmStop.PLF	Process alarm stop: Partial Load Failure	uint8	0197	407
Network.1.AlmStop.PLU	Process alarm stop: Partial Load Unbalance	uint8	0198	408
Network.1.AlmStop.PreTemp	Process alarm stop: Pre-Temperature	uint8	019A	410
Network.1.AlmStop.ThyrSC	System alarm stop: Thyristor Short Circuit	uint8	018E	398
Network.1.AlmStop.TLF	Process alarm stop: Total Load Failure	uint8	0195	405
Network.1.Meas.Frequency	Frequency of the line	float32	0118	280
Network.1.Meas.HtSinkTemp	Heatsink 1 temperature	float32	011A	282
Network.1.Meas.HtSinkTmp2	Heatsink 2 temperature	float32	011B	283
Network.1.Meas.HtSinkTmp3	Heatsink 3 temperature	float32	011C	284
Network.1.Meas.I	Irms of the load	float32	0103	259
Network.1.Meas.I2	Irms2 of the load	float32	0104	260
Network.1.Meas.I3	Irms3 of the load	float32	0105	261
Network.1.Meas.lavg	Average value of Irms	float32	0106	262
Network.1.Meas.IrmsMax	Maximum rms current in a 3 phase network.	float32	0120	288
Network.1.Meas.lsq	Square value of the load current	float32	0108	264
Network.1.Meas.IsqBurst	Average square value of load current in burst firing	float32	0107	263
Network.1.Meas.lsqMax	Maximum squared current in a 3 phase network.	float32	0109	265
Network.1.Meas.P	True power measurement.	float32	0111	273
Network.1.Meas.PBurst	True Power measurement in burst firing	float32	0110	272
Network.1.Meas.PF	Power Factor	float32	0113	275
Network.1.Meas.Q	Reactive Power	float32	0114	276
Network.1.Meas.S	Apparent power measurement	float32	0112	274
Network.1.Meas.V	Vrms of the load	float32	010A	266
Network.1.Meas.V2	Vrms2 of the load	float32	010B	267
Network.1.Meas.V3	Vrms3 of the load	float32	010C	268
Network.1.Meas.Vavg	Average value of Vrms	float32	010D	269
Network.1.Meas.Vline	Line voltage measurement	float32	0100	256
Network.1.Meas.Vline2	Line voltage measurement	float32	0101	257
Network.1.Meas.Vline3	Line voltage measurement	float32	0102	258
Network.1.Meas.VrmsMax	Maximum rms voltages in the 3 phase network.	float32	0121	289
Network.1.Meas.Vsq	Square value of load voltage	float32	010E	270
Network.1.Meas.VsqBurst	Average square value of the load voltage in burst firing	float32	0119	281
Network.1.Meas.VsqMax	Maximum squared voltages in the 3 phase network.	float32	010F	271
Network.1.Meas.Z	Load impedance	float32	0115	277
Network.1.Meas.Z2	Load impedance2	float32	0116	278
Network.1.Meas.Z3	Load impedance3	float32	0117	279

Parameter path	Description	Туре	Hex	Dec
Network.1.Setup.ChopOffThreshol	Chop Off Threshold1	uint8	0124	292
d1				
Network.1.Setup.ChopOffThreshol d2	Chop Off Threshold2	uint16	0125	293
Network.1.Setup.ChopOffWindow	Chop Off Window	uint16	0127	295
Network. 1. Setup. FreqDrift Threshold	Frequency Drift Threshold.	float32	013F	319
Network.1.Setup.HeaterType	Heater type of the load	uint8	012F	303
Network. 1. Setup. Heats in k Pre Temp	Heatsink pre alarm temperature threshold	uint8	012A	298
Network.1.Setup.HeatsinkTmax	Maximum temperature of the heatsink	uint8	0122	290
Network.1.Setup.lextScale	External current scale adjustment	float32	0132	306
Network.1.Setup.IMaximum	Maximum Current of the stack  0 = Ext100A	uint8	0136	310
Network.1.Setup.INominal	Nominal current of the stack	float32	0135	309
Network.1.Setup.NetType	The type of network. Set in Instrument.Configuration. (0 = 3Ph, 1 = 1Ph, 2 = 2Ph)	uint8	0133	307
Network.1.Setup.OverlThreshold	Over Current Threshold	uint16	012E	302
$Network. 1. Setup. Over Volt Threshol\\ d$	Over voltage threshold	uint8	0128	296
Network.1.Setup.PLFAdjusted	Partial load failure adjusted acknowledge (0 = Not adjusted, 1 = Adjusted)	uint8	012B	299
Network.1.Setup.PLFAdjustReq	Partial load failure adjustment request (0 = No, 7 = Request)	uint8	0131	305
Network.1.Setup.PLFSensitivity	Partial load failure sensitivity	uint8	012C	300
Network.1.Setup.PLUthreshold	Partial load unbalance threshold	uint8	012D	301
Network.1.Setup.UnderVoltThreshold	Under voltage threshold	uint8	0129	297
Network.1.Setup.VdipsThreshold	Voltage Dips Threshold	uint8	0123	291
Network.1.Setup.VextScale	External voltage scale adjustment	float32	0140	320
Network.1.Setup.VlineNominal	Line nominal value	float32	0130	304
Network.1.Setup.VloadNominal	Load Nominal voltage	float32	0134	308
Network.1.Setup.VMaximum	Maximum Voltage of the stack (0 = 600V, 1 = 690V)	uint8	0141	321
Network.1.Setup.Zref	PLF reference load impedance phase 1	float32	0139	313
Network.1.Setup.Zref2	PLF reference load impedance phase 2	float32	013A	314
Network.1.Setup.Zref3	PLF reference load impedance phase 3	float32	013B	315
	Network 2. See Network 1 for enumeration values			
Network.2.AlmAck.ChopOff	Process alarm ack: Chop Off	uint8	022C	556
Network.2.AlmAck.FreqFault	System alarm ack: Frequency Fault	uint8	0229	553
Network.2.AlmAck.FuseBlown	System alarm ack: Fuse Blown	uint8	0226	550
Network.2.AlmAck.MainsVoltFault	Process alarm ack: Mains Voltage Fault	uint8	022F	559
Network.2.AlmAck.MissMains	System alarm ack: Missing Mains	uint8	0223	547
	1	1	I	1
Network.2.AlmAck.NetworkDips	System alarm ack: Mains Voltage Dips	uint8	0228	552

Parameter path	Description	Туре	Hex	Dec
Network.2.AlmAck.OverCurrent	Indication alarm ack: Over Current	uint8	0231	561
Network.2.AlmAck.OverTemp	System alarm ack: Over Temperature	uint8	0227	551
Network.2.AlmAck.PB24VFail	System alarm ack: Power Board 24V Failure	uint8	022A	554
Network.2.AlmAck.PLF	Process alarm ack: Partial Load Failure	uint8	022D	557
Network.2.AlmAck.PLU	Process alarm ack: Partial Load Unbalance	uint8	022E	558
Network.2.AlmAck.PreTemp	Process alarm ack: Pre-Temperature	uint8	0230	560
Network.2.AlmAck.ThyrSC	System alarm ack: Thyristor Short Circuit	uint8	0224	548
Network.2.AlmAck.TLF	Process alarm ack: Total Load Failure	uint8	022B	555
Network.2.AlmDet.ChopOff	Process alarm detection status: Chop Off	uint8	01FF	511
Network.2.AlmDet.FreqFault	System alarm detection status: Frequency Fault	uint8	01FC	508
Network.2.AlmDet.FuseBlown	System alarm detection status: Fuse Blown	uint8	01F9	505
Network.2.AlmDet.MainsVoltFault	Process alarm detection Status: Mains Voltage Fault	uint8	0202	514
Network.2.AlmDet.MissMains	System alarm detection status: Missing Mains	uint8	01F6	502
Network.2.AlmDet.NetworkDips	System alarm detection status: Mains Voltage Dips	uint8	01FB	507
Network.2.AlmDet.OpenThyr	System alarm detection status: Open Thyristor	uint8	01F8	504
Network.2.AlmDet.OverCurrent	Indication alarm detection Status: Over Current	uint8	0204	516
Network.2.AlmDet.OverTemp	System alarm detection status: Over Temperature	uint8	01FA	506
Network.2.AlmDet.PB24VFail	System alarm detection status:Power Board 24V Failure	uint8	01FD	509
Network.2.AlmDet.PLF	Process alarm detection status: Partial Load Failure	uint8	0200	512
Network.2.AlmDet.PLU	Process alarm detection status: Partial Load Unbalance	uint8	0201	513
Network.2.AlmDet.PreTemp	Process alarm detection Status: Pre-Temperature	uint8	0203	515
Network.2.AlmDet.ThyrSC	System alarm detection status: Thyristor Short Circuit	uint8	01F7	503
Network.2.AlmDet.TLF	Process alarm detection status: Total Load Failure	uint8	01FE	510
Network.2.AlmDis.ChopOff	Process alarm: Chop Off	uint8	01F0	496
Network.2.AlmDis.FreqFault	System alarm: Frequency Fault	uint8	01ED	493
Network.2.AlmDis.FuseBlown	System alarm: Fuse Blown	uint8	01EA	490
Network.2.AlmDis.MainsVoltFault	Process alarm: Mains Voltage Fault	uint8	01F3	499
Network.2.AlmDis.MissMains	System alarm: Missing Mains	uint8	01E7	487
Network.2.AlmDis.NetworkDips	System alarm: Mains Voltage Dips	uint8	01EC	492
Network.2.AlmDis.OpenThyr	System alarm: Open Thyristor	uint8	01E9	489
Network.2.AlmDis.OverCurrent	Indication alarm: Over Current	uint8	01F5	501
Network.2.AlmDis.OverTemp	System alarm: Over Temperature	uint8	01EB	491
Network.2.AlmDis.PB24VFail	System alarm: Power Board 24V Failure	uint8	01EE	494
Network.2.AlmDis.PLF	Process alarm: Partial Load Failure	uint8	01F1	497
Network.2.AlmDis.PLU	Process alarm: Partial Load Unbalance	uint8	01F2	498
Network.2.AlmDis.PreTemp	Process alarm: Pre-Temperature	uint8	01F4	500
Network.2.AlmDis.ThyrSC	System alarm: Thyristor Short Circuit	uint8	01E8	488
Network.2.AlmDis.TLF	Process alarm: Total Load Failure	uint8	01EF	495
Network.2.AlmLat.ChopOff	Process alarm latch: Chop Off	uint8	021D	541
Network.2.AlmLat.FreqFault	System alarm latch: Frequency Fault	uint8	021A	538
Network.2.AlmLat.FuseBlown	System alarm latch: Fuse Blown	uint8	0217	535
Network.2.AlmLat.MainsVoltFault	Process alarm latch: Mains Voltage Fault	uint8	0220	544
Network.2.AlmLat.MissMains	System alarm latch: Missing Mains	uint8	0214	532
Network.2.AlmLat.NetworkDips	System alarm latch: Mains Voltage Dips	uint8	0219	537
<u>'</u>		1	1	

Parameter path	Description	Туре	Hex	Dec
Network.2.AlmLat.OpenThyr	System alarm latch: Open Thyristor	uint8	0216	534
Network.2.AlmLat.OverCurrent	Indication alarm latch: Over Current	uint8	0222	546
Network.2.AlmLat.OverTemp	System alarm latch: Over Temperature	uint8	0218	536
Network.2.AlmLat.PB24VFail	System alarm latch: Power Board 24V Failure	uint8	021B	539
Network.2.AlmLat.PLF	Process alarm latch: Partial Load Failure	uint8	021E	542
Network.2.AlmLat.PLU	Process alarm latch: Partial Load Unbalance	uint8	021F	543
Network.2.AlmLat.PreTemp	Process alarm latch: Pre-Temperature	uint8	0221	545
Network.2.AlmLat.ThyrSC	System alarm latch: Thyristor Short Circuit	uint8	0215	533
Network.2.AlmLat.TLF	Process alarm latch: Total Load Failure	uint8	021C	540
Network.2.AlmSig.ChopOff	Process alarm signalling status: Chop Off	uint8	020E	526
Network.2.AlmSig.FreqFault	System alarm signalling status: Frequency Fault	uint8	020B	523
Network.2.AlmSig.FuseBlown	System alarm signalling status: Fuse Blown	uint8	0208	520
Network.2.AlmSig.MainsVoltFault	Process alarm signalling status: Mains Voltage Fault	uint8	0211	529
Network.2.AlmSig.MissMains	System alarm signalling status: Missing Mains	uint8	0205	517
Network.2.AlmSig.NetworkDips	System alarm signalling status: Mains Voltage Dips	uint8	020A	522
Network.2.AlmSig.OpenThyr	System alarm signalling status: Open Thyristor	uint8	0207	519
Network.2.AlmSig.OverCurrent	Indication alarm signalling status: Over Current	uint8	0213	531
Network.2.AlmSig.OverTemp	System alarm signalling status: Over Temperature	uint8	0209	521
Network.2.AlmSig.PB24VFail	System alarm signalling status: Power Board 24V Failure	uint8	020C	524
Network.2.AlmSig.PLF	Process alarm signalling status: Partial Load Failure	uint8	020F	527
Network.2.AlmSig.PLU	Process alarm signalling status: Partial Load Unbalance	uint8	0210	528
Network.2.AlmSig.PreTemp	Process alarm signalling status: Pre-Temperature	uint8	0212	530
Network.2.AlmSig.ThyrSC	System alarm signalling status: Thyristor Short Circuit	uint8	0206	518
Network.2.AlmSig.TLF	Process alarm signalling status: Total Load Failure	uint8	020D	525
Network.2.AlmStop.ChopOff	Process alarm stop: Chop Off	uint8	023B	571
Network.2.AlmStop.FreqFault	System alarm stop: Frequency Fault	uint8	0238	568
Network.2.AlmStop.FuseBlown	System alarm stop: Fuse Blown	uint8	0235	565
Network.2.AlmStop.MainsVoltFault	Process alarm stop: Mains Voltage Fault	uint8	023E	574
Network.2.AlmStop.MissMains	System alarm stop: Missing Mains	uint8	0232	562
Network.2.AlmStop.NetworkDips	System alarm stop: Mains Voltage Dips	uint8	0237	567
Network.2.AlmStop.OpenThyr	System alarm stop: Open Thyristor	uint8	0234	564
Network.2.AlmStop.OverCurrent	Indication alarm stop: Over Current	uint8	0240	576
Network.2.AlmStop.OverTemp	System alarm stop: Over Temperature	uint8	0236	566
Network.2.AlmStop.PB24VFail	System alarm stop: Power Board 24V Failure	uint8	0239	569
Network.2.AlmStop.PLF	Process alarm stop: Partial Load Failure	uint8	023C	572
Network.2.AlmStop.PLU	Process alarm stop: Partial Load Unbalance	uint8	023D	573
Network.2.AlmStop.PreTemp	Process alarm stop: Pre-Temperature	uint8	023F	575
Network.2.AlmStop.ThyrSC	System alarm stop: Thyristor Short Circuit	uint8	0233	563
Network.2.AlmStop.TLF	Process alarm stop: Total Load Failure	uint8	023A	570
Network.2.Meas.Frequency	Frequency of the line	float32	01BD	445
Network.2.Meas.HtSinkTemp	Heatsink 1 temperature	float32	01BF	447
Network.2.Meas.HtSinkTmp2	Heatsink 2 temperature	float32	01C0	448
Network.2.Meas.HtSinkTmp3	Heatsink 3 temperature	float32	01C1	449
Network.2.Meas.I	Irms of the load	float32	01A8	424

Parameter path	Description	Туре	Hex	Dec
Network.2.Meas.I2	Irms2 of the load	float32	01A9	425
Network.2.Meas.I3	Irms3 of the load	float32	01AA	426
Network.2.Meas.lavg	Average value of Irms	float32	01AB	427
Network.2.Meas.IrmsMax	Maximum rms current in a 3 phase network.	float32	01C5	453
Network.2.Meas.lsq	Square value of the load current	float32	01AD	429
Network.2.Meas.IsqBurst	Average square value of load current in burst firing	float32	01AC	428
Network.2.Meas.IsqMax	Maximum squared current in a 3 phase network.	float32	01AE	430
Network.2.Meas.P	True power measurement.	float32	01B6	438
Network.2.Meas.PBurst	True Power measurement in burst firing	float32	01B5	437
Network.2.Meas.PF	Power Factor	float32	01B8	440
Network.2.Meas.Q	Reactive Power	float32	01B9	441
Network.2.Meas.S	Apparent power measurement	float32	01B7	439
Network.2.Meas.V	Vrms of the load	float32	01AF	431
Network.2.Meas.V2	Vrms2 of the load	float32	01B0	432
Network.2.Meas.V3	Vrms3 of the load	float32	01B1	433
Network.2.Meas.Vavg	Average value of Vrms	float32	01B2	434
Network.2.Meas.Vline	Line voltage measurement	float32	01A5	421
Network.2.Meas.Vline2	Line voltage measurement	float32	01A6	422
Network.2.Meas.Vline3	Line voltage measurement	float32	01A7	423
Network.2.Meas.VrmsMax	Maximum rms voltages in the 3 phase network.	float32	01C6	454
Network.2.Meas.Vsq	Square value of load voltage	float32	01B3	435
Network.2.Meas.VsqBurst	Average square value of the load voltage in burst firing	float32	01BE	446
Network.2.Meas.VsqMax	Maximum squared voltages in the 3 phase network.	float32	01B4	436
Network.2.Meas.Z	Load impedance	float32	01BA	442
Network.2.Meas.Z2	Load impedance2	float32	01BB	443
Network.2.Meas.Z3	Load impedance3	float32	01BC	444
Network.2.Setup.ChopOffNb	Chop Off Number	uint8	01CB	459
Network.2.Setup.ChopOffThreshol d1	Chop Off Threshold1	uint8	01C9	457
Network.2.Setup.ChopOffThreshol d2	Chop Off Threshold2	uint16	01CA	458
Network.2.Setup.ChopOffWindow	Chop Off Window	uint16	01CC	460
Network.2.Setup.FreqDriftThreshol d	Frequency Drift Threshold.	float32	01E4	484
Network.2.Setup.HeaterType	Heater type of the load	uint8	01D4	468
Network.2.Setup.HeatsinkPreTemp	Heatsink pre alarm temperature threshold	uint8	01CF	463
Network.2.Setup.HeatsinkTmax	Maximum temperature of the heatsink	uint8	01C7	455
Network.2.Setup.lextScale	External current scale adjustment	float32	01D7	471
Network.2.Setup.IMaximum	Maximum Current of the stack	uint8	01DB	475
Network.2.Setup.INominal	Nominal current of the stack	float32	01DA	474
Network.2.Setup.NetType	The type of network.Set in Instrument.Configuration.	uint8	01D8	472
Network.2.Setup.OverlThreshold	Over Current Threshold	uint16	01D3	467
Network.2.Setup.OverVoltThreshol d	Over voltage threshold	uint8	01CD	461
Network.2.Setup.PLFAdjusted	Partial load failure adjusted acknowledge	uint8	01D0	464
Network.2.Setup.PLFAdjustReq	Partial load failure adjustment request	uint8	01D6	470
Network.2.Setup.PLFSensitivity	Partial load failure sensitivity	uint8	01D1	465

Notice of O Cotion DI Litter of the	Description	Type	Hex	Dec
Network.2.Setup.PLUthreshold	Partial load unbalance threshold	uint8	01D2	466
Network.2.Setup.UnderVoltThresh	Under voltage threshold	uint8	01CE	462
old				
, ,	Voltage Dips Threshold	uint8	01C8	456
,	External voltage scale adjustment	float32		485
'	Line nominal value	float32		469
'	Load Nominal voltage	float32		473
,	Maximum Voltage of the stack	uint8	01E6	486
,	PLF reference load impedance phase 1	float32		478
,	PLF reference load impedance phase 2	float32		479
,	PLF reference load impedance phase 3	float32	01E0	480
	Network 3. See Network 1 for enumeration values			
•	Process alarm ack: Chop Off	uint8	02D1	721
·	System alarm ack: Frequency Fault	uint8	02CE	718
Network.3.AlmAck.FuseBlown	System alarm ack: Fuse Blown	uint8	02CB	715
Network.3.AlmAck.MainsVoltFault	Process alarm ack: Mains Voltage Fault	uint8	02D4	724
Network.3.AlmAck.MissMains	System alarm ack: Missing Mains	uint8	02C8	712
Network.3.AlmAck.NetworkDips	System alarm ack: Mains Voltage Dips	uint8	02CD	717
Network.3.AlmAck.OpenThyr	System alarm ack: Open Thyristor	uint8	02CA	714
Network.3.AlmAck.OverCurrent	Indication alarm ack: Over Current	uint8	02D6	726
Network.3.AlmAck.OverTemp	System alarm ack: Over Temperature	uint8	02CC	716
Network.3.AlmAck.PB24VFail	System alarm ack: Power Board 24V Failure	uint8	02CF	719
Network.3.AlmAck.PLF	Process alarm ack: Partial Load Failure	uint8	02D2	722
Network.3.AlmAck.PLU	Process alarm ack: Partial Load Unbalance	uint8	02D3	723
Network.3.AlmAck.PreTemp	Process alarm ack: Pre-Temperature	uint8	02D5	725
Network.3.AlmAck.ThyrSC	System alarm ack: Thyristor Short Circuit	uint8	02C9	713
Network.3.AlmAck.TLF	Process alarm ack: Total Load Failure	uint8	02D0	720
Network.3.AlmDet.ChopOff	Process alarm detection status: Chop Off	uint8	02A4	676
Network.3.AlmDet.FreqFault	System alarm detection status: Frequency Fault	uint8	02A1	673
Network.3.AlmDet.FuseBlown	System alarm detection status: Fuse Blown	uint8	029E	670
Network.3.AlmDet.MainsVoltFault	Process alarm detection Status: Mains Voltage Fault	uint8	02A7	679
Network.3.AlmDet.MissMains	System alarm detection status: Missing Mains	uint8	029B	667
Network.3.AlmDet.NetworkDips	System alarm detection status: Mains Voltage Dips	uint8	02A0	672
Network.3.AlmDet.OpenThyr	System alarm detection status: Open Thyristor	uint8	029D	669
Network.3.AlmDet.OverCurrent	Indication alarm detection Status: Over Current	uint8	02A9	681
Network.3.AlmDet.OverTemp	System alarm detection status: Over Temperature	uint8	029F	671
	System alarm detection status:Power Board 24V Failure	uint8	02A2	674
Network.3.AlmDet.PLF	Process alarm detection status: Partial Load Failure	uint8	02A5	677
	Process alarm detection status: Partial Load Unbalance	uint8	02A6	678
Network.3.AlmDet.PreTemp	Process alarm detection Status: Pre-Temperature	uint8	02A8	680
Network.3.AlmDet.ThyrSC	System alarm detection status: Thyristor Short Circuit	uint8	029C	668
Network.3.AlmDet.TLF	Process alarm detection status: Total Load Failure	uint8	02A3	675
Network.3.AlmDis.ChopOff	Process alarm: Chop Off	uint8	0295	661
Network.3.AlmDis.FreqFault	System alarm: Frequency Fault	uint8	0292	658

Parameter path	Description	Туре	Hex	Dec
Network.3.AlmDis.FuseBlown	System alarm: Fuse Blown	uint8	028F	655
Network.3.AlmDis.MainsVoltFault	Process alarm: Mains Voltage Fault	uint8	0298	664
Network.3.AlmDis.MissMains	System alarm: Missing Mains	uint8	028C	652
Network.3.AlmDis.NetworkDips	System alarm: Mains Voltage Dips	uint8	0291	657
Network.3.AlmDis.OpenThyr	System alarm: Open Thyristor	uint8	028E	654
Network.3.AlmDis.OverCurrent	Indication alarm: Over Current	uint8	029A	666
Network.3.AlmDis.OverTemp	System alarm: Over Temperature	uint8	0290	656
Network.3.AlmDis.PB24VFail	System alarm: Power Board 24V Failure	uint8	0293	659
Network.3.AlmDis.PLF	Process alarm: Partial Load Failure	uint8	0296	662
Network.3.AlmDis.PLU	Process alarm: Partial Load Unbalance	uint8	0297	663
Network.3.AlmDis.PreTemp	Process alarm: Pre-Temperature	uint8	0299	665
Network.3.AlmDis.ThyrSC	System alarm: Thyristor Short Circuit	uint8	028D	653
Network.3.AlmDis.TLF	Process alarm: Total Load Failure	uint8	0294	660
Network.3.AlmLat.ChopOff	Process alarm latch: Chop Off	uint8	02C2	706
Network.3.AlmLat.FreqFault	System alarm latch: Frequency Fault	uint8	02BF	703
Network.3.AlmLat.FuseBlown	System alarm latch: Fuse Blown	uint8	02BC	700
Network.3.AlmLat.MainsVoltFault	Process alarm latch: Mains Voltage Fault	uint8	02C5	709
Network.3.AlmLat.MissMains	System alarm latch: Missing Mains	uint8	02B9	697
Network.3.AlmLat.NetworkDips	System alarm latch: Mains Voltage Dips	uint8	02BE	702
Network.3.AlmLat.OpenThyr	System alarm latch: Open Thyristor	uint8	02BB	699
Network.3.AlmLat.OverCurrent	Indication alarm latch: Over Current	uint8	02C7	711
Network.3.AlmLat.OverTemp	System alarm latch: Over Temperature	uint8	02BD	701
Network.3.AlmLat.PB24VFail	System alarm latch: Power Board 24V Failure	uint8	02C0	704
Network.3.AlmLat.PLF	Process alarm latch: Partial Load Failure	uint8	02C3	707
Network.3.AlmLat.PLU	Process alarm latch: Partial Load Unbalance	uint8	02C4	708
Network.3.AlmLat.PreTemp	Process alarm latch: Pre-Temperature	uint8	02C6	710
Network.3.AlmLat.ThyrSC	System alarm latch: Thyristor Short Circuit	uint8	02BA	698
Network.3.AlmLat.TLF	Process alarm latch: Total Load Failure	uint8	02C1	705
Network.3.AlmSig.ChopOff	Process alarm signalling status: Chop Off	uint8	02B3	691
Network.3.AlmSig.FreqFault	System alarm signalling status: Frequency Fault	uint8	02B0	688
Network.3.AlmSig.FuseBlown	System alarm signalling status: Fuse Blown	uint8	02AD	685
Network.3.AlmSig.MainsVoltFault	Process alarm signalling status: Mains Voltage Fault	uint8	02B6	694
Network.3.AlmSig.MissMains	System alarm signalling status: Missing Mains	uint8	02AA	682
Network.3.AlmSig.NetworkDips	System alarm signalling status: Mains Voltage Dips	uint8	02AF	687
Network.3.AlmSig.OpenThyr	System alarm signalling status: Open Thyristor	uint8	02AC	684
Network.3.AlmSig.OverCurrent	Indication alarm signalling status: Over Current	uint8	02B8	696
Network.3.AlmSig.OverTemp	System alarm signalling status: Over Temperature	uint8	02AE	686
Network.3.AlmSig.PB24VFail	System alarm signalling status: Power Board 24V Failure	uint8	02B1	689
Network.3.AlmSig.PLF	Process alarm signalling status: Partial Load Failure	uint8	02B4	692
Network.3.AlmSig.PLU	Process alarm signalling status: Partial Load Unbalance	uint8	02B5	693
Network.3.AlmSig.PreTemp	Process alarm signalling status: Pre-Temperature	uint8	02B7	695
Network.3.AlmSig.ThyrSC	System alarm signalling status: Thyristor Short Circuit	uint8	02AB	683
Network.3.AlmSig.TLF	Process alarm signalling status: Total Load Failure	uint8	02B2	690
Network.3.AlmStop.ChopOff	Process alarm stop: Chop Off	uint8	02E0	736

Parameter path	Description	Туре	Hex	Dec
Network.3.AlmStop.FreqFault	System alarm stop: Frequency Fault	uint8	02DD	733
Network.3.AlmStop.FuseBlown	System alarm stop: Fuse Blown	uint8	02DA	730
Network.3.AlmStop.MainsVoltFault	Process alarm stop: Mains Voltage Fault	uint8	02E3	739
Network.3.AlmStop.MissMains	System alarm stop: Missing Mains	uint8	02D7	727
Network.3.AlmStop.NetworkDips	System alarm stop: Mains Voltage Dips	uint8	02DC	732
Network.3.AlmStop.OpenThyr	System alarm stop: Open Thyristor	uint8	02D9	729
Network.3.AlmStop.OverCurrent	Indication alarm stop: Over Current	uint8	02E5	741
Network.3.AlmStop.OverTemp	System alarm stop: Over Temperature	uint8	02DB	731
Network.3.AlmStop.PB24VFail	System alarm stop: Power Board 24V Failure	uint8	02DE	734
Network.3.AlmStop.PLF	Process alarm stop: Partial Load Failure	uint8	02E1	737
Network.3.AlmStop.PLU	Process alarm stop: Partial Load Unbalance	uint8	02E2	738
Network.3.AlmStop.PreTemp	Process alarm stop: Pre-Temperature	uint8	02E4	740
Network.3.AlmStop.ThyrSC	System alarm stop: Thyristor Short Circuit	uint8	02D8	728
Network.3.AlmStop.TLF	Process alarm stop: Total Load Failure	uint8	02DF	735
Network.3.Meas.Frequency	Frequency of the line	float32	0262	610
Network.3.Meas.HtSinkTemp	Heatsink 1 temperature	float32	0264	612
Network.3.Meas.HtSinkTmp2	Heatsink 2 temperature	float32	0265	613
Network.3.Meas.HtSinkTmp3	Heatsink 3 temperature	float32	0266	614
Network.3.Meas.I	Irms of the load	float32	024D	589
Network.3.Meas.I2	Irms2 of the load	float32	024E	590
Network.3.Meas.I3	Irms3 of the load	float32	024F	591
Network.3.Meas.lavg	Average value of Irms	float32	0250	592
Network.3.Meas.IrmsMax	Maximum rms current in a 3 phase network.	float32		618
Network.3.Meas.lsq	Square value of the load current	float32	0252	594
Network.3.Meas.IsqBurst	Average square value of load current in burst firing	float32		593
Network.3.Meas.IsqMax	Maximum squared current in a 3 phase network.	float32		595
Network.3.Meas.P	True power measurement.	float32	025B	603
Network.3.Meas.PBurst	True Power measurement in burst firing	float32		602
Network.3.Meas.PF	Power Factor	float32		605
Network.3.Meas.Q	Reactive Power	float32		606
Network.3.Meas.S	Apparent power measurement	float32		604
Network.3.Meas.V	Vrms of the load	float32		596
Network.3.Meas.V2	Vrms2 of the load	float32		597
Network.3.Meas.V3	Vrms3 of the load	float32		598
Network.3.Meas.Vavg	Average value of Vrms	float32		599
Network.3.Meas.Vline	Line voltage measurement	float32		586
Network.3.Meas.Vline2	Line voltage measurement	float32		587
Network.3.Meas.Vline3	Line voltage measurement	float32		588
Network.3.Meas.VrmsMax	Maximum rms voltages in the 3 phase network.	float32		619
Network.3.Meas.Vsq	Square value of load voltage	float32		600
Network.3.Meas.VsqBurst	Average square value of the load voltage in burst firing			611
Network.3.Meas.VsqMax	Maximum squared voltages in the 3 phase network.	float32		601
Network.3.Meas.Z	Load impedance	float32		607
Network.3.Meas.Z2	Load impedance2	float32		608
Network.3.Meas.Z3	Load impedance3	float32	0261	609
Network.3.Setup.ChopOffNb	Chop Off Number	uint8	0270	624

	T			
Parameter path	Description	Туре	Hex	Dec
Network.3.Setup.ChopOffThreshol d1	Chop Off Threshold1	uint8	026E	622
Network.3.Setup.ChopOffThreshol d2	Chop Off Threshold2	uint16	026F	623
Network.3.Setup.ChopOffWindow	Chop Off Window	uint16	0271	625
Network.3.Setup.FreqDriftThreshold	Frequency Drift Threshold.	float32	0289	649
Network.3.Setup.HeaterType	Heater type of the load	uint8	0279	633
Network.3.Setup.HeatsinkPreTemp	Heatsink pre alarm temperature threshold	uint8	0274	628
Network.3.Setup.HeatsinkTmax	Maximum temperature of the heatsink	uint8	026C	620
Network.3.Setup.lextScale	External current scale adjustment	float32	027C	636
Network.3.Setup.lMaximum	Maximum Current of the stack	uint8	0280	640
Network.3.Setup.INominal	Nominal current of the stack	float32	027F	639
Network.3.Setup.NetType	The type of network.Set in Instrument.Configuration.	uint8	027D	637
Network.3.Setup.OverlThreshold	Over Current Threshold	uint16	0278	632
Network.3.Setup.OverVoltThreshold	Over voltage threshold	uint8	0272	626
Network.3.Setup.PLFAdjusted	Partial load failure adjusted acknowledge	uint8	0275	629
Network.3.Setup.PLFAdjustReq	Partial load failure adjustment request	uint8	027B	635
Network.3.Setup.PLFSensitivity	Partial load failure sensitivity	uint8	0276	630
Network.3.Setup.PLUthreshold	Partial load unbalance threshold	uint8	0277	631
Network.3.Setup.UnderVoltThreshold	Under voltage threshold	uint8	0273	627
Network.3.Setup.VdipsThreshold	Voltage Dips Threshold	uint8	026D	621
Network.3.Setup.VextScale	External voltage scale adjustment	float32	028A	650
Network.3.Setup.VlineNominal	Line nominal value	float32	027A	634
Network.3.Setup.VloadNominal	Load Nominal voltage	float32	027E	638
Network.3.Setup.VMaximum	Maximum Voltage of the stack	uint8	028B	651
Network.3.Setup.Zref	PLF reference load impedance phase 1	float32	0283	643
Network.3.Setup.Zref2	PLF reference load impedance phase 2	float32	0284	644
Network.3.Setup.Zref3	PLF reference load impedance phase 3	float32	0285	645
	Network 4. See Network 1 for enumeration values			
Network.4.AlmAck.ChopOff	Process alarm ack: Chop Off	uint8	0376	886
Network.4.AlmAck.FreqFault	System alarm ack: Frequency Fault	uint8	0373	883
Network.4.AlmAck.FuseBlown	System alarm ack: Fuse Blown	uint8	0370	880
Network.4.AlmAck.MainsVoltFault	Process alarm ack: Mains Voltage Fault	uint8	0379	889
Network.4.AlmAck.MissMains	System alarm ack: Missing Mains	uint8	036D	877
Network.4.AlmAck.NetworkDips	System alarm ack: Mains Voltage Dips	uint8	0372	882
Network.4.AlmAck.OpenThyr	System alarm ack: Open Thyristor	uint8	036F	879
Network.4.AlmAck.OverCurrent	Indication alarm ack: Over Current	uint8	037B	891
Network.4.AlmAck.OverTemp	System alarm ack: Over Temperature	uint8	0371	881
Network.4.AlmAck.PB24VFail	System alarm ack: Power Board 24V Failure	uint8	0374	884
Network.4.AlmAck.PLF	Process alarm ack: Partial Load Failure	uint8	0377	887
Network.4.AlmAck.PLU	Process alarm ack: Partial Load Unbalance	uint8	0378	888
Network.4.AlmAck.PreTemp	Process alarm ack: Pre-Temperature	uint8	037A	890
Network.4.AlmAck.ThyrSC	System alarm ack: Thyristor Short Circuit	uint8	036E	878
Network.4.AlmAck.TLF	Process alarm ack: Total Load Failure	uint8	0375	885
L				L

Parameter path	Description	Туре	Hex	Dec
Network.4.AlmDet.ChopOff	Process alarm detection status: Chop Off	uint8	0349	841
Network.4.AlmDet.FreqFault	System alarm detection status: Frequency Fault	uint8	0346	838
Network.4.AlmDet.FuseBlown	System alarm detection status: Fuse Blown	uint8	0343	835
Network.4.AlmDet.MainsVoltFault	Process alarm detection Status: Mains Voltage Fault	uint8	034C	844
Network.4.AlmDet.MissMains	System alarm detection status: Missing Mains	uint8	0340	832
Network.4.AlmDet.NetworkDips	System alarm detection status: Mains Voltage Dips	uint8	0345	837
Network.4.AlmDet.OpenThyr	System alarm detection status: Open Thyristor	uint8	0342	834
Network.4.AlmDet.OverCurrent	Indication alarm detection Status: Over Current	uint8	034E	846
Network.4.AlmDet.OverTemp	System alarm detection status: Over Temperature	uint8	0344	836
Network.4.AlmDet.PB24VFail	System alarm detection status:Power Board 24V Failure	uint8	0347	839
Network.4.AlmDet.PLF	Process alarm detection status: Partial Load Failure	uint8	034A	842
Network.4.AlmDet.PLU	Process alarm detection status: Partial Load Unbalance	uint8	034B	843
Network.4.AlmDet.PreTemp	Process alarm detection Status: Pre-Temperature	uint8	034D	845
Network.4.AlmDet.ThyrSC	System alarm detection status: Thyristor Short Circuit	uint8	0341	833
Network.4.AlmDet.TLF	Process alarm detection status: Total Load Failure	uint8	0348	840
Network.4.AlmDis.ChopOff	Process alarm: Chop Off	uint8	033A	826
Network.4.AlmDis.FreqFault	System alarm: Frequency Fault	uint8	0337	823
Network.4.AlmDis.FuseBlown	System alarm: Fuse Blown	uint8	0334	820
Network.4.AlmDis.MainsVoltFault	Process alarm: Mains Voltage Fault	uint8	033D	829
Network.4.AlmDis.MissMains	System alarm: Missing Mains	uint8	0331	817
Network.4.AlmDis.NetworkDips	System alarm: Mains Voltage Dips	uint8	0336	822
Network.4.AlmDis.OpenThyr	System alarm: Open Thyristor	uint8	0333	819
Network.4.AlmDis.OverCurrent	Indication alarm: Over Current	uint8	033F	831
Network.4.AlmDis.OverTemp	System alarm: Over Temperature	uint8	0335	821
Network.4.AlmDis.PB24VFail	System alarm: Power Board 24V Failure	uint8	0338	824
Network.4.AlmDis.PLF	Process alarm: Partial Load Failure	uint8	033B	827
Network.4.AlmDis.PLU	Process alarm: Partial Load Unbalance	uint8	033C	828
Network.4.AlmDis.PreTemp	Process alarm: Pre-Temperature	uint8	033E	830
Network.4.AlmDis.ThyrSC	System alarm: Thyristor Short Circuit	uint8	0332	818
Network.4.AlmDis.TLF	Process alarm: Total Load Failure	uint8	0339	825
Network.4.AlmLat.ChopOff	Process alarm latch: Chop Off	uint8	0367	871
Network.4.AlmLat.FreqFault	System alarm latch: Frequency Fault	uint8	0364	868
Network.4.AlmLat.FuseBlown	System alarm latch: Fuse Blown	uint8	0361	865
Network.4.AlmLat.MainsVoltFault	Process alarm latch: Mains Voltage Fault	uint8	036A	874
Network.4.AlmLat.MissMains	System alarm latch: Missing Mains	uint8	035E	862
Network.4.AlmLat.NetworkDips	System alarm latch: Mains Voltage Dips	uint8	0363	867
Network.4.AlmLat.OpenThyr	System alarm latch: Open Thyristor	uint8	0360	864
Network.4.AlmLat.OverCurrent	Indication alarm latch: Over Current	uint8	036C	876
Network.4.AlmLat.OverTemp	System alarm latch: Over Temperature	uint8	0362	866
Network.4.AlmLat.PB24VFail	System alarm latch: Power Board 24V Failure	uint8	0365	869
Network.4.AlmLat.PLF	Process alarm latch: Partial Load Failure	uint8	0368	872
Network.4.AlmLat.PLU	Process alarm latch: Partial Load Unbalance	uint8	0369	873
Network.4.AlmLat.PreTemp	Process alarm latch: Pre-Temperature	uint8	036B	875
Network.4.AlmLat.ThyrSC	System alarm latch: Thyristor Short Circuit	uint8	035F	863

Parameter path	Description	Туре	Hex	Dec
•	•	• •		
Network.4.AlmLat.TLF	Process alarm latch: Total Load Failure	uint8	0366	870
Network.4.AlmSig.ChopOff	Process alarm signalling status: Chop Off	uint8	0358	856
Network.4.AlmSig.FreqFault	System alarm signalling status: Frequency Fault	uint8	0355	853
Network.4.AlmSig.FuseBlown	System alarm signalling status: Fuse Blown	uint8	0352	850
Network.4.AlmSig.MainsVoltFault	Process alarm signalling status: Mains Voltage Fault	uint8	035B	859
Network.4.AlmSig.MissMains	System alarm signalling status: Missing Mains	uint8	034F	847
Network.4.AlmSig.NetworkDips	System alarm signalling status: Mains Voltage Dips	uint8	0354	852
Network.4.AlmSig.OpenThyr	System alarm signalling status: Open Thyristor	uint8	0351	849
Network.4.AlmSig.OverCurrent	Indication alarm signalling status: Over Current	uint8	035D	861
Network.4.AlmSig.OverTemp	System alarm signalling status: Over Temperature	uint8	0353	851
Network.4.AlmSig.PB24VFail	System alarm signalling status: Power Board 24V Failure	uint8	0356	854
Network.4.AlmSig.PLF	Process alarm signalling status: Partial Load Failure	uint8	0359	857
Network.4.AlmSig.PLU	Process alarm signalling status: Partial Load Unbalance	uint8	035A	858
Network.4.AlmSig.PreTemp	Process alarm signalling status: Pre-Temperature	uint8	035C	860
Network.4.AlmSig.ThyrSC	System alarm signalling status: Thyristor Short Circuit	uint8	0350	848
Network.4.AlmSig.TLF	Process alarm signalling status: Total Load Failure	uint8	0357	855
Network.4.AlmStop.ChopOff	Process alarm stop: Chop Off	uint8	0385	901
Network.4.AlmStop.FreqFault	System alarm stop: Frequency Fault	uint8	0382	898
Network.4.AlmStop.FuseBlown	System alarm stop: Fuse Blown	uint8	037F	895
Network.4.AlmStop.MainsVoltFault	Process alarm stop: Mains Voltage Fault	uint8	0388	904
Network.4.AlmStop.MissMains	System alarm stop: Missing Mains	uint8	037C	892
Network.4.AlmStop.NetworkDips	System alarm stop: Mains Voltage Dips	uint8	0381	897
Network.4.AlmStop.OpenThyr	System alarm stop: Open Thyristor	uint8	037E	894
Network.4.AlmStop.OverCurrent	Indication alarm stop: Over Current	uint8	038A	906
Network.4.AlmStop.OverTemp	System alarm stop: Over Temperature	uint8	0380	896
Network.4.AlmStop.PB24VFail	System alarm stop: Power Board 24V Failure	uint8	0383	899
Network.4.AlmStop.PLF	Process alarm stop: Partial Load Failure	uint8	0386	902
Network.4.AlmStop.PLU	Process alarm stop: Partial Load Unbalance	uint8	0387	903
Network.4.AlmStop.PreTemp	Process alarm stop: Pre-Temperature	uint8	0389	905
Network.4.AlmStop.ThyrSC	System alarm stop: Thyristor Short Circuit	uint8	037D	893
Network.4.AlmStop.TLF	Process alarm stop: Total Load Failure	uint8	0384	900
Network.4.Meas.Frequency	Frequency of the line	float32	0307	775
Network.4.Meas.HtSinkTemp	Heatsink 1 temperature	float32	0309	777
Network.4.Meas.HtSinkTmp2	Heatsink 2 temperature	float32	030A	778
Network.4.Meas.HtSinkTmp3	Heatsink 3 temperature	float32	030B	779
Network.4.Meas.I	Irms of the load	float32	02F2	754
Network.4.Meas.I2	Irms2 of the load	float32	02F3	755
Network.4.Meas.I3	Irms3 of the load	float32	02F4	756
Network.4.Meas.lavg	Average value of Irms	float32	02F5	757
Network.4.Meas.IrmsMax	Maximum rms current in a 3 phase network.	float32		783
Network.4.Meas.Isq	Square value of the load current	float32		759
Network.4.Meas.IsqBurst	Average square value of load current in burst firing	float32	02F6	758
Network.4.Meas.IsqMax	Maximum squared current in a 3 phase network.	float32		760
Network.4.Meas.P	True power measurement.	float32		768
	I	I	I	1

Parameter path	Description	Туре	Hex	Dec
Network.4.Meas.PBurst	True Power measurement in burst firing	float32	02FF	767
Network.4.Meas.PF	Power Factor	float32	0302	770
Network.4.Meas.Q	Reactive Power	float32	0303	771
Network.4.Meas.S	Apparent power measurement	float32	0301	769
Network.4.Meas.V	Vrms of the load	float32	02F9	761
Network.4.Meas.V2	Vrms2 of the load	float32	02FA	762
Network.4.Meas.V3	Vrms3 of the load	float32	02FB	763
Network.4.Meas.Vavg	Average value of Vrms	float32	02FC	764
Network.4.Meas.Vline	Line voltage measurement	float32	02EF	751
Network.4.Meas.Vline2	Line voltage measurement	float32	02F0	752
Network.4.Meas.Vline3	Line voltage measurement	float32	02F1	753
Network.4.Meas.VrmsMax	Maximum rms voltages in the 3 phase network.	float32	0310	784
Network.4.Meas.Vsq	Square value of load voltage	float32	02FD	765
Network.4.Meas.VsqBurst	Average square value of the load voltage in burst firing	float32	0308	776
Network.4.Meas.VsqMax	Maximum squared voltages in the 3 phase network.	float32	02FE	766
Network.4.Meas.Z	Load impedance	float32	0304	772
Network.4.Meas.Z2	Load impedance2	float32	0305	773
Network.4.Meas.Z3	Load impedance3	float32	0306	774
Network.4.Setup.ChopOffNb	Chop Off Number	uint8	0315	789
Network.4.Setup.ChopOffThreshol	Chop Off Threshold1	uint8	0313	787
Network.4.Setup.ChopOffThreshol d2	Chop Off Threshold2	uint16	0314	788
Network.4.Setup.ChopOffWindow	Chop Off Window	uint16	0316	790
Network.4.Setup.FreqDriftThreshold	Frequency Drift Threshold.	float32	032E	814
Network.4.Setup.HeaterType	Heater type of the load	uint8	031E	798
Network.4.Setup.HeatsinkPreTemp	Heatsink pre alarm temperature threshold	uint8	0319	793
Network.4.Setup.HeatsinkTmax	Maximum temperature of the heatsink	uint8	0311	785
Network.4.Setup.lextScale	External current scale adjustment	float32	0321	801
Network.4.Setup.lMaximum	Maximum Current of the stack	uint8	0325	805
Network.4.Setup.INominal	Nominal current of the stack	float32	0324	804
Network.4.Setup.NetType	The type of network.Set in Instrument.Configuration.	uint8	0322	802
Network.4.Setup.OverlThreshold	Over Current Threshold	uint16	031D	797
Network.4.Setup.OverVoltThreshol d	Over voltage threshold	uint8	0317	791
Network.4.Setup.PLFAdjusted	Partial load failure adjusted acknowledge	uint8	031A	794
Network.4.Setup.PLFAdjustReq	Partial load failure adjustment request	uint8	0320	800
Network.4.Setup.PLFSensitivity	Partial load failure sensitivity	uint8	031B	795
Network.4.Setup.PLUthreshold	Partial load unbalance threshold	uint8	031C	796
Network.4.Setup.UnderVoltThreshold	Under voltage threshold	uint8	0318	792
Network.4.Setup.VdipsThreshold	Voltage Dips Threshold	uint8	0312	786
Network.4.Setup.VextScale	External voltage scale adjustment	float32	032F	815
Network.4.Setup.VlineNominal	Line nominal value	float32		799
Network.4.Setup.VloadNominal	Load Nominal voltage	float32		803
Network.4.Setup.VMaximum	Maximum Voltage of the stack	uint8	0330	816

Parameter path	Description	Туре	Hex	Dec
Network.4.Setup.Zref	PLF reference load impedance phase 1	float32	0328	808
Network.4.Setup.Zref2	PLF reference load impedance phase 2	float32	0329	809
Network.4.Setup.Zref3	PLF reference load impedance phase 3	float32	032A	810
PLM.AlmAck.PrOverPs	Indication alarm acknowledge: Pr Over Ps (0 = NoAck, 1 = Ack)	uint8	06C6	1734
PLM.AlmDet.PrOverPs	Indication alarm detection status: Pr Over Ps (0 = Inactive, 1 = Active)	uint8	06C3	1731
PLM.AlmDis.PrOverPs	Indication alarm: Pr Over Ps (0 = Enable, 1 = Disable)	uint8	06C2	1730
PLM.AlmLat.PrOverPs	Indication alarm latch request: Pr Over Ps (0 = NoLatch, 1 = Latch)	uint8	06C5	1733
PLM.AlmSig.PrOverPs	Indication alarm signalling status: Pr Over Ps (0 = Not latched, 1 = Latched)	uint8	06C4	1732
PLM.AlmStop.PrOverPs	Indication alarm stop request: Pr Over Ps (0 = NoStop, 1 = Stop) $P_{\max} = \sum_{i=1}^n R_i H$	uint8	06C7	1735
PLM.Main.Period	Modulation period	uint16	06B2	1714
PLM.Main.Type	Load Management Type (0 = None, 1 = Sharing, 2 = IncrT1,3 = IncrT2, 4 = RotIncr, 5 = Distr, 6 = IncrDistr, 7 = RotIncrDistr)	uint8	06B1	1713
PLM.Network.Efficiency	Load management efficiency factor	uint8	06C0	1728
PLM.Network.MasterAddr	Address of elected master on the LM network	uint8	06C1	1729
PLM.Network.Pmax	Max power installed on the PLM network	float32	06BC	1724
PLM.Network.Pr	Total power on the network after load shedding	float32	06BF	1727
PLM.Network.Ps	Total amount of power allowed from the network	float32	06BE	1726
PLM.Network.Pt	Total demanded power on the network	float32	06BD	1725
PLM.Network.TotalChannels	Total number of channels on the network	uint8	06BB	1723
PLM.Network.TotalStation	Total number of stations on the LM link	uint8	06BA	1722
PLM.Station.Address	Load management address	uint8	06B3	1715
PLM.Station.NumChan	Number of channels for this station	uint8	06B5	1717
PLM.Station.PLMOut1	PLM Slot1 Interface output	uint16	06B6	1718
PLM.Station.PLMOut2	PLM Slot2 Interface output	uint16	06B7	1719
PLM.Station.PLMOut3	PLM Slot3 Interface output	uint16	06B8	1720
PLM.Station.PLMOut4	PLM Slot4 Interface output	uint16	06B9	1721
PLM.Station.Status	Master or slave station status (0 = Pending, 1 = IsMaster, 2 = IsSlave, 3 = DupplAddr)	uint8	06B4	1716
PLMChan.1.Group	Group in which the channel operates	uint8	06D3	1747
PLMChan.1.PLMIn	PLM Channel Interface Input	uint16	06D5	1749
PLMChan.1.PLMOut	PLM Channel Interface Output	uint16	06D6	1750
PLMChan.1.PZMax	Total Power installed on the channel	float32	06D2	1746
PLMChan.1.ShedFactor	Shed Factor of the Channel	uint8	06D4	1748
PLMChan.2.Group	Group in which the channel operates	uint8	06E2	1762
PLMChan.2.PLMIn	PLM Channel Interface Input	uint16	06E4	1764
PLMChan.2.PLMOut	PLM Channel Interface Output	uint16	06E5	1765
PLMChan.2.PZMax	Total Power installed on the channel	float32	06E1	1761
PLMChan.2.ShedFactor	Shed Factor of the Channel	uint8	06E3	1763
PLMChan.3.Group	Group in which the channel operates	uint8	06F1	1777
PLMChan.3.PLMIn	PLM Channel Interface Input	uint16	06F3	1779

PLMChan.3.PLMOut	Parameter path	Description	Туре	Hex	Dec
PLMChan.3.ShedFactor   Shed Factor of the Channel   Unit 8   06F2   1778	PLMChan.3.PLMOut	PLM Channel Interface Output	uint16	06F4	1780
PLMChan 4. PLMIn	PLMChan.3.PZMax	Total Power installed on the channel	float32	06F0	1776
PLMChan.4.PLMIn	PLMChan.3.ShedFactor	Shed Factor of the Channel	uint8	06F2	1778
PLMChan.4.PLMOut   PLM Channel Interface Output   uin16   0703   1795     PLMChan.4.PZMax   Total Power installed on the channel   16a32   06FF   1791     PLMChan.4.ShedFactor   Shed Factor of the Channel   uint8   0701   1793     PLMChan.4.ShedFactor   Shed Factor of the Channel   uint8   0701   1793     QStart.AnalogIP1Func   Analogue input 1 function   2 = Sepoint   3 = Se	PLMChan.4.Group	Group in which the channel operates	uint8	0700	1792
PLMChan.4.PZMax	PLMChan.4.PLMIn	PLM Channel Interface Input	uint16	0702	1794
PLMChan.4.PZMax	PLMChan.4.PLMOut	PLM Channel Interface Output	uint16	0703	1795
Analogue input 1 function   2 - brussed   1 - Satpoint   3 - Sat	PLMChan.4.PZMax	·	float32	06FF	1791
D = Unused	PLMChan.4.ShedFactor	Shed Factor of the Channel	uint8	0701	1793
QStart.AnalogOP1Func	QStart.AnalogIP1Func	0 = Unused 1 = Setpoint 2 = SetpointLimit 3 = CurrentLimit 4 = VoltageLimit 5 = PowerLimit	uint8	084A	2122
Q = Unused   1 = True Power   2 = IRMS   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   4 = Resistance   2 = IRMS   3 = VRINS   3 = VRINS   3 = VRINS   4 = Resistance   3 = IRMS   3 = VRINS   3 = VRIN	QStart.AnalogIP2Func	Analog input 2 function (as AnalogIP1)		084B	2123
QStart.Energy	QStart.AnalogOP1Func	0 = Unused 1 = True Power 2 = IRMS		0848	2120
QStart.Feedback         Main PV for the control block 0 = Open 3 = True Power 4 = VRMS 5 = IRINS         2 = I². 2 = IRINS         0847         2119           QStart.Finish         Finished Quick start configuration (0 = No, 1 = Yes)         0846         2118           QStart.FiringMode         Firing Mode 0 = None 3 = Burst Var 4 = Burst fix 5 = HC 6 = Custom         084E         2126           QStart.LoadCurrent         Nominal Current 0 = 16Ab 1 = 125A 7 = 160A 8 = 200A 9 = 250A 10 = 250A 11 = 315A 12 = 400A 13 = Custom 14 = Ext.         084C         2124           QStart.LoadCurrentVal         Nominal Current 0 = 16Ab 1 = 125A 7 = 160A 8 = 200A 9 = 250A 10 = 250A 11 = 315A 12 = 400A 13 = Custom 14 = Ext.         0856         2134           QStart.LoadType         Load Type (0 = Resistive, 1 = transformer)         0851         2129           QStart.LoadVoltage         Load Voltage 0 = 100V 6 = 208V 7 = 220V 8 = 230V 9 = 240V 10 = 277V 11 = 380V 12 = 400V 13 = 415V 14 = 440V 13 = 440V 13 = 415V 14 = 440V         084D 2125           QStart.Relay1         Relay 1 function (0 = Unused, 1 = Any alarm, 2 = Network alarm, 3 = Fuse blown)         084F 2127           QStart.Transfer         Transfer Mode (0 = None, 1 = V², 2 = I²)         084F 2127           SetProv.1.DisRamp         External input for enabling or disabling a ramp (0 = No, 1 = Yes)         uint8 050C 1292           SetProv.1.HiRange         High range of a setpoint         float32 0515 1309	QStart.DigitalIP2Func			0849	2121
QStart.Finish	QStart.Energy	Activate the computation of the energy		0857	2135
QStart.FiringMode         Firing Mode 0 = None 3 = Burst Var 4 = Burst fix 5 = HC 6 = Custom         084E         2126           QStart.LoadCurrent         Nominal Current 0 = 16A 1 = 25A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 11 = 215A 7 = 160A 8 = 200A 9 = 250A 12 = 400A 13 = Custom 14 = Ext.         0856         2134           QStart.LoadType         Load Type (0 = Resistive, 1 = transformer)         0851         2129           QStart.LoadVoltage         Load Voltage 0 = 100V 1 = 110V 2 = 115V 3 = 120V 4 = 127V 15 = 200V 7 = 220V 8 = 230V 9 = 240V 10 = 277V 11 = 380V 12 = 400V 13 = 415V 14 = 440V 10 = 277V 11 = 380V 12 = 500V 12 = 600V 22 = Custom         084D         2125           QStart.Relay1         Relay 1 function (0 = Unused, 1 = Any alarm, 2 = Network alarm, 3 = Fuse blown)         0850         2128           QStart.Transfer         Transfer Mode (0 = None, 1 = V², 2 = I²)         084F         2127           SetProv.1.DisRamp         External input for enabling or disabling a ramp (0 = No, 1 = Yes)         uint8         050C         1292           SetProv.1.EngWorkingSP         Working Setpoint when in engineering units         float32         0515         1301           SetProv.1.Limit         Setpoint limit scalar         float32         0511         1297           SetProv.	QStart.Feedback			0847	2119
QStart.LoadCurrent	QStart.Finish	Finished Quick start configuration (0 = No, 1 = Yes)		0846	2118
QStart.LoadCurrentVal   Nominal Current	QStart.FiringMode	0 = None 1 = Phase angle 2 = Logic		084E	2126
QStart.LoadType         Load Type (0 = Resistive, 1 = transformer)         0851         2129           QStart.LoadVoltage         0 = 100V	QStart.LoadCurrent	0 = 16A		084C	2124
QStart.LoadVoltage         Load Voltage         0=100V	QStart.LoadCurrentVal	Nominal Current		0856	2134
0 = 100V   1 = 110V   2 = 115V   3 = 120V   4 = 127V   5 = 200V   6 = 208V   7 = 220V   8 = 230V   9 = 240V   10 = 277V   11 = 380V   12 = 440V   13 = 415V   14 = 440V   15 = 460V   16 = 480V   17 = 500V   18 = 575V   19 = 600V   20 = 660V   21 = 690V   22 = Custom   22 = Custom   22 = Network alarm, 3 = Fuse blown)   Relay 1 function (0 = Unused, 1 = Any alarm, 2 = Network alarm, 3 = Fuse blown)   Retay 1 function (0 = None, 1 = V², 2 = I²)   084F   2127   2127   227	QStart.LoadType	Load Type (0 = Resistive, 1 = transformer)		0851	2129
	QStart.LoadVoltage	0 = 100V 1 = 110V 2 = 115V 3 = 120V 4 = 127V 5 = 200V 6 = 208V 7 = 220V 8 = 230V 9 = 240V 10 = 277V 11 = 380V 12 = 400V 13 = 415V 14 = 440V 15 = 460V 16 = 480V 17 = 500V 18 = 575V 19 = 600V		084D	2125
SetProv.1.DisRamp  External input for enabling or disabling a ramp (0 = No, 1 = Yes)  Working Setpoint when in engineering units  SetProv.1.EngWorkingSP  Working Setpoint when in engineering units  High range of a setpoint  SetProv.1.Limit  SetProv.1.Limit  SetProv.1.LocalSP  SetProv.1.RampRate  Ramp rate for the setpoint.  SetProv.1.Remote1  SetProv.1.Remote2  Remote setpoint 2  Remote setpoint selection  Uint8  050C  1292  1292  1292  1293  1294  1295  1296  1297  1297  1297  1297  1297  1298  1298  1298  1291  1291  1296  1294  1296  1296	QStart.Relay1			0850	2128
SetProv.1.EngWorkingSP Working Setpoint when in engineering units float32 0515 1301 SetProv.1.HiRange High range of a setpoint float32 0513 1299 SetProv.1.Limit Setpoint limit scalar float32 0511 1297 SetProv.1.LocalSP Local setpoint float32 0508 1288 SetProv.1.RampRate Ramp rate for the setpoint. float32 050B 1291 SetProv.1.Remote1 Remote setpoint 1 float32 050E 1294 SetProv.1.Remote2 Remote setpoint 2 float32 050F 1295 SetProv.1.RemSelect Remote setpoint selection uint8 0510 1296	QStart.Transfer	Transfer Mode (0 = None, 1 = $V^2$ , 2 = $I^2$ )		084F	2127
SetProv.1.HiRangeHigh range of a setpointfloat3205131299SetProv.1.LimitSetpoint limit scalarfloat3205111297SetProv.1.LocalSPLocal setpointfloat3205081288SetProv.1.RampRateRamp rate for the setpoint.float32050B1291SetProv.1.Remote1Remote setpoint 1float32050E1294SetProv.1.Remote2Remote setpoint 2float32050F1295SetProv.1.RemSelectRemote setpoint selectionuint805101296	SetProv.1.DisRamp		uint8	050C	1292
SetProv.1.LimitSetpoint limit scalarfloat3205111297SetProv.1.LocalSPLocal setpointfloat3205081288SetProv.1.RampRateRamp rate for the setpoint.float32050B1291SetProv.1.Remote1Remote setpoint 1float32050E1294SetProv.1.Remote2Remote setpoint 2float32050F1295SetProv.1.RemSelectRemote setpoint selectionuint805101296	SetProv.1.EngWorkingSP	Working Setpoint when in engineering units	float32	0515	1301
SetProv.1.LocalSPLocal setpointfloat3205081288SetProv.1.RampRateRamp rate for the setpoint.float32050B1291SetProv.1.Remote1Remote setpoint 1float32050E1294SetProv.1.Remote2Remote setpoint 2float32050F1295SetProv.1.RemSelectRemote setpoint selectionuint805101296	SetProv.1.HiRange	High range of a setpoint	float32	0513	1299
SetProv.1.RampRateRamp rate for the setpoint.float32050B1291SetProv.1.Remote1Remote setpoint 1float32050E1294SetProv.1.Remote2Remote setpoint 2float32050F1295SetProv.1.RemSelectRemote setpoint selectionuint805101296	SetProv.1.Limit	Setpoint limit scalar	float32	0511	1297
SetProv.1.Remote1Remote setpoint 1float32050E1294SetProv.1.Remote2Remote setpoint 2float32050F1295SetProv.1.RemSelectRemote setpoint selectionuint805101296	SetProv.1.LocalSP	Local setpoint	float32	0508	1288
SetProv.1.Remote2 Remote setpoint 2 float32 050F 1295 SetProv.1.RemSelect Remote setpoint selection 1296	SetProv.1.RampRate	Ramp rate for the setpoint.	float32	050B	1291
SetProv.1.RemSelect Remote setpoint selection uint8 0510 1296	SetProv.1.Remote1	Remote setpoint 1	float32	050E	1294
·	SetProv.1.Remote2	Remote setpoint 2	float32	050F	1295
SetProv.1.SPSelect Setpoint select uint8 050A 1290	SetProv.1.RemSelect	Remote setpoint selection	uint8	0510	1296
	SetProv.1.SPSelect	Setpoint select	uint8	050A	1290
SetProv.1.SPTrack Enable Setpoint tracking uint8 0512 1298	SetProv.1.SPTrack	Enable Setpoint tracking	uint8	0512	1298

Parameter path	Description	Туре	Hex	Dec
SetProv.1.SPUnits	units of the setpoint	uint8	0514	1300
SetProv.1.WorkingSP	Working or active setpoint	float32	0509	1289
SetProv.2.DisRamp	External input for enabling or disabling a ramp (0 = No, 1 = Yes)	uint8	0520	1312
SetProv.2.EngWorkingSP	Working Setpoint when in engineering units	float32	0529	1321
SetProv.2.HiRange	High range of a setpoint	float32	0527	1319
SetProv.2.Limit	Setpoint limit scalar	float32	0525	1317
SetProv.2.LocalSP	Local setpoint	float32	051C	1308
SetProv.2.RampRate	Ramp rate for the setpoint.	float32	051F	1311
SetProv.2.Remote1	Remote setpoint 1	float32	0522	1314
SetProv.2.Remote2	Remote setpoint 2	float32	0523	1315
SetProv.2.RemSelect	Remote setpoint selection	uint8	0524	1316
SetProv.2.SPSelect	Setpoint select	uint8	051E	1310
SetProv.2.SPTrack	Enable Setpoint tracking	uint8	0526	1318
SetProv.2.SPUnits	units of the setpoint	uint8	0528	1320
SetProv.2.WorkingSP	Working or active setpoint	float32	051D	1309
SetProv.3.DisRamp	External input for enabling or disabling a ramp (0 = No, 1 = Yes)	uint8	0534	1332
SetProv.3.EngWorkingSP	Working Setpoint when in engineering units	float32	053D	1341
SetProv.3.HiRange	High range of a setpoint	float32	053B	1339
SetProv.3.Limit	Setpoint limit scalar	float32	0539	1337
SetProv.3.LocalSP	Local setpoint	float32	0530	1328
SetProv.3.RampRate	Ramp rate for the setpoint.	float32	0533	1331
SetProv.3.Remote1	Remote setpoint 1	float32	0536	1334
SetProv.3.Remote2	Remote setpoint 2	float32	0537	1335
SetProv.3.RemSelect	Remote setpoint selection	uint8	0538	1336
SetProv.3.SPSelect	Setpoint select	uint8	0532	1330
SetProv.3.SPTrack	Enable Setpoint tracking	uint8	053A	1338
SetProv.3.SPUnits	units of the setpoint	uint8	053C	1340
SetProv.3.WorkingSP	Working or active setpoint	float32	0531	1329
SetProv.4.DisRamp	External input for enabling or disabling a ramp (0 = No, 1 = Yes)	uint8	0548	1352
SetProv.4.EngWorkingSP	Working Setpoint when in engineering units	float32	0551	1361
SetProv.4.HiRange	High range of a setpoint	float32	054F	1359
SetProv.4.Limit	Setpoint limit scalar	float32	054D	1357
SetProv.4.LocalSP	Local setpoint	float32	0544	1348
SetProv.4.RampRate	Ramp rate for the setpoint.	float32	0547	1351
SetProv.4.Remote1	Remote setpoint 1	float32	054A	1354
SetProv.4.Remote2	Remote setpoint 2	float32	054B	1355
SetProv.4.RemSelect	Remote setpoint selection	uint8	054C	1356
SetProv.4.SPSelect	Setpoint select	uint8	0546	1350
SetProv.4.SPTrack	Enable Setpoint tracking	uint8	054E	1358
SetProv.4.SPUnits	units of the setpoint	uint8	0550	1360
SetProv.4.WorkingSP	Working or active setpoint	float32	0545	1349
Timer.1.ElapsedTime	Elapsed Time	time32	0916	2326
Timer.1.In	Trigger/Gate input (0 = Off, 1 = On)	bool	091B	2331
	I			

Parameter path	Description	Туре	Hex	Dec
Timer.1.Out	Output (0 = Off, 1 = On)	bool	0917	2327
Timer.1.Time	Time	time32	0918	2328
Timer.1.Triggered	Triggered Flag (0 = Off, 1 = On)	bool	0919	2329
Timer.1.Type	Type of Timer (0 = Off, 1 = OnPulse, 2 = OnDelay, 3 = One shot, 4 = MinOnTime)	uint8	091A	2330
Timer.2.ElapsedTime	Elapsed Time	time32	0927	2343
Timer.2.In	Trigger/Gate input (0 = Off, 1 = On)	bool	092C	2348
Timer.2.Out	Output (0 = Off, 1 = On)	bool	0928	2344
Timer.2.Time	Time	time32	0929	2345
Timer.2.Triggered	Triggered Flag (0 = Off, 1 = On)	bool	092A	2346
Timer.2.Type	Type of Timer (As Timer.1.Type)	uint8	092B	2347
Timer.3.ElapsedTime	Elapsed Time	time32	0938	2360
Timer.3.In	Trigger/Gate input (0 = Off, 1 = On)	bool	093D	2365
Timer.3.Out	Output (0 = Off, 1 = On)	bool	0939	2361
Timer.3.Time	Time	time32	093A	2362
Timer.3.Triggered	Triggered Flag (0 = Off, 1 = On)	bool	093B	2363
Timer.3.Type	Type of Timer (As Timer.1.Type)	uint8	093C	2364
Timer.4.ElapsedTime	Elapsed Time	time32	0949	2377
Timer.4.In	Trigger/Gate input (0 = Off, 1 = On)	bool	094E	2382
Timer.4.Out	Output (0 = Off, 1 = On)	bool	094A	2378
Timer.4.Time	Time	time32	094B	2379
Timer.4.Triggered	Triggered Flag (0 = Off, 1 = On)	bool	094C	2380
Timer.4.Type	Type of Timer (As Timer.1.Type)	uint8	094D	2381
Total.1.AlarmOut	Alarm Output (0 = Off, 1 = On)	bool	095C	2396
Total.1.AlarmSP	Alarm Setpoint	float32	095A	2394
Total.1.Hold	Hold (0 = No, 1 = Yes)	bool	0961	2401
Total.1.In	Input Value	float32	095F	2399
Total.1.Reset	Reset (0 = No, 1 = Yes)	bool	0962	2402
Total.1.Resolution	Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XXX, 4 = X.XXX)	uint8	095E	2398
Total.1.Run	Run (0 = No, 1 = Yes)	bool	0960	2400
Total.1.TotalOut	Totalised Output	float32	095B	2395
Total.1.Units	Units	uint8	095D	2397
	0 = None 1 = Temp 2 = V 3 = mV, 4 = A 5 = mA 6 = pH 7 = mmHg			
Total.2.AlarmOut	Alarm Output (0 = Off, 1 = On)	bool	0971	2417
Total.2.AlarmSP	Alarm Setpoint	float32	096F	2415
Total.2.Hold	Hold (0 = No, 1 = Yes)	bool	0976	2422
Total.2.In	Input Value	float32	0974	2420
Total.2.Reset	Reset (0 = No, 1 = Yes)	bool	0977	2423
Total.2.Resolution	Resolution (as Total.1)	uint8	0973	2419
Total.2.Run	Run (0 = No, 1 = Yes)	bool	0975	2421
Total.2.TotalOut	Totalised Output	float32	0970	2416
Total.2.Units	Units (as Total.1)	uint8	0972	2418
Total.3.AlarmOut	Alarm Output (0 = Off, 1 = On)	bool	0986	2438
Total.3.AlarmSP	Alarm Setpoint	float32	0984	2436
Total.3.Hold	Hold (0 = No, 1 = Yes)	bool	098B	2443

UsrVal.1.LowLimit         User Value Low Limit         float32         07A5         1957           UsrVal.1.Resolution         User Value Display Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)         uint8         07A3         1955           UsrVal.1.Status         User Value Status (0 = Good, 1 = Bad)         bool         07A7         1959           UsrVal.1.Units         Units of the value 0 = None 1 = Temp 2 = V 3 = mV 4 = A 5 = mA 6 = pH 7 = mmHg         uint8         07A6         1958           UsrVal.2.HighLimit         User Value High Limit         float32         07A6         1958           UsrVal.2.Exesolution         User Value Low Limit         float32         07B4         1972           UsrVal.2.Status         User Value Display Resolution (as User Val 1)         uint8         07B3         1971           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07C4         1988           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Units         User Value Display Resolution (as User Val 1) </th <th>Parameter path</th> <th>Description</th> <th>Туре</th> <th>Hex</th> <th>Dec</th>	Parameter path	Description	Туре	Hex	Dec
Total.3. Resolution   Resolution (as Total.1)	Total.3.In	Input Value	float32	0989	2441
Total.3.Run	Total.3.Reset	Reset (0 = No, 1 = Yes)	bool	098C	2444
Total 3. Total Out         Totalised Output         float32         0985         2437           Total 3. Units         Units (as Total.1)         uint8         0987         2439           Total 4. AlarmOut         Alarm Setpoint         bool         0999         2457           Total 4. AlarmSP         Alarm Setpoint         float32         0999         2457           Total 4. AlarmSP         Hold (0 = No, 1 = Yes)         bool         09A0         2462           Total 4. Rosel         Reset (0 = No, 1 = Yes)         bool         09A1         2462           Total 4. Reset         Resolution (as Total.1)         uint8         0990         2461           Total 4. Resolution         Run (0 = No, 1 = Yes)         bool         09A1         2465           Total 4. Rosolution         Run (0 = No, 1 = Yes)         bool         0997         2458           Total 4. Units         Units (as Total.1)         uint8         0990         2450           Usr Val 1. Units         Units (as Total.1)         uint8         0990         2450           UsrVal 1. HighLimit         User Value High Limit         float32         07A4         1956           UsrVal 1. Status         User Value Display Resolution         uint8         07A2         1954 </td <td>Total.3.Resolution</td> <td>Resolution (as Total.1)</td> <td>uint8</td> <td>0988</td> <td>2440</td>	Total.3.Resolution	Resolution (as Total.1)	uint8	0988	2440
Total.4. AlarmOut	Total.3.Run	Run (0 = No, 1 = Yes)	bool	098A	2442
Total.4.AlarmOut	Total.3.TotalOut	Totalised Output	float32	0985	2437
Total.4.AlarmSP	Total.3.Units	Units (as Total.1)	uint8	0987	2439
Total.4.Hold	Total.4.AlarmOut	Alarm Output (0 = Off, 1 = On)	bool	099B	2459
Total.4.In         Input Value         float32         099E         2462           Total.4.Reset         Reset (0 = No, 1 = Yes)         bool         09A1         2465           Total.4.Resolution         Resolution (as Total.1)         uint8         099D         2461           Total.4.Run         Run (0 = No, 1 = Yes)         bool         099F         2463           Total.4.TotalOut         Totalised Output         float32         099A         2458           Total.4.Inits         Units (as Total.1)         uint8         099C         2460           UsrVal.1.HighLimit         User Value High Limit         float32         07A4         1956           UsrVal.1.LowLimit         User Value Low Limit         float32         07A5         1957           UsrVal.1.Status         User Value Display Resolution (0 = X, 1 = XX, 2 = XXX, 3 = XXX, 4 = XXXX)         bool         07A7         1959           UsrVal.1.Status         User Value Display Resolution         uint8         07A2         1954           UsrVal.1.Status         Units of the value         uint8         07A2         1954           UsrVal.2.DewLimit         User Value High Limit         float32         07A6         1958           UsrVal.2.Resolution         User Value Display Resolution (as User Val	Total.4.AlarmSP	Alarm Setpoint	float32	0999	2457
Total.4.Reset	Total.4.Hold	Hold (0 = No, 1 = Yes)	bool	09A0	2464
Total.4.Resolution	Total.4.In	Input Value	float32	099E	2462
Total.4.Run   Run (0 = No, 1 = Yes)   bool   099F   2463   Total.4.TotalOut   Totalised Output   float32   099A   2458   UsrVal.1.HighLimit   User Value Limit   User Value Low Limit   099C   2460   UsrVal.1.LowLimit   User Value Display Resolution   0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)   UsrVal.1.Resolution   User Value Display Resolution   0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)   UsrVal.1.Units   User Value Display Resolution   0 = None	Total.4.Reset	Reset (0 = No, 1 = Yes)	bool	09A1	2465
Total.4.TotalOut         Totalised Output         float32         099A         2458           Total.4.Units         Units (as Total.1)         uint8         099C         2460           UsrVal.1.HighLimit         User Value High Limit         float32         07A4         1956           UsrVal.1.Resolution         User Value Display Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)         uint8         07A3         1955           UsrVal.1.Status         User Value Status (0 = Good, 1 = Bad)         bool         07A7         1959           UsrVal.1.Units         Units of the value 0 = None 1 = Temp 2 = V 3 = mV 4 = A 5 = mA 6 = pH 7 = mmHg         07A2         1954           UsrVal.1.Val         The User Value         float32         07A6         1958           UsrVal.2.HighLimit         User Value High Limit         float32         07A6         1958           UsrVal.2.Houchimit         User Value Display Resolution (as User Val 1)         uint8         07B5         1973           UsrVal.2.Status         User Value Display Resolution (as User Val 1)         uint8         07B5         1971           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B5         1971           UsrVal.3.HighLimit         User Value Display Resolution (as User Val 1)         uint8         <	Total.4.Resolution	Resolution (as Total.1)	uint8	099D	2461
Total.4.Units	Total.4.Run	Run (0 = No, 1 = Yes)	bool	099F	2463
User Value High Limit	Total.4.TotalOut	Totalised Output	float32	099A	2458
UsrVal.1.LowLimit         User Value Low Limit         float32         07A5         1957           UsrVal.1.Resolution         User Value Display Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)         uint8         07A3         1955           UsrVal.1.Status         User Value Status (0 = Good, 1 = Bad)         bool         07A7         1959           UsrVal.1.Units         Units of the value 0 = None 1 = Temp 2 = V 3 = mV 4 = A 5 = mA 6 = pH 7 = mmHg         1954         1954           UsrVal.1.Val         The User Value         float32 07A6         1958           UsrVal.2.HighLimit         User Value High Limit         float32 07B4         1972           UsrVal.2.DewLimit         User Value Low Limit         float32 07B4         1972           UsrVal.2.Easolution         User Value Display Resolution (as User Val 1)         uint8 07B3 1971           UsrVal.2.Status         User Value Status (as User Val 1)         uint8 07B2 1970           UsrVal.2.Units         Units of the value (as User Val 1)         uint8 07B2 1970           UsrVal.3.HighLimit         User Value High Limit         float32 07C4 1988           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8 07C3 1987           UsrVal.3.Status         User Value Status (as User Val 1)         uint8 07C2 1986           UsrVal.4.HighLim	Total.4.Units	Units (as Total.1)	uint8	099C	2460
UsrVal.1.Resolution         User Value Display Resolution (0 = X, 1 = X.X, 2 = X.XX, 3 = X.XX, 4 = X.XXX)         uint8         07A3         1955           UsrVal.1.Status         User Value Status (0 = Good, 1 = Bad)         bool         07A7         1959           UsrVal.1.Units         Units of the value 0 = None 1 = Temp 2 = V 3 = mV 4 = A 5 = mA 6 = pH 7 = mmHg         uint8         07A2         1954           UsrVal.1.Val         The User Value         float32 07A6         1958           UsrVal.2.HighLimit         User Value High Limit         float32 07B4         1972           UsrVal.2.LowLimit         User Value Low Limit         float32 07B5         1973           UsrVal.2.Resolution         User Value Display Resolution (as User Val 1)         uint8 07B3         1971           UsrVal.2.Status         User Value Status (as User Val 1)         uint8 07B2         1970           UsrVal.2.Units         Units of the value (as User Val 1)         uint8 07B2         1970           UsrVal.2.Val         The User Value High Limit         float32 07C4         1988           UsrVal.3.HighLimit         User Value Display Resolution (as User Val 1)         uint8 07C3         1987           UsrVal.3.Status         User Value Display Resolution (as User Val 1)         uint8 07C3         1987           UsrVal.3.Val         The User Valu	UsrVal.1.HighLimit	User Value High Limit	float32	07A4	1956
UsrVal.1.Status	UsrVal.1.LowLimit	User Value Low Limit	float32	07A5	1957
UsrVal.1.Units         Units of the value 0 = None 1 = Temp 2 = V 3 = mV 4 = A 5 = mA 6 = pH 7 = mmHg         uint8 10at32 07A6 1958           UsrVal.1.Val         The User Value         float32 07B4 1972           UsrVal.2.HighLimit         User Value High Limit 10ser Value Low Limit 10ser Value Display Resolution (as User Val 1) 10ser Value Display Resolution (as User Val 1) 10ser Value Display Resolution (as User Val 1) 10ser Value User Value Display Resolution (as User Val 1) 10ser Value User Val 1) 10ser Value User Value User Value User Val 1) 10ser Value User Value User Val 1         User Value User Val 1         User Val 1988 10ser Val 1         User Val 1988 10ser Val 1         User Val 1988 10ser Val 1         User Val 19ser Val 19ser Val 1         User Val 19ser V	UsrVal.1.Resolution		uint8	07A3	1955
O = None	UsrVal.1.Status	User Value Status (0 = Good, 1 = Bad)	bool	07A7	1959
UsrVal.2.HighLimit         User Value High Limit         float32         07B4         1972           UsrVal.2.LowLimit         User Value Low Limit         float32         07B5         1973           UsrVal.2.Resolution         User Value Display Resolution (as User Val 1)         uint8         07B3         1971           UsrVal.2.Status         User Value Status (as User Val 1)         bool         07B7         1975           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07C4         1988           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         uint8         07C7         1991           UsrVal.3.Val         The User Value         float32         07C6         1990           UsrVal.4.HighLimit         User Value High Limit         float32         07D4         2004           UsrVal.4.Resolution	UsrVal.1.Units	0 = None 1 = Temp 2 = V 3 = mV	uint8	07A2	1954
UsrVal.2.LowLimit         User Value Low Limit         float32         07B5         1973           UsrVal.2.Resolution         User Value Display Resolution (as User Val 1)         uint8         07B3         1971           UsrVal.2.Status         User Value Status (as User Val 1)         bool         07B7         1975           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07B6         1974           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         uint8         07C7         1991           UsrVal.3.Val         The User Value         float32         07C6         1990           UsrVal.4.HighLimit         User Value High Limit         float32         07D4         2004           UsrVal.4.LowLimit         User Value Low Limit         float32         07D5         2005           UsrVal.4.Status	UsrVal.1.Val	The User Value	float32	07A6	1958
UsrVal.2.Resolution         User Value Display Resolution (as User Val 1)         uint8         07B3         1971           UsrVal.2.Status         User Value Status (as User Val 1)         bool         07B7         1975           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07C4         1988           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         bool         07C7         1991           UsrVal.3.Units         Units of the value (as User Val 1)         uint8         07C2         1986           UsrVal.3.Val         The User Value         float32         07C6         1990           UsrVal.4.HighLimit         User Value High Limit         float32         07D4         2004           UsrVal.4.Resolution         User Value Display Resolution (as User Val 1)         uint8         07D3         2003	UsrVal.2.HighLimit	User Value High Limit	float32	07B4	1972
UsrVal.2.Status         User Value Status (as User Val 1)         bool         07B7         1975           UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07B6         1974           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         bool         07C7         1991           UsrVal.3.Units         Units of the value (as User Val 1)         uint8         07C2         1986           UsrVal.4.HighLimit         User Value High Limit         float32         07C6         1990           UsrVal.4.LowLimit         User Value Low Limit         float32         07D4         2004           UsrVal.4.Resolution         User Value Display Resolution (as User Val 1)         uint8         07D3         2003           UsrVal.4.Status         User Value Status (as User Val 1)         uint8         07D2         2007           UsrVa	UsrVal.2.LowLimit	User Value Low Limit	float32	07B5	1973
UsrVal.2.Units         Units of the value (as User Val 1)         uint8         07B2         1970           UsrVal.2.Val         The User Value         float32         07B6         1974           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         bool         07C7         1991           UsrVal.3.Units         Units of the value (as User Val 1)         uint8         07C2         1986           UsrVal.3.Val         The User Value         float32         07C6         1990           UsrVal.4.HighLimit         User Value High Limit         float32         07D4         2004           UsrVal.4.LowLimit         User Value Low Limit         float32         07D5         2005           UsrVal.4.Resolution         User Value Display Resolution (as User Val 1)         uint8         07D3         2003           UsrVal.4.Units         Units of the value (as User Val 1)         uint8         07D2         2007	UsrVal.2.Resolution	User Value Display Resolution (as User Val 1)	uint8	07B3	1971
UsrVal.2.Val         The User Value         float32         07B6         1974           UsrVal.3.HighLimit         User Value High Limit         float32         07C4         1988           UsrVal.3.LowLimit         User Value Low Limit         float32         07C5         1989           UsrVal.3.Resolution         User Value Display Resolution (as User Val 1)         uint8         07C3         1987           UsrVal.3.Status         User Value Status (as User Val 1)         bool         07C7         1991           UsrVal.3.Units         Units of the value (as User Val 1)         uint8         07C2         1986           UsrVal.3.Val         The User Value         float32         07C6         1990           UsrVal.4.HighLimit         User Value High Limit         float32         07D4         2004           UsrVal.4.LowLimit         User Value Low Limit         float32         07D5         2005           UsrVal.4.Resolution         User Value Display Resolution (as User Val 1)         uint8         07D3         2003           UsrVal.4.Status         User Value Status (as User Val 1)         bool         07D7         2007           UsrVal.4.Units         Units of the value (as User Val 1)         uint8         07D2         2002	UsrVal.2.Status	User Value Status (as User Val 1)	bool	07B7	1975
User Value High Limit User Value Low Limit User Value Display Resolution (as User Val 1) User Value Status (as User Val 1) User Value User Value (as User Val 1) User Value Status (as User Val 1) User Value (as User Val 1) User Value (as User Val 1) User Value Status (as User Val 1) User Value (as User Val 1) User Value Status (as User Val 1) User Value Status (as User Val 1) User Value High Limit User Value High Limit User Value Low Limit User Value Low Limit User Value Display Resolution (as User Val 1) User Value Status (as User Val 1)	UsrVal.2.Units	Units of the value (as User Val 1)	uint8	07B2	1970
UsrVal.3.LowLimitUser Value Low Limitfloat3207C51989UsrVal.3.ResolutionUser Value Display Resolution (as User Val 1)uint807C31987UsrVal.3.StatusUser Value Status (as User Val 1)bool07C71991UsrVal.3.UnitsUnits of the value (as User Val 1)uint807C21986UsrVal.3.ValThe User Valuefloat3207C61990UsrVal.4.HighLimitUser Value High Limitfloat3207D42004UsrVal.4.LowLimitUser Value Low Limitfloat3207D52005UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.2.Val	The User Value	float32	07B6	1974
UsrVal.3.ResolutionUser Value Display Resolution (as User Val 1)uint807C31987UsrVal.3.StatusUser Value Status (as User Val 1)bool07C71991UsrVal.3.UnitsUnits of the value (as User Val 1)uint807C21986UsrVal.3.ValThe User Valuefloat3207C61990UsrVal.4.HighLimitUser Value High Limitfloat3207D42004UsrVal.4.LowLimitUser Value Low Limitfloat3207D52005UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.3.HighLimit	User Value High Limit	float32	07C4	1988
UsrVal.3.Status User Value Status (as User Val 1) UsrVal.3.Units Units of the value (as User Val 1) UsrVal.3.Val User Value The User Value User Value High Limit User Value Low Limit User Value Display Resolution (as User Val 1) UsrVal.4.Status User Value Status (as User Val 1) User Value Display Resolution User Val 1) User Val 2004 UsrVal.4.Resolution User Value Display Resolution (as User Val 1) User Value Status (as User Val 1)	UsrVal.3.LowLimit	User Value Low Limit	float32	07C5	1989
UsrVal.3.Units Units of the value (as User Val 1) UsrVal.3.Val UsrVal.4.HighLimit User Value High Limit User Value Low Limit User Value Display Resolution (as User Val 1) UsrVal.4.Status User Value Status (as User Val 1) User Value User Val 1) User Value Display Resolution User Value Status (as User Val 1)	UsrVal.3.Resolution	User Value Display Resolution (as User Val 1)	uint8	07C3	1987
UsrVal.3.ValThe User Valuefloat3207C61990UsrVal.4.HighLimitUser Value High Limitfloat3207D42004UsrVal.4.LowLimitUser Value Low Limitfloat3207D52005UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.3.Status	User Value Status (as User Val 1)	bool	07C7	1991
UsrVal.4.HighLimitUser Value High Limitfloat3207D42004UsrVal.4.LowLimitUser Value Low Limitfloat3207D52005UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.3.Units	Units of the value (as User Val 1)	uint8	07C2	1986
UsrVal.4.LowLimitUser Value Low Limitfloat3207D52005UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.3.Val	The User Value	float32	07C6	1990
UsrVal.4.ResolutionUser Value Display Resolution (as User Val 1)uint807D32003UsrVal.4.StatusUser Value Status (as User Val 1)bool07D72007UsrVal.4.UnitsUnits of the value (as User Val 1)uint807D22002	UsrVal.4.HighLimit	User Value High Limit	float32	07D4	2004
UsrVal.4.Status User Value Status (as User Val 1) bool 07D7 2007 UsrVal.4.Units Units of the value (as User Val 1) uint8 07D2 2002	UsrVal.4.LowLimit	User Value Low Limit	float32	07D5	2005
UsrVal.4.Status User Value Status (as User Val 1) bool 07D7 2007 UsrVal.4.Units Units of the value (as User Val 1) uint8 07D2 2002	UsrVal.4.Resolution	User Value Display Resolution (as User Val 1)	uint8	07D3	2003
UsrVal.4.Units Units of the value (as User Val 1) uint8 07D2 2002	UsrVal.4.Status		bool	07D7	2007
	UsrVal.4.Units	· · · · · · · · · · · · · · · · · · ·	uint8	07D2	2002
	UsrVal.4.Val	· · · · · · · · · · · · · · · · · · ·	float32	07D6	2006

# **Predictive Load Management Option**

## **General Description**

The Predictive Load Management (PLM) system is an assembly of a number of units ('stations') working together in order to minimize transient power demands which could appear on the mains if all the units were independent. The Predictive Load Management system is described in three sections, viz: Load sequencing ("Load Sequencing" on page 220), Load sharing ("Load Sharing" on page 225) and Load shedding ("Load Shedding" on page 226)

## **Load Management Layout**

A Predictive Load Management system can consist of up to 63 Stations, running a maximum of 64 channels, distributed around the shop floor (maximum cumulative cable length = 100 metres). Each Station manages either up to four single channels, two, 2-leg channels, or one 3-phase channel. One or more of these channels can participate in Load Management whilst other channels run independently. Where more than 64 channels are required, two or more independent networks (each with its own master) must be created.

The PLM connector is located behind the driver module door, and Stations are linked together as shown in figures 2.2.1c and 2.2.1f (location and pinout details respectively).

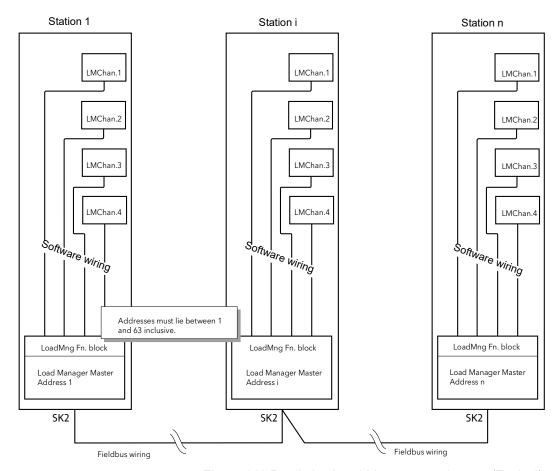


Figure 148 Predictive Load Management Layout (Typical)

#### Notes:

- Each Station Address must be unique to the PLM communication link, and must be set between 1 and 63 inclusive. Address 0 disables Load Management communications.
- 2. The figure above shows all four channels used. In reality, any number between 1 and 4 can be set up for Load Management.
- 3. The Station with the lowest address is deemed to be the master.

## **Power Modulation and Accuracy**

Fixed modulation is automatically selected for all channels participating to the Load Management. The Modulation period T is constant and is selected (between 50 and 1000 mains periods) during configuration.

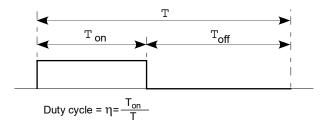


Figure 149 Modulation Period Definitions

 $T_{on}$  and  $T_{off}$  are related to the Modulation Period (T) and each corresponds to an integer number of mains periods. The duty cycle ( $\eta = T_{on}/T$ ) defines the power delivered to the load during the Modulation period. T is selected during configuration and its value determines the accuracy of the power control. The default value is 100 cycles.

T (cycles)	Accuracy
50	2%
100	1%
200	0.5%
500	0.2%
1000	0.1%

**Table 14: Accuracy Versus Modulation Period** 

**Note:** The value of 'T' is chosen according to the thermal inertia (speed of response) of the load. For loads with high thermal inertia, a long modulation period may be chosen, as the control integration time may be several minutes. Where the load has low inertia, long modulation periods can make the control process unstable if the modulation period approaches the integration time.

## **Load Sequencing**

Load sequencing is a time-dependent distribution of Energy through the Load (independent of the installed power per load) in order to avoid big spikes of power demand at the beginning of each conduction period. There are a number of different load sequencing types as described below. Which particular type is chosen depends on the loads being driven. The selection is made in the LoadMng 'Main' area of configuration (section 6.21.1).

## **Incremental Control Type 1**

With this kind of control, several Loads receive a common Setpoint. One channel is modulated with the required Duty Cycle q. The remaining channels are at 100% (Full conduction) or at 0% (No conduction). The total power distributed to the Loads is equal to the Setpoint.

For example for 11 Channels and setpoint of 50% (i.e. input of Master channel 1 = 0.5), channels 1 to 5 are continuously on and channels 7 to 11 are continuously off. Channel 6 modulates with a duty cycle of 50% (Figure 150)

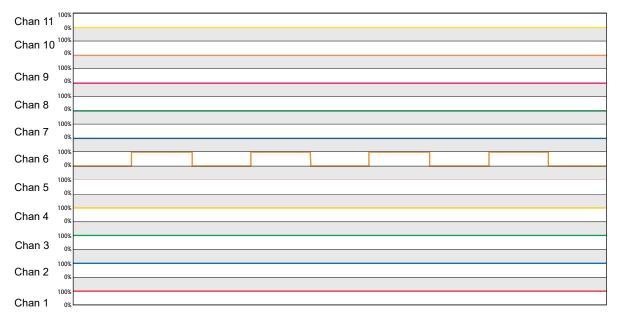


Figure 150 Incremental Control Type 1 Example

## **Incremental Control Type 2**

This kind of control, is similar to Incremental control type 1, but the modulated channel is always channel 1. Other channels are always either at 100% (Full conduction) or at 0% (No conduction). The total power distributed to the Loads is equal to the Setpoint.

For example for 11 Channels and setpoint of 50% (i.e. input of Master channel 1 = 0.5), channels 2 to 6 are continuously on and channels 7 to 11 are continuously off. Channel 1 modulates with a duty cycle of 50% (Figure 151)

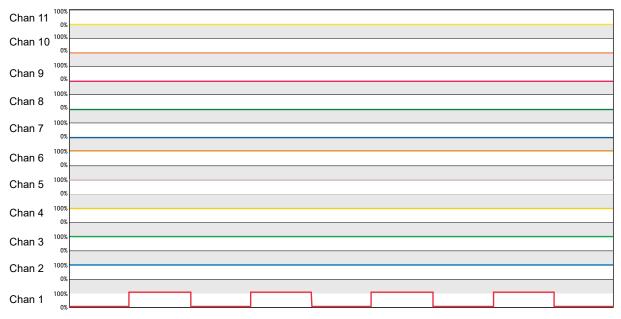
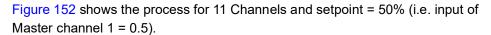


Figure 151 Incremental Control Type 2 Example

## **Rotating Incremental Control**

This kind of control, is similar to "Incremental Control Type 1" on page 221, but the modulated channel varies. Non-modulating channels are always either at 100% (Full conduction) or at 0% (No conduction). The total power distributed to the Loads is equal to the Setpoint.



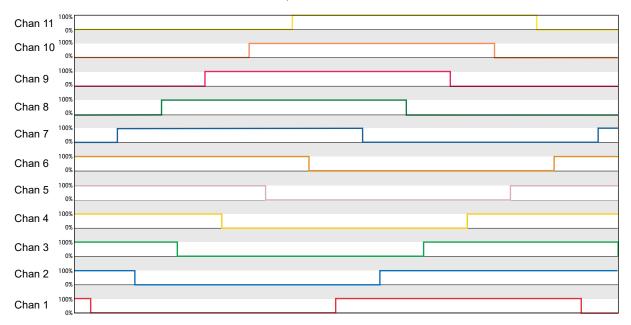


Figure 152 Rotating Incremental Control Example

### **Distributed Control**

With this kind of control, each Load has its own setpoint. In order to avoid simultaneous firing in more than one load, the modulation periods are staggered by a time given by t = T/N, where T is the modulation period configured by the user, and N is the number of channels.

**Note:** Load Sharing, described in "Load Sharing" on page 225, below is a more efficient solution to this problem.

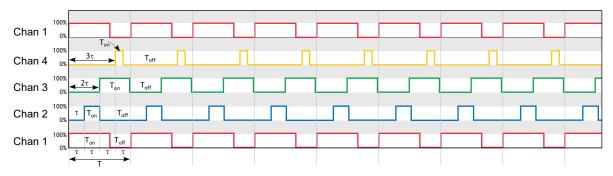


Figure 153 Distributed Control (4 Channels) Example

### Incremental/Distributed Control

With this kind of control, Loads are grouped together, with each group having a single setpoint which applies to all the channels in that group. "Incremental Control Type 2" on page 221 is applied within each group and distributed control is applied to the groups.

**Note:** The assigning of channels to groups is carried out, for each relevant Load Management channel, via its parameter LMChan 'Group'.

The example in Figure 154 shows 11 channels distributed within two groups.

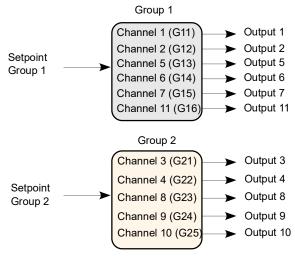


Figure 154 Channel Distribution Within Groups Example

For the six channels in group 1, assuming a set point of 60% (i.e. input of the first channel of group 1 = 0.6). Channel  $G_11$  modulates at 60%; channels  $G_12$  to  $G_14$  are continuously on (100%) and channels  $G_15$  and  $G_16$  are continuously off. That is, channel 1 modulates at 60%, channels 2, 5 and 6 are on, and channels 7 and 11 are off.

Similarly for the five channels in group 2, assuming a setpoint of 35% (i.e. unput of the first channel of group 2 =0.35), Channel  $G_21$  modulates at 75%;  $G_22$  is continuously on and  $G_23$ ,  $G_24$  and  $G_25$  are continuously off. That is, channel 3 is modulating at 75% (off), Channel 4 is continuously on and channels 8, 9 and 10 are continuously off.

The modulation period of group 2 is delayed with respect to that of group 1 bt  $\tau$  = T/g, where g = 2 (i.e.  $\tau$  = T/2).

**Note:** The modulation period T is a constant for all groups.

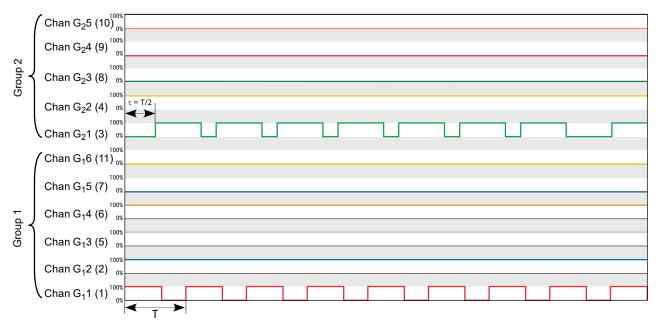


Figure 155 Incremental Distributed Control Example (Two Groups)

## **Rotating Incremental Distributed Control**

This method of control is similar to 'Incremental distributed control', described above, but within each group, the modulating channel number is incremented every modulation period.

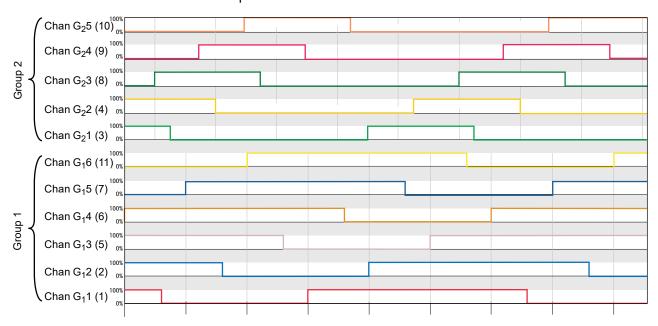


Figure 156 Rotating Incremental Distributed Control Example (Two Groups)

## **Load Sharing**

Load Sharing controls the time distribution of Total Power amongst loads, taking into account the amount of Power required by each load.

#### **Total Power Demand**

Each burst of power is defined by three parameters

- 1. P (Maximum load power) (Depends on line voltage and load impedance:  $P=V^2/Z$ )
- 2. η (Duty cycle (Ton/T))
- 3. D (Delay time).

Where more than one load (channel) is being used, the Total power demand varies in a complex way, as can be seen in the simple example, with just two channels, shown in Figure 157 below.

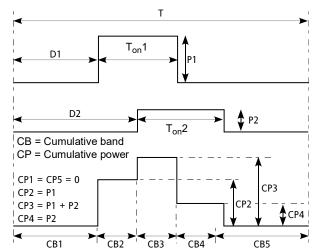


Figure 157 Total Power Demand Example

## **Sharing Efficiency Factor (F)**

The Sharing Efficiency Factor (F) is defined as follows:

$$F = \frac{P_{\text{max}} - (CP_{\text{max}} - CP_{\text{min}})}{P_{\text{max}}}$$

Where  $\mathsf{CP}_{\mathsf{max}}$  is the maximum of all the Cumulative Powers and  $\mathsf{CP}_{\mathsf{min}}$  the minimum. Sharing Efficiency increases as F approaches 1. That is, the closer  $\mathsf{CP}_{\mathsf{max}}$  and  $\mathsf{CP}_{\mathsf{min}}$  are to  $\mathsf{P}_{\mathsf{t}}$ , the higher the sharing efficiency.

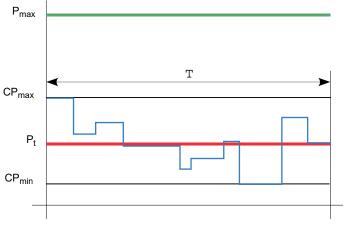


Figure 158 Sharing Efficiency Definitions

## **Sharing Algorithm**

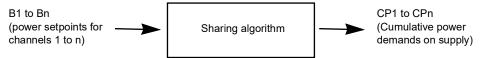


Figure 159 Sharing Algorithm Overview

The goal of the "Efficient Power" algorithm is to keep the value of F as close as possible to 1. To achieve this, the following parameters are manipulated:

- 1. The Delay time (D) for each load modulation
- 2. The order in which loads are modulated.

The algorithm itself is made of several steps which are computed before each modulation period.

- 1. The master determines the total number of channels (n)
- The master determines the setpoint (Power Demand) for each channel. This gives the Duty Cycle and the Max Power of the Load PZmax.
- Burst Image Initialisation. Each Burst (B<sub>i</sub>) is seen as a Rectangle (R<sub>i</sub>), where i is between 1 and 'n' inclusive. Eventually, these i rectangles will be placed in time, but initially they are not placed.
- 4. Cumulative Band Initialisation
- 5. Calculation of Pt and Pmax from the following equations, where L = duty cycle and H = load power:

$$P_t = \sum_{i=1}^{n} (R_i L \times R_i H)$$

6. Rectangle placement. Each rectangle is placed and the bands modified in consequence.

The same algorithm is performed several times and iteratively for all the rectangles. From the result, the solution with the best Efficiency Factor is taken as definitive result.

# **Load Shedding**

Load Shedding controls the total power distribution amongst loads by reducing the amount of Power distributed for each load so that the global power demanded is less than a given maximum (Ps). Load Shedding and Load Sharing may be used together if required.

#### **Definitions**

Pz = the power installed on a particular channel (zone). For channel 'i', Pz is given by the following equation:

$$Pzi_{\text{max}} = \frac{V_i^2}{R_i}$$

This parameter (PZMax) is available to the user in the Block 'LMChan'.

The Total Installed Power is the sum of all the relevant Maximum Load Powers. Thus, for n channels, the total Installed Power on the network ( $P_{max}$ ) is given by:

$$P_{\max} = \sum_{i=1}^{n} PZi_{\max}$$

Pmax is available to the user in the Block 'LoadMng.Network'.

The actual power demanded on channel 'i' depends on the duty cycle as follows:

$$Pt_i = \eta_i \times PZi_{max}$$

Pti is available to the user as parameter 'PBurst' in the Block 'Network.Meas'\* if no shedding is applied.

Note: Not to be confused with 'LoadMng.Network'.

The total power demanded on the Network is:

$$Pt = \sum_{i=1}^{n} Pt_{i}$$

This parameter (Pt) is available to the user in the Block 'LoadMng.Network', and represents the Mean Power which would be dissipated in the Load during one Modulation Period, if Load Shedding were not applied.

#### **Reduction of Power Demand**

A further parameter (Ps) is available to the user in the Block 'LoadMng.Network'. Ps is used to restrict the power demanded from the network to an absolute maximum value

For example the total installed power could be 2.5MW, but the user wishes to restrict the delivered power to below a tariff band of 2MW. In such a case Ps would be set to 2MW and power would be shed throughout the network in order to keep the total demand below 2MW.

If Ps > Pmax, load shedding is disabled.

If Ps≥Pt, no reduction is applied. If Ps<Pt, each duty cycle (h) is reduced by multiplying it by a reduction factor 'r' given by the equation below. The reduction factor is applied to each channel.

$$r = \frac{Ps}{Dt}$$

The resulting Power for a given channel (i) is:

$$Pr_i = r \times \eta_i \times Pt_i$$

The parameter  $Pr_i$  is available to the user as 'PBurst' in the Block 'Network.Meas' for each channel.

The resulting power is then:

$$\Pr = \sum_{i=1}^{n} \Pr_{i}$$

This parameter 'Pr' is available to the user in the Block LoadMng.Network.

Note: if all Shedding Ability Factors (see below) are zero, Pr must be close to Ps

### **Shedding Ability Factor**

For some applications, the power demand must be maintained for particular channels. For this reason a parameter called 'Shedding Ability Factor' can be configured for each channel, to define the threshold at which any reducing factor is applied to the channel.

This parameter (ShedFactor) is available to the user in the Block 'LMChan'

The reduction coefficient (r) is recalculated for each channel, in the following way, where 's' is the ShedFactor:

If  $s_i > r$ , then  $r_i = s_i$ ; If  $s_i <= r$ , then  $r_i = r$ 

For example, if  $s_i = 100\%$  no reducing coefficient is applied to channel 'i'; if  $s_i = 0\%$  the reducing coefficient r is always applied, as it is, to channel 'i'.

The resulting Power for a given channel is now:  $Pr_i = r_i \times \eta_i \times Pt_i$  with:  $Pr_i = r_i \times \eta_i \times Pt_i$ 

**Note:** If Pr is greater than Ps, due to the shedding ability coefficient applied to some channels on the Network, an indication alarm "PrOverPs" on page 239' is issued (see below).

## **Load Shedding Comparisons**

In this imaginary example, the Network consists of 32 Channels. The Power (PZMax<sub>i</sub>) and the Setpoint or Duty Cycle (Power demand  $\eta_i$ ) have the values given below during the relevant modulation period of 100 mains cycles. The total installed Power on the Network is Pmax = 1.285MW and the Demanded Power is Pt = 433kW

Channel No.	Setpoint	Power
1	10%	58kW
2	15%	9kW
3	56%	7kW
4	45%	56kW
5	1%	12kW
6	15%	4kW
7	45%	25kW
8	78%	23kW
9	52%	45kW
10	54%	12kW
11	56%	45kW
12	4%	78kW
13	5%	36kW
14	58%	25kW
15	78%	14kW
16	12%	58kW

Channel No.	Setpoint	Power
17	45%	69kW
18	9%	32kW
19	25%	65kW
20	45%	98kW
21	12%	96kW
22	18%	85kW
23	45%	74kW
24	56%	5kW
25	6%	2kW
26	39%	8kW
27	96%	7kW
28	65%	74kW
29	58%	85kW
30	9%	65kW
31	7%	5kW
32	56%	8kW

**Table 15: Channel Parameters** 

### Without Load Sharing, Synchronised

This is the worst case. The simulation in figure 9.4.3a shows the Power profile on the Modulation Period if all the channels are started at the same time (i.e. with no incremental control applied).

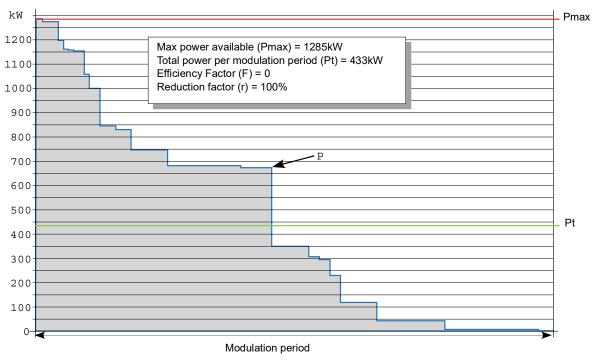


Figure 160 Synchronised without Load Sharing (r = 100%)

### Without Load Sharing, Synchronised, Reduction Factor 50%

Similar to the previous example, but the authorised Power has been set to Ps = 216kW. (Reduction factor 'r' is 50% (0.5).

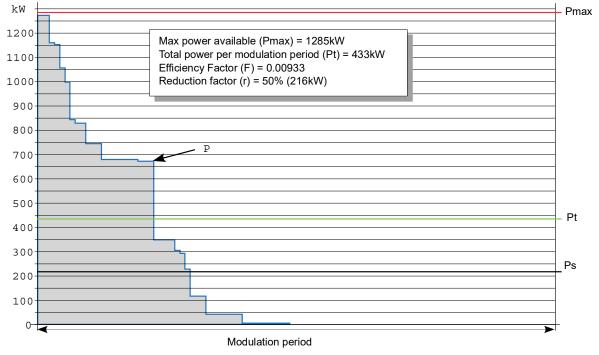


Figure 161 Synchronised without Load Sharing (r = 50%)

### Without Load Sharing not Synchronised

Because modulation periods start at different times, the power profile may be 'good' for some modulation periods, but poor for others.

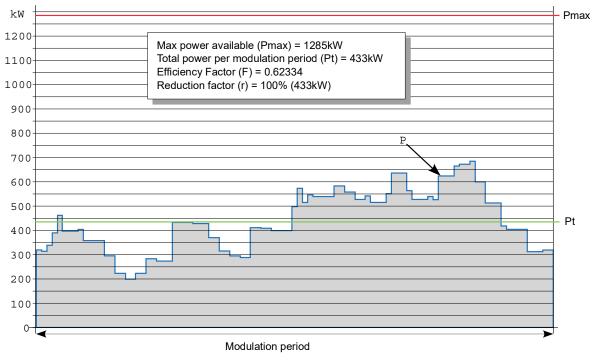


Figure 162 Non-synchronised without Load Sharing (r = 100%)

### Without Load Sharing, non-Synchronised, Reduction Factor 50%

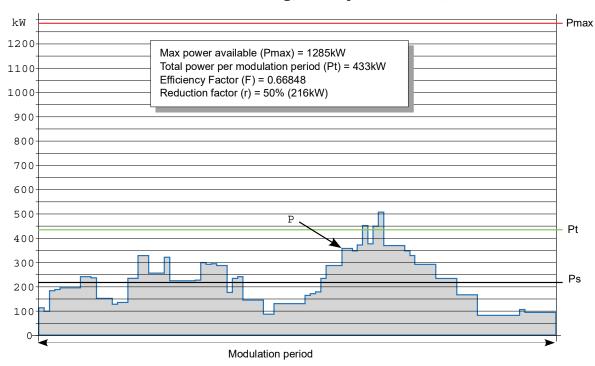


Figure 163 Non-synchronised without Load Sharing (r = 50%)

### With Load Sharing

In this example, the Sharing algorithm has been applied. The total power and power demand are the same as in previous examples, but the power profile is approximately flat, with a value close to Pt.

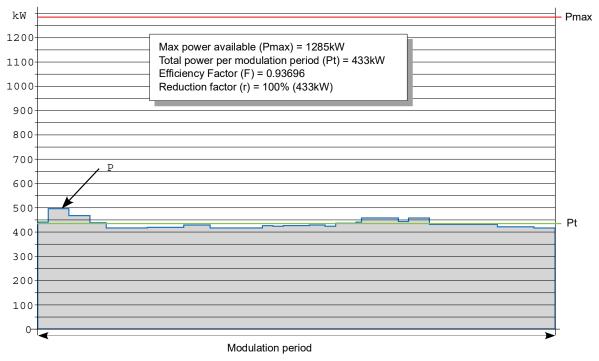


Figure 164 Load Sharing (r = 100%)

### With Load Sharing, Reduction Factor = 50%

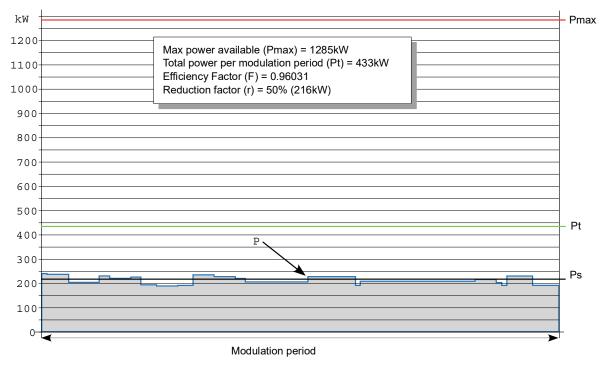


Figure 165 With Load Sharing (r = 50%)

In this example, it can be seen that the Sharing algorithm has been re-calculated with the new values. This gives a different shape to the global power distribution but, as with the previous example, the power profile is approximately flat, with a value close to Ps.

## Configuration

## **iTools Graphical Wiring**

Load Management configuration is carried out in the following stages:

Standard Power Control Loop

Each Channel is built and configured from standard blocks. Figure 166 shows a typical example.

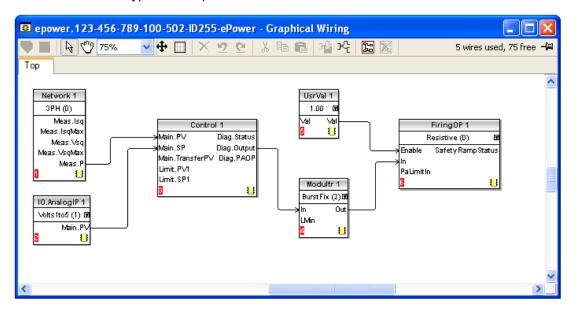


Figure 166 Control Loop Wiring in iTools

Each channel may be of any type, single phase, 2-legs or three phase.

**Note:** Load Management sets the Modulator type to 'BurstFix'. Similarly, Burst length is defined by the LM Master.

#### Load Management Channels (LMChan 1 To LMChan 4)

For each Channel, the Modulator Block input 'LMIn' must be wired to the LMout parameter of an LMChan Block. Each channel is then managed by its own LMChan block. Figure 167 shows a configuration of three single phase control channels.

### Global Load Management Control (LoadMng)

The LoadMng Block is added. Each LMChan LmIn parameter is wired to a LoadMng LMout parameter. Figure 168 shows the complete configuration

#### **Notes:**

- 1. If a channel is not wired to a slot of the LoadMng block, it doesn't participate to the Load Management process.
- 2. On a Given Station, it is allowed to mix channels which participate to the PLM process, and channels which do not.

#### **Calculation and Communications**

The Unit performs all the operations needed by the Predictive Load Management process transparently to the user.

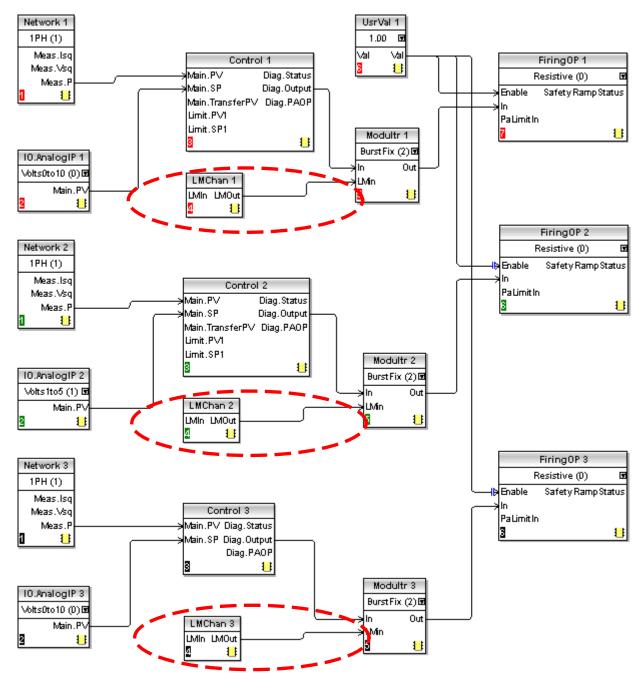


Figure 167 LMChan Blocks

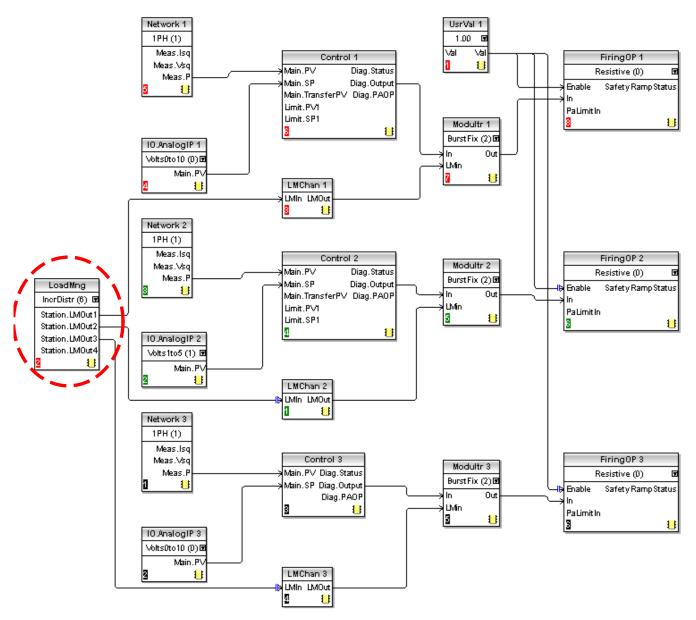


Figure 168 LoadMng Blocks

## **Predictive Load Management Function Block Details**

Full details of Load Management parameters are to be found in sections 6.21 and 6.19 above.

### LM Type

Configures the type of Load Management, as load sharing or load sequencing (or off).

Function block location

LoadMng.Main

Parameter name Type
Accessible Always
Minimum access level for editing

Config

Type Enumeration

Values 0: (LMNo). Load Management disabled

1: (Sharing). Load sharing enabled. See "Load Sharing" on

page 225

2: (IncrT1). "Incremental Control Type 1" on page 221.
3: (IncrT2). "Incremental Control Type 2" on page 221.
4: (RotIncr). "Rotating Incremental Control" on page 222.
5: (Distrib). "Distributed Control" on page 223.

6: (DistIncr). "Incremental/Distributed Control" on

page 223.

**Note:** If Type is not 'LMNo' and 'Address' is non-zero, the Master impose its own Type of Load Management on the associated slaves.

#### Period

This configures the modulation period for the Station. This is used only by the PLM master and is imposed on all slaves. It is recommended that all slaves are configured to have the same modulation period so that should the master lose control, the newly elected master will inherit the period from the previous master. If the period is different, the new master imposes its own period on the network at the next power-cycle.

'Period' may be set in the range of 50 to 1000 mains periods. The accuracy of the power control is related to this value. To increase the accuracy you must increase the period ("Power Modulation and Accuracy" on page 220).

Function block location

LoadMng.Main

Parameter name Period Accessible Always Minimum access level for editing

Config

Type Uint16

Values Min = 50; Max = 1000 mains periods

#### **Address**

Address of the Station on the Network. This must be configured before Predictive Load Management (PLM) will operate. The default on delivery is 0 which means that PLM is inhibited. The address may be set in a range of 1 to 63, the lowest address on the network will negotiate to become the Network Master.

Function block location

LoadMng.Station

Parameter name Address
Accessible Always
Minimum access level for editing

Config

Type Uint8

Values Min = 1; Max = 63. 0 = PLM disabled for this Station (de-

fault).

#### Ps

The total amount of power allowed on the Network using Load Shedding. Configured by the user in order to restrict the power demanded from the network.

For example the total installed power could be 2.5MW but it is required that the delivered power be restricted to below a tariff band of 2MW. In such a case Ps would be set to 2MW and power would be shed across the network to ensure that the total demand remains below 2MW.

If Ps is set to a value greater than Pmax, Load Shedding is disabled. The default value for this parameter is set to 5MW. For almost applications, this disables the Load Shedding function

Function block location

LoadMng.Network

Parameter name Ps

Accessible With Sharing or Distributed Control only.

Minimum access level for editing

Engineer

Type Float32

Values 0 to 99999 watts

#### **Shedfactor**

This defines, for each channel, the threshold at which the reducing factor is applied to the modulator for load shedding.

Function block location

**LMChan** 

Parameter name ShedFactor

Accessible With Sharing or Distributed Control only.

Minimum access level for editing

Engineer

Type Uint8 Values 0 to 100%

#### Group

This allows the channel to be allocated to a specific group for Incremental Distributed and Rotating Incremental Distributed control types.

Function block location

LMChan

Parameter name Group

Accessible With 'Incremental Distributed' and 'Rotating Incremental

Distributed'

Minimum access level for editing

Config

Type Uint8 Values 0 to 7

### **PZMax**

Total Power installed on the channel (the sum of all the maximum load powers)

Function block location

LMChan

Parameter name PZMax
Accessible Always.
Minimum access level for editing

Read only

Type Float32 Values Any (Watts)

#### **Status**

Indicates the current status of the Station.

Function block location

LoadMng.Station

Parameter name Status

Accessible Always. Minimum access level for editing

Read only

Type Enumeration

Values 0 (Pending). The election of a master is in progress ("Mas-

ter Election" on page 239)

1 (IsMaster). This unit (Station) is the Master.

2 (IsSlave). This unit is a Slave.

3 (DuplAddr). This Station has the same address as one or

more others.

All such Stations are disabled from taking part in Load

Management.

**Note:** If 'Pending' appears permanently, there is a configuration error in the network.

#### **NumChan**

This parameter indicates how many channels on this Station, are participating in the Load Management process. See also 'TotalChannels', below.

Function block location

LoadMng.Station

Parameter name NumChan Accessible Always Minimum access level for editing Read only

Type Uint8

Values Min = 1; Max = 4.

Note: It is not necessary that all channels in a Station participate in the Load Management process.

#### **TotalStation**

This parameter indicates how many Stations are participating in the Load Management process on this PLM link.

Function block location

LoadMng.Network

**TotalStation** Parameter name Accessible Always Minimum access level for editing Read only

Type Uint8

Values Min = 1; Max = 63

#### **TotalChannels**

This shows how many Channels are participating in the Load Management process on this PLM link.

Function block location

LoadMng.Network

Parameter name **TotalChannels** 

Accessible Always Minimum access level for editing

Read only

Type Uint8

Values Min = 1; Max = 64.

#### **Pmax**

Indicates the total amount of power which is installed on the Load Management Network and is currently participating in the Load Management strategy.

Function block location

LoadMng.Network

Parameter name Pmax Accessible Always Minimum access level for editing

Read only

Type Float32

Values No limits (Watts)

#### PT

Indicates the total amount of power that has been demanded from the network. (The sum of the powers demanded by each channel participating in the Load Management strategy.)

Function block location

LoadMng.Network

Parameter name Accessible Always Minimum access level for editing

Read only

Type Float32

Values No limits (Watts)

#### PR

Indicates the total amount of power that has actually been delivered through the network. This value could be larger than Ps depending upon the Shed Factors of all channels.

Function block location

LoadMng.Network

Parameter name Pr Accessible Always Minimum access level for editing

Read only

Type Float32

Values No limits (Watts)

### **Efficiency**

Indicates how efficiently Load Management is operating as a percentage value. This (F) is calculated from the equation: F = (Pmax -(PtMax-PtMin))/Pmax where: PtMax = the maximum peak value of total power during the modulation period. PtMin = the minimum peak value of total power during the modulation period.

Function block location

LoadMng.Network

Parameter name Efficiency Accessible Always Minimum access level for editing Read only

Type Uint8 0 to 100% Values

#### **Master Address**

Address of elected Master on the PLM network. (Normally the lowest address on the PLM link.) If this Station is master, this address is the same as the Station's PLM address, otherwise it is different.

Function block location

LoadMng.Network

Parameter name MasterAddr Accessible Always Minimum access level for editing

Read only

Type Uint8 Values 1 to 63

### **Master Election**

This mechanism ensures that the Active Station with the lowest address is elected the Master. The election process can be initiated in any of the circumstances detailed below. During the election process, the Station Status is 'Pending'.

As soon a Station has been recognized as Master, its Status changes to 'IsMaster'. As soon a Station has been recognized as Slave, its Status changes to 'IsSlave'.

## **Master Election Triggers**

- 1. The election process starts at Initialisation Time and continues until all Stations have found the Master.
- 2. The election process is initiated if a Station has not received a firing demand for 100ms or more.
- It is assumed that, if a Master has lost control, it will be re-initialised before being re-inserted into the Network, automatically activating the Master election process.
- 4. A new Station inserted into the System automatically triggers the Master election.

#### Notes:

- 1. The Election mechanism is asynchronous and may be triggered at any time.
- During the Election mechanism, Duplicate Address detection is performed. If an address is recognised as duplicate, the Status of the Station changes to 'DupplAddr'.

### **Alarm Indication**

#### **PrOverPs**

Indication Alarm: Pr over Ps:

This tells the user that the real Power Pr is greater than the requested 'shed power' Ps. This is the case where a shed factor has been applied to one or more channels. Alternatively, the alarm may be caused by the false calibration of one or more channels.

This parameter appears only at the Master Station.

# **Trouble Shooting**

## **Wrong Station Status**

### **Duplicate LM Address**

One or more Stations have the same PLM address. These Stations are excluded from the PLM process.

**Note:** Zero is not a valid PLM address. When the PLM address is set to zero, the Station is excluded from the PLM process.

### Station Status Permanently 'Pending'

PLM Address is set to 0

Hardware wiring error. Ensure that all 'High' pins are correctly daisy chained and that all 'Low' pins are correctly daisy-chained. If there is a break, it is likely that two or more masters will be elected and be working in opposition with one another.

PLM option board not fitted correctly

### **Station Type MISMATCH**

There is nothing to prevent single-phase and three-phase units being mixed. This should be avoided by grouping the single-phase units on one PLM Network, and the three-phase units on another.

EPOWER CONTROLLER Alarms

## **Alarms**

## **A** DANGER

#### **HAZARD OF FIRE**

EPower alarms protect thyristors and loads against abnormal operation, and provide the user with valuable information regarding the type of fault. Under no circumstances must these alarms be regarded as a replacement for proper personnel protection. It is strongly recommended that the installing authority include independent, system-safety mechanisms to protect both personnel and equipment against injury or damage, and that such safety mechanisms be regularly inspected and maintained. Consult the EPower supplier for advice.

Failure to follow these instructions will result in death or serious injury.

## **System Alarms**

System alarms are considered to be 'Major Events' which prevent proper operation of the system, and the relevant module is placed in standby mode. In some configurations (e.g. four × single-phase) it is possible that a system alarm generated in one power module will set only that module into standby mode, and the other three phases will continue as normal.

The following subsections describe each of the possible system alarms.

## **Missing Mains**

Supply power is missing from the relevant power module. If one or more phase out of two or three phase systems are missing, the system stops firing altogether, in order to avoid unbalanced firing. The alarm trigger depends on the type of load coupling.

## **Thyristor Short Circuit**

A thyristor short circuit leads to current flow even when not firing.

## **Thyristor Open Circuit**

This fault means that no current flow occurs, even when the thyristor(s) should be firing. The fault is detected is by measuring the load voltage, so the fault is not detected if the remote sensing option is fitted.

#### **Fuse Blown**

High speed fuses are fitted in series with the thyristors in order to protect them.

## **Over Temperature**

The thyristor heat sink temperature is measured and if it is considered to be too high for the current application, the over temperature alarm is set and firing is inhibited. Hysteresis is built in to the measurement system to ensure that the heat sink is allowed to cool properly before firing can re-commence.

Alarms EPOWER CONTROLLER

### **Network Dips**

This detects a reduction is supply voltage, and if this reduction exceeds a configurable measured value (VdipsThreshold), firing will be inhibited until the supply voltage returns to a suitable value. VdipsThreshold represents a percentage change in supply voltage between successive half cycles, and can be defined by the user in the Network. Setup menu, as described in "Network Setup Submenu" on page 122.

## **Mains Frequency Fault**

Triggered if the supply voltage frequency strays out of the range 47 to 63 Hz, or if the mains frequency changes, for one cycle to the next, by more than 0.18% of base frequency, or by more than 0.9% of the frequency measured last cycle. Firing stops until the supply frequency returns to a satisfactory state.

#### **Power Board 24V Fail**

The 24 Volt supply rail in the power module has failed. The power module stops firing immediately, and does not restart until the fault is rectified.

### **Process Alarms**

Process Alarms are related to the application and can be configured either to stop the power module firing (Standby Mode) or to allow operation to continue. Process alarms can also be configured to be latched and if so, they have to be acknowledged before the alarm is considered to be non-active. Alarms cannot be acknowledged until the trigger source has returned to a non-active state.

## **Total Load Failure (TLF)**

No load is connected to one or more power controllers.

The detection is based on RMS load current and RMS load voltage of the last mains half cycle. In case of total load failure, a load voltage is measured even though load current is equal or close to zero. This method might not indicate the failed phase accurately in all load configurations (e.g. closed delta configuration for 3 phase load).

## **Analogue Output Fault**

This indicates that the output of this block has failed. This could be due to a short or open-circuit.

## **Chop Off**

Triggered by one of two user configurable parameters viz: ChopOff1 Threshold and ChopOff2 Threshold (to be found in the Network.setup area of configuration ("Network Setup Submenu" on page 122)).

'ChopOff1 Threshold' triggers the chop off alarm when the load current meets or exceeds the threshold for more than 5 seconds. Firing stops, and will not re-start until the alarm is acknowledged. The threshold can be set to any value between 100% and 150% of the nominal load current.

EPOWER CONTROLLER Alarms

'ChopOff2 Threshold' triggers the chop-off alarm if the load current meets or exceeds the ChopOff1 threshold more than 'Number Chop Off' times in 'Window Chop Off' seconds, where 'Number Chop Off' is configurable between 1 and 16, and 'Window Chop Off' can take values between 1 and 65535 seconds (both values inclusive).

Firing stops in the relevant power module, each time the threshold is met or exceeded. Firing restarts after 100ms providing that the threshold has not been exceeded the specified number of times within the specified number of seconds. Otherwise, firing remains disabled until the alarm is acknowledged.

**Note:** for two- or three-phase systems the over-current measurements relate to the maximum current in any phase, regardless of which phase may be at fault.

## Mains Voltage Fault

Two thresholds 'OverVoltThreshold' and 'UnderVoltThreshold' can be configured as a percentage of VLineNominal. Both parameters are to be found in the Network. Setup area of configuration ("Network Setup Submenu" on page 122).

The threshold check of each line voltage is implemented in the corresponding network task of the power controller. This fault is indicated within 1 mains cycle period.

Note: This Alarm is returned FALSE if the MissingMains Alarm is set on this phase.

### **Temperature Pre-Alarm**

This function acts as a warning which becomes active when unexpectedly high operational temperatures are reached. The warning becomes active before unit operation stops.

HeatsinkPreTemp threshold is configured (between 30°C and 107°C) and if this value is exceeded by the heat sink in any Power module, the alarm is triggered. A hysteresis of 2°C is applied to avoid fast toggling. The parameter is to be found in Network.Setup, as described in "Network Setup Submenu" on page 122.

## **Closed Loop Break**

This parameter is set to TRUE if the control process cannot be performed. This is normally due to an external constraint which means the control loop cannot achieve setpoint despite the loop demanding 100% power. A closed loop break detection is enabled when the loop is demanding its output, if the Active error (SP-PV) is higher than 10% for 2 integral times the closed loop break is signalled.

## Partial Load Failure (PLF)

See also 'PARTIAL LOAD FAILURE CALCULATIONS' in "Network Setup Submenu" on page 122.

This alarm detects a static increase in load impedance by comparing the reference load impedance (as configured by the user) with the actual measured load impedance over a mains cycle (for phase angle firing) and over the burst period (for burst and logic firing).

Alarms EPOWER CONTROLLER

The sensitivity of the partial load failure measurement can be set to any value between 2 to 6 inclusive, where an entry of 2, for example, means that one half of the elements (or more) must be open circuit in order to trigger the alarm; an entry of 3 means that one third of the elements (or more) must be open circuit in order to trigger the alarm, and so on down to one sixth. All elements must have identical characteristics and identical impedance values and must be connected in parallel).

The relevant parameters (PLFAdjustReq, and PLFSensitivity) are both to be found in Network.Setup, as described in "Network Setup Submenu" on page 122.

For three-phase loads, the impedance reference can be set only if the load is balanced.

**Note:** This Alarm is returned FALSE if the TLF (Total Load Failure) Alarm is set on this phase.

## Partial Load Unbalance (PLU)

This alarm is applicable only to three-phase load configurations and indicates when the difference between highest and lowest current value reaches a threshold (PLUthreshold) configurable between 5% and 50% of the highest load current. PLUthreshold appears in Network.Setup, as described in "Network Setup Submenu" on page 122.

### **Indication Alarms**

Indication Alarms signal events for operator action if required. Indication alarms cannot be configured to stop power module firing, but they may be latched if required, and if latched, they must be acknowledged for the Signalling Status to return to the normal (non-alarm) state.

### **Process Value Transfer Active**

Indicates when a transfer control mode (e.g.  $V^2 \leftrightarrow I^2 P \leftrightarrow I^2$  or  $V^2 \leftrightarrow I^2$ ) is active.

#### **Limitation Active**

Indicates when the internal firing control loop limits the firing output ( $I^2$  or  $V^2$ ) (in order not to exceed the adjusted maximum value)

#### **Load Over-Current**

Indicates when a configurable RMS load current threshold (OverIthreshold) is reached or exceeded. The parameter is found in the Network. Setup area of configuration ("Network Setup Submenu" on page 122) and is configurable as 10% to 400% of Nominal Current.

## Over Load Shedding (Ps over Pr) Alarm

Applies only to units fitted with the Load Management option ("Predictive Load Management Option" on page 219).

Load Shedding reduces the global power demand Pt to a given level Ps. Load Shedding and Load Sharing may be applied simultaneously if required.

EPOWER CONTROLLER Alarms

Ps is the reduced Power; Pt is the total demanded Power. If Ps>=Pt, no reduction is applied. If Ps<Pt, each Duty Cycle is reduced by multiplying it by a reduction factor (rIndication Alarms= Ps/Pt):

For some applications, the Power Demand can not be reduced for particular channels, so each load can be allocated a 'Shed factor' during configuration.

The Reduction coefficient (r) is recalculated for each Channel, such that if  $s_i > r$  then  $r_i = s_i$ , but if  $s_i \le r$ , then  $r_i = r$ . Thus if  $s_i = 100\%$  the reducing coefficient is never applied; if  $s_i = 0\%$  the reducing coefficient r is always applied as it is.

Thus, the consumed Power is not Ps as requested, but Pr where Ps  $\leq$  Pr  $\leq$  Pt. The alarm Ps over Pt becomes active when Pr  $\geq$  Ps, to alert the user to the fact that the actual power is greater than the shed power requested.

**Note:** This alarm appears only at the Load Management master station.

Alarms EPOWER CONTROLLER

EPOWER CONTROLLER Technical Specification

# **Technical Specification**

### **Standards**

The product is designed and produced to comply with:

Standard symbol	Standard details
CE	EN60947-4-3:2014 (identical to IEC60947-4-3:2014) Low-voltage switchgear and controlgear - Part 4-3:Contactors and motor-starters - AC semiconductor controllers and contactors for non-motor loads. Declaration of conformity available on request.
CUL US LISTED	UL60947-4-1; CAN/CSA C22.2 NO.60947-4-1-14 Low-Voltage Switchgear and Controlgear - Part 4-1: Contactors and Motor-Starters - Electromechanical Contactors and Motor-Starters U.L. File N° E86160
<b>&amp;</b>	Regulatory Compliance Mark (RCM) For Australian Communication and Media Authority based on compliance to EN60947-4-3:2014.

### **Installation Categories**

	Installation Category	Rated impulse withstand voltage (Uimp)	Rated insulation voltage (Ui)	Maximum value of rated operational voltage to earth
Communications	II	0.5kV	50V	50V
Standard and optional IO	II	0.5kV	50V	50V
Driver module power supply & Auxiliary (Fan) supply	II	2.5kV	230V	300V
Relays	III	4kV	230V	300V
Power Modules (up to 600V)	III	6kV	600V	600V
Power Modules (up to 690V)	II	6kV	690V	600V

# **A** DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

The insulation barriers of the equipment have been designed for the rating as defined in the table above at an altitude of 2000m maximum.

Technical Specification EPOWER CONTROLLER

#### **Driver**

## **▲** WARNING

#### **HAZARD OF FIRE**

The Driver Module power supply can work from any supply voltage between 85V ac and 265V ac. The fans (if fitted) on the power modules are specified for use at 115V ac or 230V ac, as defined at time of order. It must therefore be ensured that the fan voltage matches the supply voltage, or the fan will either fail within a short period, or it will be ineffective at cooling.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Driver Module Power Supply & Auxiliary (Fan) Supply

Rated control supply voltage (Us): 100 to 240 V ac (+10% - 15%)

Frequency range: 47 to 63 Hz

Power requirement: 60W + Power Module fans (15W each for 400/500/630A power

modules; 10W each for 160A/250A modules).

#### **Power Module**

Number of modules: Up to four identical units per Driver Module.

Rated operational voltages (Ue): 100 to 600 V ac (+10% - 15%) (CE and UL units) or

100 to 690 V ac (+10% - 15%) (CE units only), as specified at

time of order.

Frequency range: 47 to 63 Hz

Rated operational currents (le) 16 to 630 A depending on power module.

Power dissipation: 1.3W per Amp, per phase.

Cooling

Up to and including 100A: Natural convection

Above 100A: Fan cooling. Fans are connected in parallel to driver module

connector (Figure 7).

Fan supply voltage: 115 or 230V ac, as specified at time of order (see 'Caution' above).

Fan power requirement: 10 W for 160A/250A modules; 15W for 400A, 500 and 630A

modules.

Utilization categories AC51: Non-inductive or slightly inductive loads, resistance furnaces

AC56a: Switching of transformers.

Overload conditions AC51: 1 x le continuous

AC56a: 1xle continuous

Rated Duty Uninterrupted duty / continuous operation

Form designation Form 4 (Semiconductor controller)

Rated short-circuit conditional current: CE 92kA all modules except: 98kA for 500A modules;105kA for

See paragraph 12.3 for details 630A modules.

690 Volts Maximum; coordination type 1.

UL UL SCCR Rated: 100kA RMS symmetrical amperes, 600 Volts

ac Maximum coordination type 1

EPower units do not incorporate branch-circuit protection. It is the user's responsibility to incorporate branch-circuit protection upstream of the EPower unit. The installation must comply in its entirety with all applicable local safety and emissions regulations. The above branch-circuit protection is necessary in order to meet

NEC requirements.

Load Types Single or multiphase control of resistive loads (low/high

temperature coefficient and non-aging/aging types) and transformer primaries. Load voltage/current feedback either internal (standard) or external (option for use with transformer

secondaries for example).

**EPOWER CONTROLLER Technical Specification** 

#### **Physical**

Dimensions and fixing centres

See Figure 2 to Figure 5 for details

See accompanying table. Weight

	W	Weight (including 2 kg (4.4 lb) for driver module)						le)
Current	1 pł	nase	2 ph	ases	3 ph	ases	4 ph	ases
	kg	lb	kg	lb	kg	lb	kg	lb
50/100 A	6.5	14.3	11.0	24.3	15.5	34.2	20.0	44.1
160 A	6.9	15.2	11.8	26.0	16.7	36.8	21.6	47.6
250 A	7.8	17.2	13.6	30.0	19.4	42.8	25.2	55.6
400 A	11.8	26.0	21.6	47.6	31.4	69.2	41.2	90.8
500 A	14.0	30.9	26.0	57.3	38.0	83.8	50.0	110.2
630 A	14.5	32.0	27.0	59.5	39.5	87.1	52.0	114.6

Weights ± 50gm (2 oz)

lb	OZ
0.1	1.6
0.2	3.2
0.3	4.8
0.4	6.4
0.5	8.0
0.6	9.6
0.7	11.2
0.8	12.8
0.9	14.4

#### **Environment**

Temperature limits Operating: 0°C to 40°C maximum at 1000m

> 0°C to 35°C maximum at 2000m (Refer to de-rating curve for upper

temperature)

-25°C to +70°C Storage:

Altitude (maximum) 1000 metres at 40°C

2000 metres at 35°C

(Refer to de-rating curve for upper

temperature)

**Humidity limits** 5% to 95% RH (non-condensing)

Pollution degree Pollution degree 2

Atmosphere

HA179769 Issue 16

Non-explosive, non-corrosive and

non-conductive.

Protection CE IP10 (according to EN60529)

> IP10 With internal lug terminals of size as given in Table 2.2.2a Line/Load termination details IP00 with power connection adapter (see Table 2.2.2b Power connection

adapter termination details)

UL Open type

External wiring CE Must comply with IEC60364-1 and

IEC60364-5-54 and all applicable local regulations.


Cross sections must comply with Table 9 & 10 of IEC60947-1.


UL Wiring must comply with NEC and all applicable local regulations.

> Used cables must be rated 75°C stranded copper only. Connection must be made by using listed lugs.

Shock (EN60068-2-27) 10g peak; 6ms duration; 100 bumps Vibration (EN60068-2-6)

67 to 150Hz at 1g.

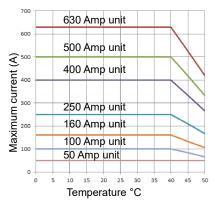

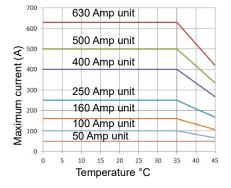

249

Technical Specification EPOWER CONTROLLER

### **EMC**

Standard

#### EN60947-4-3:2014

This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the user may be required to take adequate mitigation measures.

### EMC Test Results (According to EN60947-4-3:2014)

EMC immunity tooto	Le	Level			
EMC immunity tests	Requested	Achieved	Requested	Achieved	
Electrostatic discharge (test method of EN 61000-4-2)	Air discharge mode 8kV Contact discharge mode 4kV	Air discharge mode 8kV Contact discharge mode 4kV	2	2	
Radiated radio-frequency electromagnetic field test (test method of EN 61000-4-3)	10V/m from 80MHz to 1GHz and from 1,4GHz to 2GHz	10V/m from 80MHz to 3GHz	1	1	
Fast transient/burst test (5/50 ns) (test method of EN 61000-4-4)	Power ports 2kV / 5kHz Signal ports 1kV / 5kHz	Power ports 2kV / 5kHz Signal ports 2kV / 5kHz	2	1	
Surge Voltage test (1,2/50 µs – 8/20 µs) (test method of EN 61000-4-5)	2kV line to earth 1kV line to line	2kV line to earth 1kV line to line	2	2	
Conducted radio-frequency test (test method of EN 61000-4-6)	10V (140dBµV) from 0,15MHz to 80 MHz	10V (140dBµV) from 0,15MHz to 80 MHz	1	1	
Voltage dips test (test method of EN 61000-4-11)	0% during 0.5 cycle & 1 cycle	0% during 0.5 cycle & 1 cycle	2	2	
	40% during 10/12 cycles	40% during 10/12 cycles	3	2	
	70% during 25/30 cycles	70% during 25/30 cycles	3	2	
	80% during 250/300 cycles	80% during 250/300 cycles	3	2	
Short interruptions test (test method of EN 61000-4-11)	0% during 250/300 cycles	0% during 250/300 cycles	3	2	

Test	Frequency	Limit level indus		Comments
Test	(MHz)	Quasi peak dB (µV)	Average dB (µV)	Comments
Radiated radio frequency emission test	30 to 230	40 at 10m	N/A	Pass
According to EN60947-4-3:2014 (test method of CISPR11)	230 to 1000	47 at 10m	N/A	
Conducted radio frequency emission test	0.15 to 0.5	100	90	
According to EN 60947-4-3:2014 for rated power >20 kVA	0.5 to 5	86	76	Pass <sup>2</sup>
(test method of CISPR11)	5 to 30	90 to 73 <sup>3</sup>	80 to 60 <sup>3</sup>	

**EPOWER CONTROLLER Technical Specification** 

> 1. This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the user may be required to take adequate mitigation measures.

2. PASS in burst firing mode without external filters. PASS in phase angle mode firing with external filters TDK / EPCOS B84143C\*S250/S251 series rated from 160A to 2500A.

Decrease with log of frequency.

### **Operator Interface**

Display: Four lines of up to 10 characters each. Display pages can be

> used to view process variable values and to view and edit the configuration of the unit. (Editing of the configuration is better carried out using configuration software (iTools).) In addition to the standard displays, up to four 'custom' pages can be defined

which allow bargraph displays, text entry etc.

Seven high x five wide yellow-green LCD dot matrix array. Character format: Push buttons

Four push buttons provide page and item entry and scroll

facilities.

Three indicators (PWR. LOC and ALM) are supplied to indicate LED indicators (beacons)

that power is applied, that Local Control is selected and that there

is one or more active alarm, respectively.

### Standard Inputs/Outputs (SK1)

All figures are with respect to driver module 0V, unless otherwise stated.

Number of inputs/outputs

Number of analogue inputs: 2 Number of analogue outputs

Number of digital inputs/outputs: 2 (each configurable as an input or an output).

10V (Potentiometer) supply:

Update rate Twice the mains frequency applied to power module 1. Defaults

to 83.2 Hz (12 ms) if no power applied to power module 1 or if

supply frequency lies outside the range 47 to 6 3Hz.)

**Termination** Removable 10-way connector. (5.08 mm. pitch)

#### Analogue Inputs

Performance: See Table 16 and Table 17

Each input is configurable as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 Input types:

to 5V, 0 to 20mA, 4 to 20 mA.

Absolute maxima + terminal: ±16V or ±40mA

- terminal: ±1.5V or ±300mA

#### **Analogue Outputs**

Performance: See tables 11c and 11d.

Output types: Each output is configurable as one of: 0 to 10V, 1 to 5 V, 2 to 10V,

0 to 5V, 0 to 20mA, 4 to 20 mA.

Absolute maxima (-0.7V or -300mA) or (+16V or +40mA)+ terminal:

> 0V terminal: ±2A

### 10V (Potentiometer Supply)

Output voltage: 10.3V ± 0.3V @ 5.5mA

Short circuit o/p current: 15mA max.

Ambient temperature drift: ± 0.012%/ °C (typ); ±0.04%/ °C (max.)

(-0.7V or -300mA) or (+16V or +40mA)Absolute maxima Pin 1:

Technical Specification EPOWER CONTROLLER

#### Digital I/O

Hardware response time: 100µs

Voltage inputs

Active level (high): 4.4V<Vin<30V
Non-active level (low): -30V<Vin<+2.3V

Input impedance:  $10k\Omega$ 

Contact closure inputs

Source current: 10mA min; 15mA max.

Open contact (non active) resistance:  $>500\Omega$ Closed contact (active) resistance:  $<150\Omega$ 

Current source output

Source current: 9mA<I<sub>source</sub> <14mA @ 14V

10mA<I<sub>source</sub> <15mA @ 0V 9mA<I<sub>source</sub> <14mA @ -15V

Open circuit voltage: <14V

Internal pull-down resistance:  $10k\Omega$  (to 0 V) Absolute Maxima + terminal:  $\pm 30$ V or  $\pm 25$ mA

0V terminal ±2A

#### **Notes:**

1. Absolute maximum ratings refer to externally applied signals

2. The 10V potentiometer supply is designed to supply two  $5k\Omega$  potentiometers connected in parallel with one another.

3. The maximum current for any 0V terminal is ±2A.

4. PLC compatibility: Digital inputs are not 100% compliant with IEC 61131-2 (It is recommended that the user check compatibility before use

## **A DANGER**

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.

Failure to follow these instructions will result in death or serious injury.

Analogue input: Voltage input performance						
Parameter	Typical	Max/Min				
Total voltage working input span (note 1)		-0.25V to + 12.5V				
Resolution (noise free) (note 2)	13 bits					
Calibration error (notes 3, 4)	<0.25%	<0.5%				
Linearity error (note 3)		±0.1%				
Ambient temperature error (note 3)		<0.01%/°C				
Input resistance (+'ve terminal to 0V)		>140kΩ				
Input resistance (-'ve terminal to 0V)	150Ω					
Allowable voltage (-'ve terminal to 0V)		±1V				
Series mode rejection of mains interference	46dB	>30dB				
Common mode dc rejection	46dB	>40dB				
Hardware response time	5ms					

EPOWER CONTROLLER Technical Specification

Analogue input: Voltage input performance			
Parameter	Typical	Max/Min	
Note 1: w.r.t. to the relevant -'ve input	Note 3: % of 6 (0 to 5V, 0 to	<u> </u>	
Note 2: w.r.t. total working span	Note 4: After v	varm up. Ambient = 25 °C	

Table 16: Analogue Input Specification Table (Voltage Inputs)

Analogue input current input performance				
Parameter	Typical	Max/Min		
Total current working input span		-1mA to +25mA		
Resolution (noise free) (note 1)	12 bits			
Calibration error (notes 2, 3)	<0.25%	<0.5%		
Linearity error (note 2)		±0.1%		
Ambient temperature error (note 2)		<0.01%/°C		
Input resistance (+'ve to -'ve terminal)	235Ω			
Input resistance (-'ve terminal to 0V)	150Ω			
Allowable voltage (-'ve terminal to 0V)		<±1V		
Series mode rejection of mains interference	46dB	>30dB		
Common mode dc rejection	46dB	>40dB		
Hardware response time	5ms			
Note 1: w.r.t. total working span	ng span Note 3: After warm up. Ambient = 25 °C			
Note 2: % of effective range (0 to 20mA)				

Table 17: Analogue Input Specification Table (Current Inputs)

Analogue output: Voltage output performance				
Typical	Max/Min			
	-0.5V to +12.5V			
	<24mA			
12.5 bits				
<0.25%	<0.5%			
	<±0.1%			
	<0.01%°C			
	>800Ω			
	<2Ω			
20ms	<25ms			
Note 3: After	warm up. Ambient = 25 °C			
	12.5 bits <0.25%			

**Table 18: Analogue Output Specification Table (Voltage Outputs)** 

Technical Specification EPOWER CONTROLLER

Analogue output: Current output performance				
Parameter	Typical	Max/Min		
Total current working span				
(within -0.3V to +12.5V voltage span)		-24mA to +24mA		
Open circuit voltage		<16V		
Resolution (noise free) (note 1)	12.5 bits			
Calibration error (note 2, note 3)	<0.25%	<0.5%		
Linearity error (note 2)		<±0.1%		
Ambient temperature error (note 2)		<0.01%°C		
Maximum load resistance		<550Ω		
DC output conductance		<1µA/V		
Hardware response time (10% to 90%)	20ms	<25ms		
Note 1: w.r.t. total working span	Note 3: After	warm up. Ambient = 25 °C		
Note 2: % of effective range (0 to 20mA)				

**Table 19: Analogue Output Specification Table (Current Outputs)** 

### **Relay Specification**

Contact life	Resistive loads:	100,000 operations (de-rate with inductive loads as per figure).
Contact ille	i lesistive idads.	100,000 operations (de-rate with inductive loads as per lighte).

High power use Current: <2A (resistive loads)

Voltage: <264V RMS (UL: voltage 250Vac.)

Low power use Current: >1mA

Voltage: >1V

Contact configuration Single pole change-over (one set of Common, Normally open

and Normally Closed contacts)

Termination 3-way connector on underside of Driver Module (figure 2.2.1d)

Relay 1 (standard):

Watchdog relay (standard): 3-way connector on underside of Driver Module (figure 2.2.1d)

Relays two to four (option): 12-way option module connector (figure 2.2.1c)


Installation Category III, assuming that nominal phase to earth

voltage is ≤ 300V RMS. Isolation between different relays' contacts is double isolation, in accordance with the installation

category and phase to earth voltage specified above.

Absolute maximum switching capability <2A at 240V RMS (resistive loads)

**Note:** Normally Closed and Normally open refer to the relay when the coil is not energised.

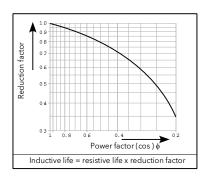

EPOWER CONTROLLER Technical Specification

#### Optional Input/Output Modules (SK3, SK4, SK5)

Up to three input/output modules can be fitted, each containing the inputs and outputs detailed below. Unless otherwise stated below, the specification for the optional I/O (including relays) is as given above for the standard I/O.

Termination Removable 12-way (5.08mm pitch) connector per module.

Number of modules Up to three

Number of inputs One analogue input and two digital inputs per module

Number of outputs One analogue output per module

Number of relays 1 set of common, normally open and normally closed contacts

per module.

10V potentiometer supply o/p voltage:  $10.0V \pm 0.3V$  at 5.5 mA

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

The relays outputs are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:300V).

Failure to follow these instructions will result in death or serious injury.

#### Mains Network Measurements

All network measurements are calculated over a full mains cycle, but internally updated every half-cycle. For this reason, power control, current limits and alarms all run at the mains half-cycle rate. The calculations are based on waveform samples taken at a rate of 20 kHz. Measurements on each phase are synchronised to its own phase and if the line voltage cannot be detected, the measurements stop for that phase. It should be noted that, depending on the configuration, the phase voltage referred to is one of:

- a. the line voltage referenced to neutral in four star,
- b. the line voltage referenced to neutral or another phase for single phase or
- c. the line voltage referenced to the phase applied to the next adjacent power module for three phase star or delta configurations.

The parameters below are directly derived from measurements for each phase.

Accuracy (20 to 25°C)

Line frequency (F): ±0.02Hz

Line RMS voltage (Vline): ±0.5% of Nominal Vline.

Load RMS voltage (V): ±0.5% of Nominal V for voltage readings >1% of Nominal V.

Unspecified for readings lower than 1%Vnom.

Thyristor RMS current ( $I_{RMS}$ ):  $\pm 0.5\%$  of Nominal IRMS for current readings > 3.3% of Nominal

 $I_{RMS}$ . Unspecified for readings = 3.3% Nominal  $I_{RMS}$  (see note).

Load RMS voltage squared (Vsq):  $\pm 1\%$  of (Nominal V)<sup>2</sup> Thyristor RMS current squared (Isq):  $\pm 1\%$  of (Nominal I)<sup>2</sup>

True load power (P):  $\pm 1\%$  of (Nominal V) × (Nominal I)

Frequency resolution 0.1 Hz

Measurement resolution 11 bits of Nominal value (noise free)

Measurement drift with ambient temp. <0.02% of reading / °C

Technical Specification EPOWER CONTROLLER

Further parameters (S, PF, Q, Z, lavg, IsqBurst, IsqMax, Vavg, Vsq Burst, VsqMax and PBurst) are derived from the above, for each network (if relevant). See "Meas Submenu" on page 120 (Meas submenu) for further details.

**Note:** For external current feedback, the above specification does not include errors associated with external current transformers.

#### **External Current Transformer**

Ratio: Chosen such that the full scale output from the current

transformer is 5 Amps.

#### Communications

CC-Link Protocol: CC-Link version 1.1

Connector: 5 way

Indicators: RUN and ERR

DeviceNet Protocol: DeviceNet

Connector: Five way

Indicators: Network status and Module status

Modbus/TCP Type: 10baseT (IEEE801)

Protocol: Modbus TCP

Connector: RJ45 single port and dual port

Indicators: Tx activity (green) and communications activity (yellow)

EtherNet/IP Protocol: EtherNet/IP

Connector: RJ45 single port and dual port

Indicators: NS (Network status), MS (Module status) and LINK (Link status)

Modbus RTU Protocol: Modbus RTU slave

Transmission standard: Three-wire EIA485

Connector: Twin, parallel-wired RJ45

Indicators: Tx activity (green) and Rx activity (yellow)
Isolation (EN60947-4-3): Installation category II, Pollution degree 2

Terminals to ground: 50V RMS or dc to ground (double isolation).

Profibus Protocol: Profibus DPV1

Connector: 9 way D-type
Indicators: Mode and Status.

Profibus Protocol: Profinet I/O

Connector: RJ45 single port and dual port

Indicators: Link, Network Status and Module Status

EPOWER CONTROLLER Maintenance

# **Maintenance**

# **Safety**

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- 1. If the product (EPower) is used in a manner not specified by the manufacturer, the protection provided by the product might be impaired.
- 2. Any adjustment, maintenance and repair of the opened apparatus under voltage, is forbidden for safety reasons.
- 3. The product must be installed and maintained by suitably qualified personnel, authorized to work in an industrial low voltage environment.
- 4. The product is not suitable for isolation applications, within the meaning of EN60947-1.
- Before carrying out any wiring to the product, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.
- 6. The mains supply fuse within the Driver Module is not replaceable. If it is suspected that the fuse is faulty, the manufacturer's local service centre should be contacted for advice.

Failure to follow these instructions will result in death or serious injury.

# **A** CAUTION

#### **HAZARD OF BURNS**

- Under some circumstances, the EPower heatsink temperature may rise by more than 50°C and it can take up to 15 minutes to cool after the product is shut down. Ensure that any contact with hot surfaces is avoided.
- 2. Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- 3. Give consideration to additional warnings and barriers to prevent injury.

Failure to follow these instructions can result in injury or equipment damage.

Maintenance EPOWER CONTROLLER

### **Preventive Maintenance**

Please read the warnings above, before attempting to carry out any work on the unit(s).

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

 The protective earth ground connections must be tightened according to the torque values defined in table Protective Earth Ground Details.
 Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions will result in death or serious injury.

# **A** DANGER

#### **HAZARD OF FIRE**

- Power terminals must be tightened according to the torque values defined in Table 4. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.
- The tightening torques for supplemental (high speed) fuses should be checked according to value defined in Table 20. Ceramic fuse bodies should be checked for visible cracks. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions will result in death or serious injury.

# WARNING

#### **HAZARD OF FIRE**

1. To maintain maximum cooling efficiency, the heat-sink and fans must be cleaned regularly and fan operation need to be checked. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions can result in death, serious injury or equipment damage.

# **A** CAUTION

#### UNINTENDED EQUIPMENT OPERATION

1. Fans have limited lifetime which depends on environment. As preventive maintenance their periodic replacement need to be considered.

Failure to follow these instructions can result in death, serious injury or equipment damage.

EPOWER CONTROLLER Maintenance

#### NOTICE

#### **EQUIPMENT PROTECTION**

 In order to maintain protection against damage due to electrostatic discharge, any ribbon cable which is chafed, scratched or otherwise damaged must be replaced. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions can result in equipment damage.

# **Thyristor Protection Fuses**

The thyristors in the Power modules are protected against excess currents by high-speed fuses (supplemental fuse) within the power modules.

U.L.: With the high speed fuses (supplemental fuse) as described in the Table 20 below, EPower is suitable for use on a circuit capable of delivering not more than 100kA RMS symmetrical amperes, 600 Volts ac Maximum. (Coordination Type 1)

CE: With the high speed fuses (supplemental fuse) as described in the Table 20 below, EPower is suitable for use on a circuit capable of delivering not more than 92kA all modules except:98kA for 500A modules;105kA for 630A modules; 690 Volts Maximum. (Coordination Type 1)

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- According to the CE and UL certifications, high speed fuses (supplemental fuses) are mandatory for compliant installation and protection of the EPower controller against short circuit. See paragraph 12.3 for details.
- The EPower's rated short-circuit conditional current is defined for co-ordination type 1. If opening of either the branch circuit protective or the supplemental (high speed) fuses occurs, the product shall be examined by suitably qualified personnel and replaced if damaged.

Failure to follow these instructions will result in death or serious injury.

Maintenance EPOWER CONTROLLER

# **A** DANGER

#### **HAZARD OF FIRE**

 This product does not contain any branch-circuit protection or internal safety overload protection. The installer must add branch-circuit protection upstream of the unit, and provide external or remote safety overload protection to the end installation. Branch circuit shall be rated according to maximum current in each phase.

CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.

UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

 The tightening torques for supplemental (high speed) fuses should be checked according to value defined in table 12.3. Ceramic fuse bodies should be checked for visible cracks. Appropriate regular inspections must be performed. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions will result in death or serious injury.

Table 20: Protection fuse details

Power module	Eurotherm Spare Part	Fuse	Manufacturer	Manufacturer	Fixing	Tightening
rating	Reference	rating	catalog number	Manufacturer	size	torque
50A, 100A &	SUBEPWR/FUSE160A	315 A	DN000UB69V315L	Mersen	M8	12 Nm (8.9 ft lb)
160A	SOBLI WIVI OSLIOVA	313 A	170M1322		M8	12 Nm (8.9 ft lb)
250A	SUBEPWR/FUSE250A	350 A	170M1373	EATON	M8	12 Nm (8.9 ft lb)
400A	SUBEPWR/FUSE400A	550 A	170M3422	COOPER	M8	15 Nm (11.1 ft lb)
500A	SUBEPWR/FUSE500A	630 A	170M5412	BUSSMAN	M10	15 Nm (11.1 ft lb)
630A	SUBEPWR/FUSE630A	900 A	170M6413		M12	25Nm (18.5 ft lb)

EPOWER CONTROLLER Maintenance

# **A** DANGER

### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

1. Respect storage conditions of spare fuses.

Failure to follow these instructions will result in death, serious injury or equipment damage.

Table 21: Storage conditions of spare fuses

Manufacturer	Storage Conditions			
	Atmosphere	Non-corrosive and non-conductive		
	Storage temperature	-40°C to +70°C (-40°F to +158°F)		
Mersen	Maximum Temperature variations	15°C (27°F) within 8 hours		
	Humidity	95% at 20°C, 80% at 40°C, 50% at 50°C		
F .	Atmosphere	Non-corrosive and non-conductive		
Eaton Copper	Storage temperature	-40°C to +85°C (-40°F to +185°F)		
Bussmann	Humidity	No more than 70 percent relative humidity		

Maintenance EPOWER CONTROLLER

# **Appendix A: Remote Display Unit**

### Introduction

This appendix describes the recommended 32h8e remote display unit for the EPower unit.

This instrument is a horizontal 1/8 DIN indicator and alarm unit that performs the dual function of remote display and independent 'policeman' (to disconnect power should an over temperature or other excess process condition occur). The unit is intended for indoor use in a permanent installation, enclosed in an electrical panel. To ensure IP65 and NEMA 4 front sealing against dust and water, the panel should have a non-textured surface.

Communications between the unit and EPower are via RJ45 'Panel comms port' located on the underside of the controller module. The communications standard is 3-wire EIA485, and It uses Modbus protocol.

The display unit comes complete with one relay output (OP1) and one analogue output (OP3).

# Safety and EMC Information Notes

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not use the 32h8e remote display unit for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- 2. The 32h8e remote display unit must be installed, connected and used in compliance with prevailing standards and/or installation regulations
- 3. If the 32h8e remote display unit is used in a manner not specified by the manufacturer, the protection provided by the product might be impaired.
- 4. Any adjustment, maintenance and repair of the opened apparatus (32h8e remote display unit) under voltage, is forbidden for safety reasons.
- The 32h8e remote display unit must be installed and maintained by suitably qualified personnel, authorized to work in an industrial low voltage environment.
- Insulation barriers inside 32h8e remote display unit has been designed to conform to EN 61010 for an altitude of 2000m maximum and installation category II. The rated impulse voltage for equipment on nominal 230V supply is 2500V.
- 7. Voltage rating of 32h8e remote display unit. The maximum continuous voltage applied between any of the following terminals must not exceed 240Vac relay output to logic, dc or sensor connections any connection to a protective earth ground.

Failure to follow these instructions will result in death or serious injury.

# **A** DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

Live sensors.

The 32h8e remote display unit is designed to operate if the temperature sensor is connected directly to an electrical heating element. However, you must ensure that service personnel do not touch connections to these inputs while they are live. With a live sensor, all cables, connectors and switches for connecting the sensor must be mains rated for use in 240Vac CATII 32h8e remote display unit analogue inputs are not isolated from digital inputs or from logic outputs.

- 9. Do not connect AC supply to low voltage sensor input or low-level inputs and outputs of 32h8e remote display unit.
- 10. Wiring must comply with all local wiring regulations, i.e. IEC 60364-5-52 and USA, NEC Class 1 wiring methods
- 11. Enclosure of Live Parts
  To prevent hands or metal tools touching parts that may be electrically live, the 32h8e remote display unit must be installed in an enclosure.
- 12. The 32h8e remote display unit has been designed for pollution degree 2 according to IEC61010 definition: Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation may be expected.

  Electrically conductive pollution must be excluded from the cabinet in which the product is mounted. To ensure a suitable atmosphere in conditions of conductive pollution, fit adequate air conditioning/filtering/cooling equipment to the air intake of the cabinet, e.g. fitting fan-cooled cabinets with a fan failure detection device or a thermal safety cut-out.
- 13. Power Isolation

The installation must include a power isolating switch or circuit breaker. This device must be in close proximity of the 32h8e remote display unit, within easy reach of the operator and marked as the disconnecting device for the instrument.

14. Charged capacitors

Before removing a 32h8e remote display unit from its sleeve, disconnect the supply and wait at least two minutes to allow capacitors to discharge. Avoid touching the exposed electronics of the instrument when withdrawing it from the sleeve.

- 15. Before carrying out any wiring to the 32h8e remote display unit, it must be ensured that all relevant power and control cables, leads or harnesses are isolated from voltage sources.
- 16. Grounding of the temperature sensor shield
  In some installations it is common practice to replace the temperature
  sensor while the 32h8e remote display unit is still powered up. Under
  these conditions, as additional protection against electric shock, we
  recommend that the shield of the temperature sensor is grounded. Do not
  rely on grounding through the framework of the machine.

Failure to follow these instructions will result in death or serious injury.

# **A** DANGER

#### **HAZARD OF FIRE**

The cables used to connect the line supply of 32h8e remote display unit must be correctly protected by branch-circuit protection. It is the responsibility of the installer to add branch-circuit protection. Such branch-circuit protection must comply with applicable local regulations.

Failure to follow these instructions will result in death or serious injury.

#### Reasonable Use and Responsibility

The safety and EMC of any system incorporating this product is the responsibility of the assembler/installer of the system.

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

32h8e remote display unit is intended for industrial temperature and process control applications when it will meet the requirements of the European Directives on Safety and EMC.

Use in other applications, or failure to observe the installation instructions of this manual may impair safety or EMC. The installer must ensure the safety and EMC of any particular installation.

Failure to use approved software/hardware with our hardware products may result in injury, harm, or improper operating results

Eurotherm shall not be held responsible for any damage, injury, losses or expenses caused by inappropriate use of the product (EPower), or failure to comply with these instructions.

# **WARNING**

#### UNINTENDED EQUIPMENT OPERATION

1. Safety and EMC

Safety and EMC protection can be seriously impaired if the unit is not used in the manner specified. The installer must ensure the safety and EMC of the installation.

The 32h8e remote display unit complies with the European Low Voltage Directive 2014/35/EU, by the application of the safety standard EN 61010.

2. Electrostatic discharge precautions

Always observe all electrostatic precautions before handling the unit. When the 32h8e remote display unit is removed from its sleeve, some of the exposed electronic components are vulnerable to damage by electrostatic discharge from someone directly handling the controller.

3. Service and repair

The 32h8e remote display unit has no user serviceable parts. Contact your supplier for repair

4. Electromagnetic compatibility

The 32h8e remote display unit conforms with the essential protection requirements of the EMC Directive 2014/35/EU. It satisfies the general requirements of the industrial environment defined in EN 61326.

5. Installation requirements for EMC

To comply with the European EMC directive certain installation precautions are necessary:

- General guidance. Refer to EMC Installation Guide, Part no. HA025464.
- Relay outputs. It may be necessary to fit a suitable filter to suppress conducted emissions.
- Table top installation. If using a standard power socket, compliance with commercial and light industrial emissions standard is required. To comply with conducted emissions standard, a suitable mains filter must be installed.
- 6. Wiring

It is important to connect the controller in accordance with the wiring data given in this guide. Take particular care not to connect AC supplies to the low voltage sensor input or other low-level inputs and outputs. Only use copper conductors for connections (except thermocouple inputs) and ensure that the wiring of installations complies with all local wiring regulations. For example, in the UK use the latest version of the IEE wiring regulations, (BS7671). In the USA use NEC Class 1 wiring methods.

Routing of wires

To minimise the pick-up of electrical noise, the low voltage DC connections and the sensor input wiring should be routed away from high-current power cables. Where it is impractical to do this, use shielded cables with the shield grounded. In general, keep cable lengths to a minimum.

- 8. Hazard of Incorrect Configuration
- Incorrect configuration can result in damage to the process and/or
  personal injury and must be carried out by a competent person authorised
  to do so. It is the responsibility of the person commissioning the controller
  to ensure the configuration is correct.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **▲ WARNING**

#### UNINTENDED EQUIPMENT OPERATION

10. Loss of Communications

If the output is not wired, but written to by communications, it will continue to be controlled by the communications messages. In this case take care to allow for the loss of communications

11. The designer of any control scheme must consider the potential failure modes which could occur and provide a means to achieve a safe state during and after a failure.

Independent or redundant devices must be provided for critical control functions.

The control scheme may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.

Each implementation of this equipment must be individually and thoroughly tested for its intended operation before being placed into service.

- 12. In temperature control applications a danger could be present if the heating remains constantly on. Apart from potentially spoiling the end product, this could damage the process machinery being controlled, or cause a fire hazard. Consider the following examples:
  - A temperature sensor becoming detached from the process
  - Thermocouple wiring becoming short circuit
  - The controller operating with its heating output constantly on
  - An external valve or contactor sticking in the heating condition
  - The controller setpoint set too high

The alarm relays within the controller will not give over-temperature protection under all conditions. The installer must, therefore, fit a separate over-temperature protection device, with an independent temperature sensor, to isolate the heating circuit should an over-temperature condition occur.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **A** CAUTION

#### UNINTENDED EQUIPMENT OPERATION

- Unpacking and storage The packaging should contain an instrument mounted in its sleeve, two mounting brackets for panel installation and an Installation sheet. Certain ranges are supplied with an input adapter. If upon receipt, the packaging or the instrument is damaged, do not install the product instead contact your supplier.
   If the instrument is to be stored before use, protect from humidity and dust in an ambient temperature range of −30C° to +75°C.
- Cleaning Do not use water or water based products to clean labels or they will become illegible. Isopropyl alcohol may be used to clean labels.
   A mild soap solution may be used to clean other exterior surfaces of the product.

Failure to follow these instructions can result in injury or equipment damage.

#### **Symbols**

Symbols used on the instrument are defined in the table below

<u> </u>	Caution refer to accompanying document
	Equipment protected throughout by DOUBLE ISOLATION

### **Mechanical Installation**

A location should be chosen which is subject to minimum vibrations; the allowable ambient temperature range is 0 to 55°C (32 to 131°F) and the acceptable humidity range is 5 to 95% RH non-condensing.

To remove the indicator from its Sleeve, ease the latching ears outwards and pull the unit forward. When plugging back in ensure that the latching ears click into place (maintains the IP65 sealing).

- 1. An aperture with dimensions as shown in Figure 169 should be made in the panel.
- 2. If it is not already in place, fit the IP65 sealing gasket behind the front bezel of the unit
- 3. From the front of the panel, insert the unit, through the cut-out.
- 4. Spring the panel retaining clips into place and secure the unit in position by pushing both retaining clips forwards, until they bear on the back of the panel.
- 5. Peel off the protective cover from the display.

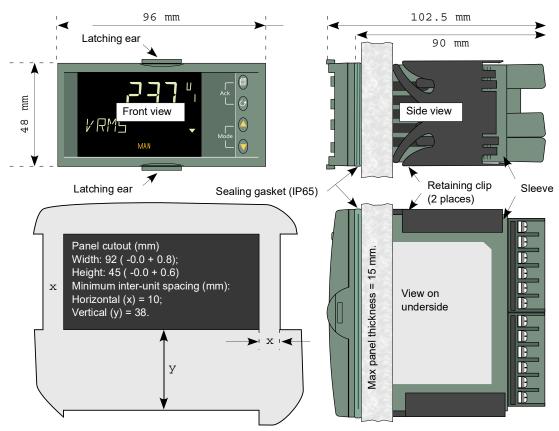


Figure 169 Installation Dimensions Drawing

# **Electrical Installation**

#### **Pinout**

Figure 170, below shows the rear terminal arrangement.

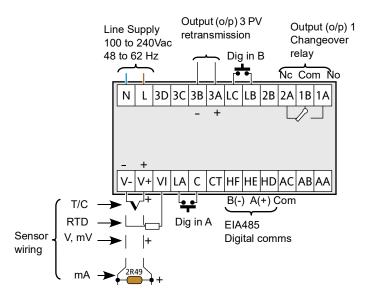


Figure 170 Terminal Arrangement

### Wiring

#### **Termination Details**

The screw terminals accept wire sizes from 0.5 to 1.5 mm (16 to 22AWG). Hinged insulating covers prevent accidental contact with live wires. The recommended maximum rear terminal screw torque is 0.4Nm.

# **Supply Voltage**

Please read the safety notes in "Safety and EMC Information Notes" on page 263 of this manual. Additionally:

- 1. Only copper conductors may be used.
- 2. The power supply input is not fuse protected. Fusing must be provided externally by a type T fuse with a 2 Amp, 250V rating.

#### **Supply Voltage Range**

100 to 240Vac, -15%, +10%, 48 to 62 Hz

# **Signal Wiring**

#### Notes:

- 1. Input wires should not be run in proximity with power cables
- 2. When shielded cable is used, it should be grounded at one point only
- Any external components (such as Zener barriers) connected between sensor and input terminals may cause errors in measurement due to excessive and/or unbalanced lead resistance and leakage currents.

# A DANGER

#### HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

Live sensors

The 32h8e remote display unit is designed to operate if the temperature sensor is connected directly to an electrical heating element. However, you must ensure that service personnel do not touch connections to these inputs while they are live. With a live sensor, all cables, connectors and switches for connecting the sensor must be mains rated for use in 240Vac CATII 32h8e remote display unit analogue inputs are not isolated from digital inputs or from logic outputs.

Failure to follow these instructions will result in death or serious injury.

### **Analogue (Measuring) Inputs**

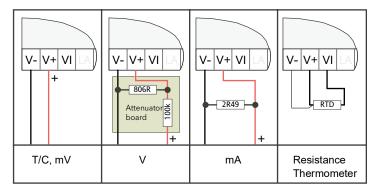
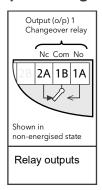


Figure 171 Input Wiring

#### **Notes:**

- 1. For thermocouple inputs, compensation cable suitable for the thermocouple type must be used, preferably shielded.
- 2. For voltage inputs an attenuator board must be fitted as shown. A suitable board is available from the manufacturer.
- For resistance temperature detectors, the resistance element is wired across V+
  and VI; the lead compensation wire being terminated at V-. The resistance of all
  three wires must be equal. Line resistances greater than 22 Ohms cause
  measurement errors.

#### **Output Wiring**



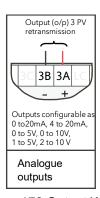


Figure 172 Output Wiring

# **Digital Communications Wiring**

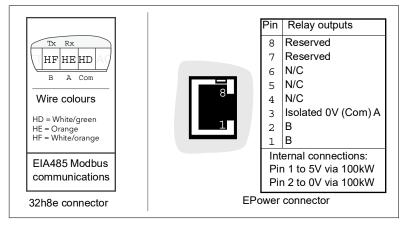


Figure 173 Digital Communications Pinouts

### **Over Temperature Application Wiring**

Figure 174 shows a typical application where the Remote Display Unit is used to trip the main contactor to the EPower units if it detects an over-temperature.

The figure is intended for guidance only, and does not show detailed EPower wiring, this being discussed in depth in "Mechanical Installation" on page 268 of this manual.

#### Notes:

- When switching inductive loads, the 22nF/100 Ohm snubber (supplied with the instrument) should be wired across the relay connections as shown.
- 2. Snubbers pass 0.6mA at 110V and 1.2mA at 230Vac. This is sometimes sufficient to hold high impedance loads on. Snubbers should not be used in such cases.

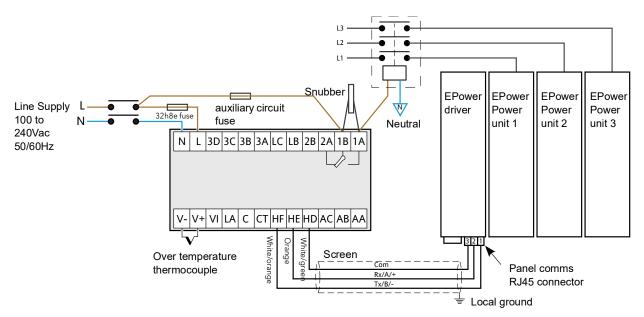


Figure 174 Typical Wiring

### First Switch On

At first switch on, after the start-up sequence, the initial configuration page is displayed.

**Note:** the following 'quickstart' description apples only to new (not previously configured) instruments. If the instrument has previously been configured (either at the factory or subsequently) the instruments starts up showing the relevant process value.


The initial display shows 'Set1' on the top line, with a coded display below (Figure 175) with its first item flashing. The lower line is decoded as shown in Table 22.

The 'mode' (up/down arrows) are used to scroll through the available choices for each item. Once the required value is displayed, the scroll key is used to select the next character for editing. Once all five characters have been edited, further operations of the scroll key call the range high display (allowing the high range value to be edited using the mode keys), then the range low display (allowing the low range value to be edited). A further operation calls the Set2 display, which is decoded in Table 23.


After Set2 parameters have been edited, a further operation of the scroll key invites the user to Exit. Operating the scroll key returns to the Set1 display; operating a mode key to display 'yes' quits the quickstart menu and causes the unit to enter operating mode.



Figure 175 Set 1 Display

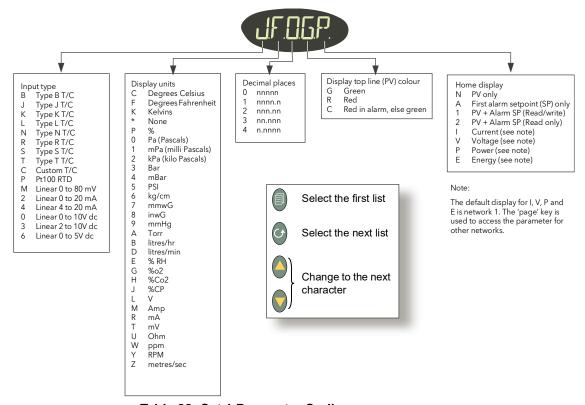

**Table 22: Set 1 Parameter Coding** 

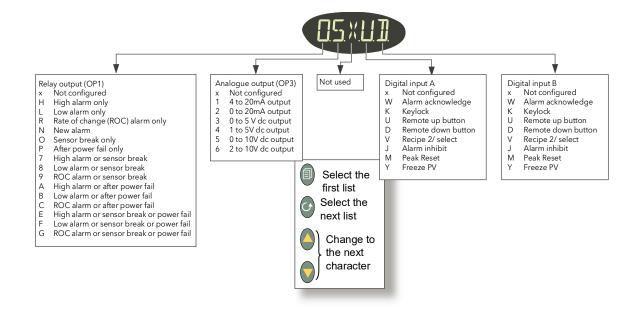

#### Table 23: Set 2 Parameter Coding

#### **Notes:**

- 1. In order for the unit to act as an over-temperature 'police officer', the OP1 alarm type should be selected as a high alarm.
- The relay output automatically operates in fail-safe mode, in that it is de-energised in Alarm. It will thus enter an alarm state when power is removed from the unit.
- To re-enter quickstart mode, Remove power from the unit Keeping the 'Page' key operated continuously, restore power and wait until a password is requested. Release the 'Page' key and use the up/down arrow keys to enter the quickstart password (default = 4).

# **Operating Mode**

# **Front Panel Layout**

When the instrument starts, or after quitting the quickstart procedure, the Operator level 1 display is entered and the page defined as the 'Home' page in 'Set 1' is displayed (unless there are any errors, in which case the unit displays the relevant error messages). Figure 176, below, shows the home page for the case where 'V' has been selected as Home display in 'Set 1'.

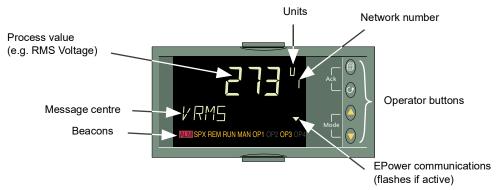


Figure 176 Display Panel Details

#### **Front Panel Details**

Process Variable Normally shows the value of the selected process variable.

Where EPower variables are being displayed, the value for network 1 is displayed by default. Other network values

are accessed by using the 'Page' key.

If the instrument is in an error state, then an indication of what the error might be is flashed on and off instead (e.g. 'Sbr' is flashed if an input sensor break has been detect-

ed).

Set1 PV colour allows this part of the display to be selected

as permanently green

('G', permanently red ('R'), or normally green but red in er-

ror or alarm states ('C').

Units Displays the units associated with the currently displayed

process value.

Network number For EPower parameters, shows the network for the cur-

rently displayed process variable.

Message centre This displays scrolling event and/or alarm messages (e.g.

'INPUT SENSOR BROKEN')

Beacons		
	ALM	Indicates an active alarm. Flashes if alarm unacknowledged.
	SPX	Alternative setpoint. Not used in this application.
	REM*	Illuminated when 'Remote Setpoint' is selected for this EPower network.
	RUN	Timer or programmer running/held. Not used in this application.
	MAN*	Illuminated when 'Local Setpoint' is selected for this EPower network.
	OP1	Illuminated if output 1 (relay) is active.
	OP2	Illuminated if output 2 is active. Not used in this application.
	OP3	Illuminated if output 3 has been configured to retransmit the process value.
	OP4	Illuminated if output 4 is active. Not used in this application.
Operator buttons	Four bu	ittons to allow navigation and configuration func-

Four buttons to allow navigation and configuration functions.:



Page key. Toggles between process variable and summary parameters. Also used (simultaneously with the Scroll key) to acknowledge alarms.



Scroll key. Press to select new parameter. Hold down to scroll through parameters. Also used (simultaneously with the Page key) to acknowledge alarms.



Up Arrow. Used to change (increase) a parame-



Down Arrow. Used to change (decrease) a parameter value.

#### Comms indicator



If flashing, this arrow head indicates that communications with EPower are active.

#### **REM/MAN Beacons**

Table 24 summarises the operating characteristics of the 'REM' and 'MAN' beacons which depend on the network with which the currently displayed value is associated, and on which SetProv function blocks are enabled (if any).

Network 1	If no SetProv blocks are enabled, then MAN always illuminated. Otherwise REM/MAN operation depends on SetProv1 'SPselect' parameter.
Network 2	If no SetProv blocks are enabled, then MAN always illuminated. If SetProv.1 and SetProv.2 are enabled, REM/MAN operation depends on SetProv.2 'SPselect' parameter. If SetProv.1 and SetProv.3 are enabled, REM/MAN operation depends on SetProv.3 'SPselect' parameter. If only SetProv.1 enabled: REM/MAN operation depends on SetProv.1 'SPselect' parameter.
Network 3	If no SetProv blocks enabled, then MAN always illuminated. If SetProv.1 and SetProv.3 are enabled, REM/MAN operation depends on SetProv.3 'SPselect' parameter. If only SetProv.1 enabled, REM/MAN operation depends on SetProv1 'SPselect' parameter.

<sup>\*</sup> See REM/MAN BEACONS (below) for more details.


Network 4	If no SetProv blocks enabled, then MAN always illuminated.
	If SetProv.1 and SetProv.4 are enabled, REM/MAN operation depends
	on SetProv.4 'SPselect' parameter.
	If only SetProv.1 enabled, REM/MAN operation depends on SetProv1
	'SPselect' parameter.

Table 24: REM/MAN beacon characteristics

# **Level 1 Operation**

Level 1 operation is entered when Set2 is quit, or after applying power to the instrument (other than at first power-up).

Level 1 operation allows the user to scroll through the various parameters associated with the instrument on a Read-only basis. The parameters which appear depend on the configuration. Figure 177 is an example showing the display pages where the home page (set 1) is PV only and the configuration comprises one or more single phase EPower units. Figure 178 is an example giving the parameters for a 2x2 leg, three-phase configuration.

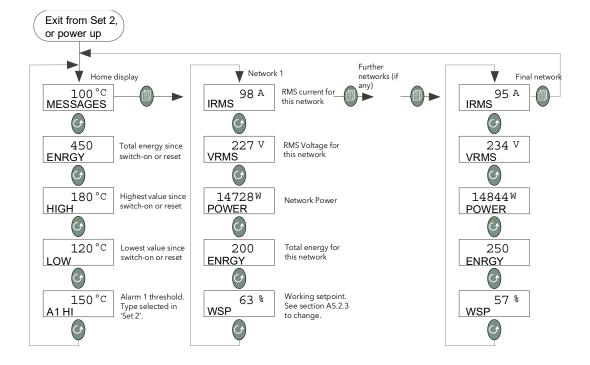

#### Figure 177 Single Phase Example Configuration Exit from Set 2, or Network 2 appears only for 2 x 2 leg configurations Network 2 Network 1 Home display Average current for this network IRMS<sup>50 A 2</sup> Average current for 100°C \_ MESSAGES 50 A<sub>1</sub> IRMS this network Ø Average Voltage for this network VRMS 240 V 2 VRMS 240 V 1 Average Voltage Total energy since 450 ENRGY switch-on or reset for this network 11350<sup>W</sup> 2 POWER Highest value 180°C since switch-on or reset HIGH (J) $(\mathcal{J})$ 120°C LOW 150 ENRGY Lowest value since switch-on ENRGY or reset **G** Alarm 1 threshold. Type 150°C 71 % 1 69 % 2 WSP WSP A1 HÌ selected in G 'Set 2'. G 62 A <sub>1</sub> 62 <sup>A</sup> 2 IRMS 1 Further alarms appear if configured at level 3 IRMS 2 IRMS $^{41\,^{\mathrm{A}}_{1}}$ $^{47\,\mathrm{A}_{\,1}}$ IRMS $^3$ ${17\,{}^{\rm A}\,{}_{\rm 2}}$

Figure 178 Three-Phase (2x2leg) Example Configuration

239 <sup>▽</sup> 2 VRMS 1

 $^{237}_{
m VRMS}$  2

#### **Process Parameters**

ENRGY	Energy. Shows the global energy counter in the EPower instrument. This is only available if the Energy Counter feature is enabled in the connected EPower instrument.
HIGH	Peak High. Shows the highest reading that the indicator has recorded since switch on or since reset (Level 2).
LOW	Peak Low. Shows the lowest reading that the indicator has recorded since switch on or since reset (Level 2).
A1 (Type)	Alarm 1 type and setpoint. Indicates the threshold value for alarm 1. 'Type' = 'Hi', 'Lo' or 'ROC' according to configuration (Set 2). This parameter does not appear if it is 'Unconfigured' in Set 2.
An (Type)	('n' = 2, 3 or 4) Further alarm types and threshold values, as configured in level 3 configuration.

# **Epower Network Summary Parameters**

239 V <sub>1</sub> VRMS 1

VRMS 2  $\mathcal{O}$ 242 <sup>V</sup> <sub>1</sub> **(** 

237 V <sub>1</sub>

IRMS	The RMS value of load current (Amps), for this network.
VRMS	The RMS value of load voltage (Volts) for this network

**POWER** Either P or PBurst according to network type. Watts or kilowatts **ENRGY** Energy. Shows the energy for this network. This is only available if the Energy Counter feature is enabled in the connected EPower instrument. **WSP** Working setpoint. WSP is the working setpoint currently being used by the EPower unit and is either the Local setpoint, or the remote setpoint (from an analogue input or via a communications link). SP Target setpoint (% or Engineering units) for the network in use. It may be edited via the remote panel either directly setting the Control Setpoint (if EPower's SetProv function block is not enabled) or setting the local setpoint of the Set-Prov function block (if it is enabled and its SPSelect parameter is set to 'Local'). If the value is greater than 99999, the displayed value is divided by 1000 and shown with suffix 'K' in the format 'nnnn.nK' ('K' = kilo). (E.G. a value of 1000000 would be displayed as '1000.0K'. SP.SEL Setpoint Select. Available only in level 2 and if the associated SetProv function block in EPower is enabled, allowing the user to select between local (LSP) and remote setpoints (rSP). E.RST Energy Reset. Available only in level 2 and if the Energy Counter is enabled in EPower. User Energy total can be reset. IRMS1 (2) (3) RMS Load current for phase 1 (2) (3). (3-phase networks RMS Load voltage for phase 1 (2) (3). (3-phase networks VRMS1 (2) (3) only)

# **Setpoint Editing from the 32h8E**

**IAVG** 

**VAVG** 

Operating the up or down arrow key from any of the power summary displays (e.g. IRMS) takes the user to the WSP display. Further operation of the up or down arrow causes the display to switch to 'SP' provided that the unit is operationg in Local mode (MAN illuminated) rather than Remote mode (REM illuminated). In Rmote mode, the SP parameter does not appear.

Average load current (3-phase networks only)

Average load voltage (3-phase networks only)

The mode can be changed between local and remote from the SPSEL parameter at level 2, or from the EPower operator interface, iTools or over a comms link.

Once in SP, the up and down arrows are used to edit the setpoint value. Once this is complete, the display times out to the original power summary SP page after a few seconds. Figure 179 attempts to show this process.

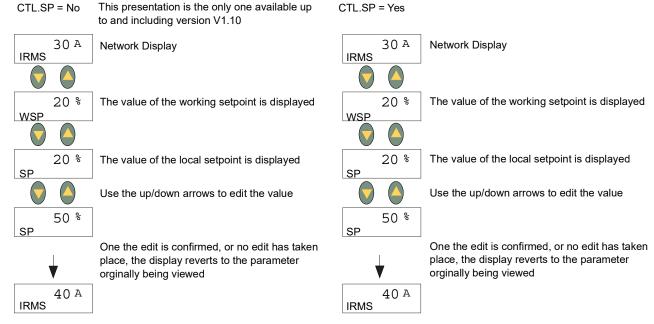


Figure 179 Setpoint Editing

# **Level 2 Operation**

To switch to level 2 parameters (Figure 180):

- From any display press and hold the page key until the Lev 1 display appears
- 2. Operate the up or down arrow to display 'Lev 2'
- 3. After a few seconds, the 'Code' page appears. Use the up arrow key twice to enter the value '2'
- 4. After a few seconds the display reverts to the home display.

To return to level 1:

- 1. From any display press and hold the page key until the Lev 2 display appears
- 2. Operate the up or down arrow to display 'Lev 1'
- 3. After a few seconds the display reverts to the home display.

The scroll key is used to enter the parameter display from the home display.

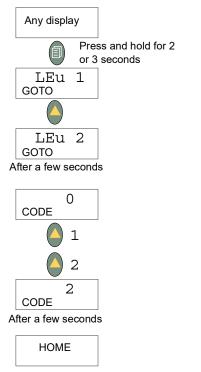


Figure 180 Selecting Level 2

#### **Level 2 Parameters**

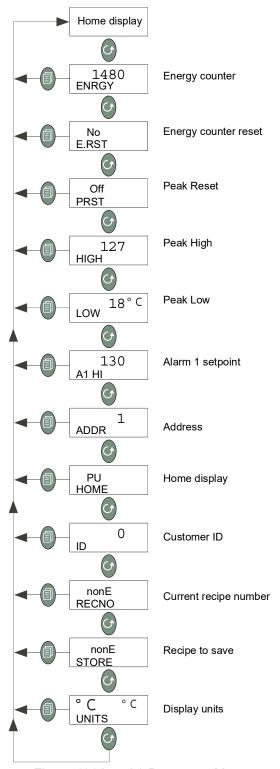


Figure 181 Level 2 Parameter Menu

**ENRGY** Energy counter. Shows the global energy counter in the EPower instrument. This is only available if the Energy Counter feature is enabled in the connected EPower in-

> Energy Reset. Allows the energy counter to be reset. Only available only if the Energy Counter is enabled in EPower. Set to 'yes' to reset. Automatically returns to 'no'.

Peak Reset. Allows the high and low peak values to be reset (to the current value). Set to 'On' to reset. Automatically

Peak High. Shows the highest reading that the indicator

HIGH has recorded since switch on or since reset (Level 2).

HA179769 Issue 16 281

returns to 'Off'.

E.RST

**PRST** 

LOW	Peak Low. Shows the lowest reading that the indicator has recorded since switch on or since reset (Level 2).
A1 (Type)	Alarm 1 type and setpoint. Indicates the threshold value for alarm 1. 'Type' = 'Hi', 'Lo' or 'ROC' according to configuration (Set 2). This parameter does not appear if it is 'Unconfigured' in Set 2.
An (Type)	('n' = 2, 3 or 4) Further alarm types and threshold values, as configured in level 3 configuration.
ADDR	Address. Modbus address (1 to 254) for the instrument
HOME	Home display.
	PU = process variable
	Alm = Alarm threshold
	PU.AL = Process variable + Alarm SP
	P.A.ro = PV + Alarm SP (read only)
	EP.I = EPower Current
	EP.U = EPower Voltage
	EP.P = EPower Power
ID	Customer ID Customised instrument identification number (0 to 9999)
RECNO	Current Recipe Number. The current recipe number (1 to 5) or 'nonE' if no recipe running, or FAiL if there are no recipes available. See "Recipes" on page 288 for further details.
STORE	Recipe to save. Takes a 'snapshot' of the current recipe values and saves them in a recipe number from 1 to 5. 'nonE' does not save; 'donE' appears after a successful save. See "Recipes" on page 288r further details.
UNITS	Display units. Table A5.3.1, below, shows the available units in down-arrow scroll order.

Unit	Definition	Dis- play	Unit	Definition	Dis- play	Unit	Definition	Dis- play
nonE	No units		m-S	Milliseconds	m-5	L-H	Litres per hour	L-H
°k	Kelvins	k	rPm	Revs/minute	rPm	torr	Torr	Lor
°F	Degrees Fahrenheit	°F	PPm	Parts per milion	PPm	mmHg	mm of mercury	AG
°C	Degrees Celsius	°E	Ohm	Ohms		inwG	inches of water gauge	
kG	Kilograms	kg	mU	Millivolts	πЦ	mmwG	mm of water gauge	MD MM
GrAm	Grams	G	mA	MilliAmps	mЯ	kGcm	Kilograms/square cm	kg/cm²
mG	Milligrams	m[	Amp	Amps	A	PSi	Pounds/square inch	P5 1
mpH	Miles/hour	mPH	Uolt	Volts	Ш	mbAr	Millibar	ьяE
P.PH	%ph	%PH	P.CP	% carbon potential	%EP	bAr	Bar	ЬАГ
PH	рН	PH	P.CO2	% carbon dioxide	<b>E02</b>	kPA	KiloPascals	<b>⊬PR</b>
hrs	Hours	hr5	P.O2	% oxygen	%02	mPa	MegaPascals	mPA
min	Minutes	МП	P.rH	% relative humidity	%гН	PA	Pascals	PR
SEC	Seconds	SEC	L-m	Litres per minute	L-m	PErc	Percent	%

# **Level 3 and Conf Level Operation**

To switch to level 3 parameters (Figure 182):

- 1. From any display press and hold the page key until 'Lev 3' appears ('Lev1' or 'Lev2' appears first keep holding).
- 2. If required, operate the up arrow to display 'ConF'

- 3. In either case, after a few seconds, the 'Code' page appears. Use the up arrow key twice to enter the value '3' (to enter level 3) or '4' (to enter Configuration level).
- 4. After a few seconds the display reverts to the home display.

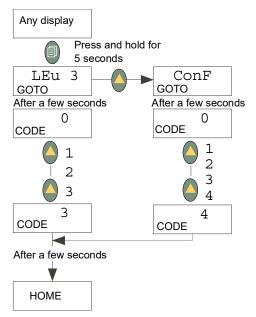


Figure 182 Selecting Level 3 or Conf

To return to lower access levels:

- 1. From any display press and hold the page key until 'Lev 3' or 'ConF' appears
- Operate the down arrow one or more times to display the required access level.
- After a few seconds the display reverts to the home display.

#### **Level 3/Conf Parameters**

Most Level 3 and/or Configuration level parameters associated with the remote panel indicator are described in the 3200i Engineering Handbook (HA029006) available from the manufacturer. There are a number of additional parameters associated with the 32h8e, which are described below.

Level 3 access level makes those operating parameters, which are not Read only available to the user. Examples are Input Filter Time Constant, Alarm Delay time, and so on. Level 3 is used, typically, when commissioning the indicator.

Configuration level enables the fundamental characteristics of the indicator to be changed. This includes the quick-start code parameters amongst others.

The menu structures for Level 3 and Configuration levels are identical (see Figure 183) but there are more parameters available within each 'heading' at Configuration level.

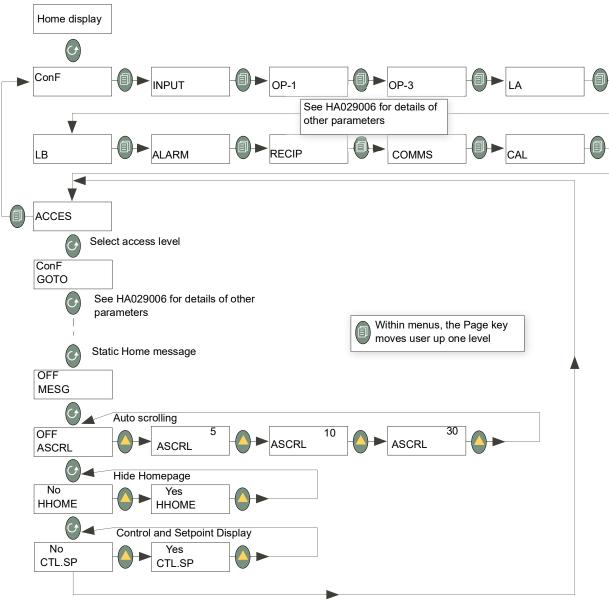


Figure 183 Level 3 and Configuration Level Menu Structure.

ASCRL Auto scrolling. The up (or down) arrow is used to scroll

through the values available, these being 'Off' (No scrolling) or 5, 10 or 30 seconds (where the selected time value specifies the time between scrolls). See 'AUTO SCROLL'

below for further details.

HHOME Hide Homepage. If set to 'Yes', the home page is never

displayed, so the associated parameters can never be

viewed at lower access levels.

CTL.SP Control and Setpoint Display. If set to 'Yes' the EPower

control parameters (Current, Voltage, or Power) can be viewed, in Operator level, simultaneously with it's associated Setpoint. When displaying an EPower control parameter, the bottom line of the display is used to display the

working setpoint.

When set to 'No', the bottom line of the display is used to display the parameter name and parameter description (as

per other indicator displays).

Also see section A5.2.3.

For all other parameters, refer to the 3200i Engineering Handbook (HA029006).

#### **Auto Scrolling**

This causes the EPower summary parameters to scroll through continuously, at a frequency defined by the value selected for the ASCRL parameter. The actual order of parameter appearance depends on level of access, and complexity of network.

**Note:** The 3-phase parameters IRMS1, IRMS2, IRMS3, VRMS1, VRMS2, VRMS3 are not included in autoscrolling sequences.

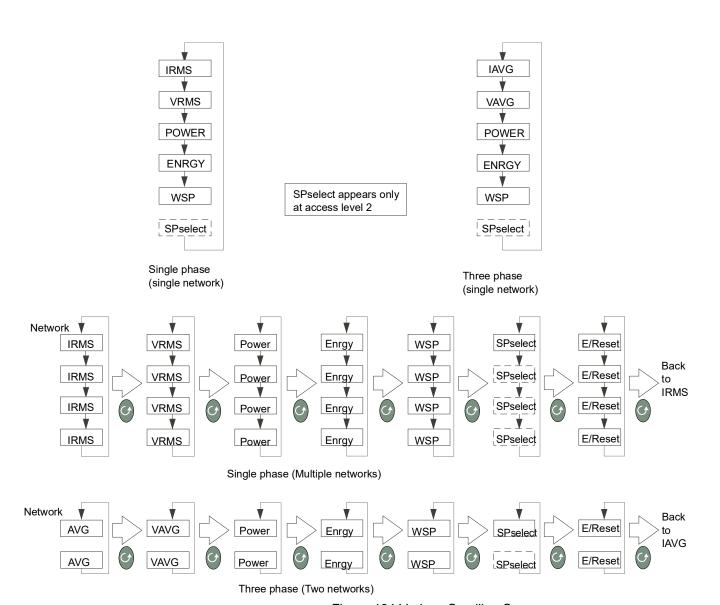


Figure 184 Various Scrolling Sequences

**Note:** For single networks, each EPower summary value (parameter) is displayed in turn. For multiple networks, the same parameter is displayed for each network in turn, the scroll key being used to select a different parameter if required.

### **Other Features**

#### **Alarms and Errors**

#### Alarm Indication


Up to four alarms can be set up in configuration level (refer to HA029006 for full details). Each alarm can be configured as 'nonE' (off), HI (high), Lo (low), r.roc (rising rate-of-change) or F.roc (falling rate-of-change).


If any alarm occurs the ALM beacon flashes, any output associated with the alarm becomes active, and the message area of the display shows a scrolling text message describing the alarm state. If the display is configured to go red on alarm (Set 2), the PV colour changes to flashing red.

# **Alarm Acknowledgement**

Alarms are acknowledged by operating the Page key and the Scroll key simultaneously.

Further to this a global acknowledge of EPower alarms occurs when:

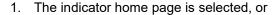

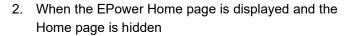

The results of alarm acknowledgement are as follows:

- For EPower alarms, the alarm indication at the EPower operator interface is acknowledged (removed). The alarm indication remains at the 32h8e until the alarm is no longer active.
- 2. For Temperature (Process) auto-latching alarms, the alarm beacon and Process value stop flashing. Any output assigned to the alarm continues to operate until the alarm trigger is no longer active. If configured to change colour (Set 2), the process value returns to green only when the alarm trigger is no longer active.
- 3. For Temperature (Process) manual-latching alarms, acknowledgement has no effect, and the alarm indication continues until the alarm trigger is no longer active.
- 4. When EPower and auto-latching process alarms are both present, acknowledgement causes the beacon and Process Value (PV) display to stop flashing. Should the Process Value alarm subsequently go non-active, leaving only the EPower alarm, the beacon and PV display will resume flashing. For manual-latching alarms, acknowledge is ignored and the alarm indication continues until the alarm trigger is no longer active.

**Note:** Alarm parameters can be configured in Configuration mode, as described in the 3200i Engineering handbook HA029006.

### **Sensor Break Detection and Indication**

An alarm condition (Sbr) is indicated if the indicator detects a break, or over range condition in the temperature sensor circuit.

Ack G

#### Notes:

- 1. For a resistance thermometer a sensor break is indicated if any of the three wires is broken.
- 2. mA sensor breaks are not detected because the effect is masked by the resistor across the input.
- 3. For Volt inputs, sensor breaks might not always be detected, because the effect is masked by the attenuator (potential divider) board connected across the input.

#### **Error Indication**

The following error indications can appear, flashing, in the top line of the display:

Com.Er Communication error. Modbus transactions between the

32h8e and the EPower driver module fail. Can be caused by a break in the physical communications link, by the

EPower module being powered down etc.

EP.CnF The number of power modules is selected as zero. The in-

dicator can therefore not show Current, Voltage or Power

values.

EP.Er One or more 'Fatal', 'Config' or 'Standby' error has been

detected.

The error condition(s) must be cleared before the 32h8e will respond to operator keystrokes.

# **EPower Event and Alarm Messages**

The messages shown below are generated by the EPower module and are displayed as scrolling text strings in the 'Message centre' area of the display.

MISS MAINS Supply power to one or more power modules is not con-

nected, or is isolated.

THYR SC A thyristor short circuit has been detected. In such a case,

current flows even when the thyristor is not 'firing'.

OPEN THYR A thyristor open circuit has been detected. In such a case,

no current flows even when the thyristor is 'firing'.

FUSE BLOWN One or more of the thyristor protection fuses has ruptured.

OVER TEMP
The thyristor heat sink temperature has exceeded the

specified limit, and the thyristor has been shut down. The temperature must fall to below the specified limit (including

the hysteresis value) before firing can re-commence.

VOLT DIPS This detects a reduction in supply voltage. Detection

threshold is set up in EPower configuration (Network/Set-

up).

FREQ FAULT Supply frequency is below 47Hz or above 63Hz. Firing

stops until the supply frequency has returned to a value

between 47Hz and 63Hz.

PB 24V The 24V power rail in a power module has failed. Firing

stops and restarts only when the problem has been re-

solved.

TLF Total load failure. The load connection from one or more

power modules is missing or open circuit.

CHOP OFF Triggered if the load current meets or exceeds a specified

threshold for more than five seconds. Firing stops until either the alarm is acknowledged or until 100mS has elapsed, according to configuration. See Network/Setup

for further details.

PLF	Partial Load Failure. The alarm is triggered if a change in static load impedance is detected over a mains cycle (phase angle mode) or burst period (burst or logic mode). The sensitivity of the measurement can be configured as described in the Network/Setup area of EPower configuration.
PLU	Partial Load Unbalance. This alarm is triggered when the difference between the maximum and minimum currents of a three-phase system exceeds a configurable threshold. See Network/Setup for further details.
VOLT FAULT	One or more phases missing or out of limits.
PRE TEMP	Acts as a warning that the operating temperature is unexpectedly high. This alarm becomes active before unit operation is stopped.
PMOD WDOG	One or more power module watchdogs has performed a reset.
PMOD COM ERR	A power module communications error has been detected. Typically this would be caused by a damaged inter-module ribbon cable.
PMOD T OUT	A power module communications time out error has oc- curred. Typically this would be caused by a damaged in- ter-module ribbon cable.
CLOSED LP	The control loop cannot achieve setpoint, despite the loop demanding 0% or 100% power. Typically caused by external constraints on the load.
OUT FAULT	A short circuit has been detected in the output circuit. Firing is inhibited.

### Recipes

**Note:** Level two access ("Level 2 Operation" on page 279) is required in order for the user to be able to save and/or restore 'recipes' as described below.

It is possible to store operating values by tacking a 'snapshot' of the current settings and storing these snapshots in one of up to five 'recipes'. An example would be to store several sets of alarm setpoint values, one of which can then be recalled for a particular process.

To store values in a recipe:

- In the level two list of parameters (Figure 181), press the scroll key repeatedly (or hold continuously) until 'STORE' appears.
- Select a recipe number using the up/down arrow keys. After a few seconds the
  word donE appears to indicate that the current parameter values have been
  saved to the selected recipe number. Previous values are over-written without
  confirmation.

#### To retrieve a recipe:

- In the level two list of parameters (Figure 181), press the scroll key repeatedly (or hold continuously) until 'RECNO' appears, along with a number (between 1 and 5 inclusive) indicating which recipe was last selected.
- Select the required recipe number using the up/down arrow keys. After a few seconds the recipe number will blink, to indicate that the load is complete. If the selected recipe is empty, the word FAIL appears instead of the recipe number.

# **Epower SetProv Configurations**

If EPower is configured via QuickStart and the analogue input has been set to 'Setpoint', then, in a multiple network configuration, QuickStart will wire SetProv1 'workingSP' to the 'Main.SP' of all the networks' Control blocks so that all the control blocks share the same setpoint.

Figure 185, below shows two examples of this, as displayed in the iTools Graphical wiring editor.

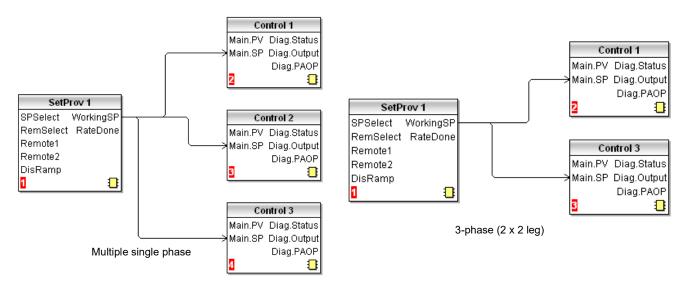


Figure 185 Setpoint to Control Block Wiring (iTools Graphical Wiring Editor Display) If EPower is configured using QuickStart, and the analogue input is not set to 'Setpoint', then none of the Set-Prov function blocks is enabled and each control block setpoint can be set locally.

If EPower is configured using the iTools Graphical wiring editor, then it is possible to enable all of the SetProv function blocks, thus allowing each control block to have individual local or remote setpoints. This flexibility has an effect on the operation of the REM and MAN beacons, as described in "Front Panel Details" on page 274.

# **Setpoint Availability**

#### Multiple Single Phase Configuration

Figure 186 shows three examples of different single phase setpoint configurations. Figure 187, is similar, but shows three-phase 2 x 2 leg examples.

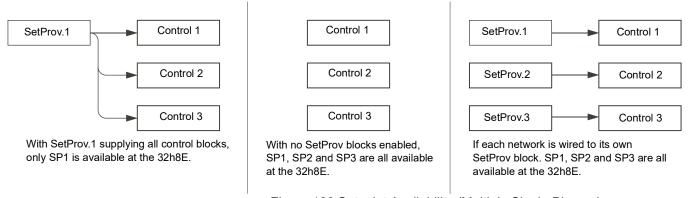


Figure 186 Setpoint Availability (Multiple Single Phases)

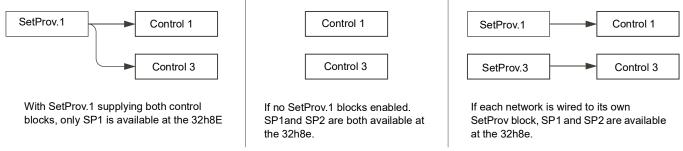


Figure 187 Setpoint Availability (Three-Phase 2 X 2 Leg)

#### **PV Retransmission**

EPower parameters may be communicated to a Fieldbus Network Master i.e. SCADA package, PLC or DCS system. The 32h8e is intended as an independent policeman, and its process PV may also be communicated to the Fieldbus network master. To this end, the 32h8e PV is written every 1/2 second to the EPower's Instrument.Config.RemotePV parameter, which can then be transmitted to the master device.

PV retransmission is also provided as an analogue (V or mA) signal at the analogue output OP3. This may be used as a back-up to the digitally communicated parameter in the event of a failure of the communications link.

# **Digital Alarm Options**

The following source parameters can be logically OR'ed together to give a digital output state.

- 1.SRC.A
- 1.SRC.B
- 1.SRC.C
- 1.SRC.D

EP.AL 1.SRC.A to 1.SRC.D are described in the Engineering Handbook (HA029006); EP.AL is defined as: All EPower alarms.

**Note:** the ALL.A (All Alarms) parameter includes the above EP.AL as well as the indicator alarms.

# **Home Page Timeout**

The 32h8e normally forces the display to return to the Home page after a period of keyboard inactivity.

If, however, the current focus is on an EPower parameter, then the HOME Page timeout is not imposed, thus allowing the user to display a specific Network parameter indefinitely (providing that auto-scrolling is disabled).

# **Appendix B Three Phase Feedback**

# **Transformer Representation and Labelling**

Figure 188, shows a common way of showing typical three phase transformers of various types. Each type is useful for particular applications, for example a Delta primary helps with a more even distribution of loading if the secondary loads are not well matched, whilst a Star wound secondary provides a convenient Earth or Neutral tap for connection near the transformer.

For closed systems, windings corresponding to a particular phase are marked with a prefix number indicating that phase, for example '1P' and '3S' represent phase one primary and phase three secondary respectively. For open Delta systems, each winding is identified by two labels; for example, 1S1 and 1S2 represent the two ends of phase one secondary whilst 2P1 and 2P2 would represent the phase two primary.

The voltages and currents in any one phase are tightly coupled and the primary and secondary voltages are (more-or-less) in phase with one another. Each phase is 120 degrees out of phase with the other two.

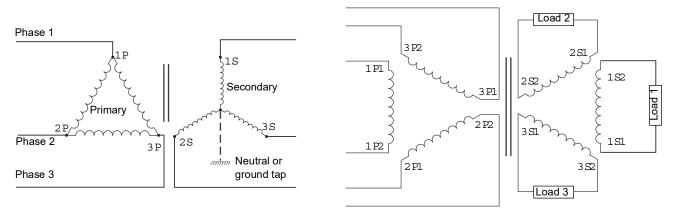


Figure 188 Typical Transformer Winding Labelling

# **External Feedback Phasing**

# **▲** WARNING

#### UNINTENDED EQUIPMENT OPERATION

- External feedback connections must be correctly phased (figure 2.2.2b) or the unit might switch to full conduction at start-up.
- 2. With external feedback: The current transformer should be chosen such that its full-scale output is 5 amps.

Failure to follow these instructions can result in death, serious injury or equipment damage.

External feedback consists of both current measurement (using a current transformer) and voltage measurements across the load (tap locations depend on the network layout). The signals from these feedback elements are terminated at a connector located on the underside of the power units, as shown in Figure 189.

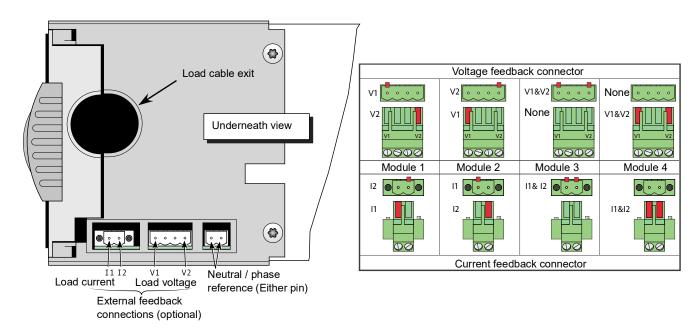


Figure 189 External Feedback Connector Locations and Pinout

#### **Current Transformer Connection**

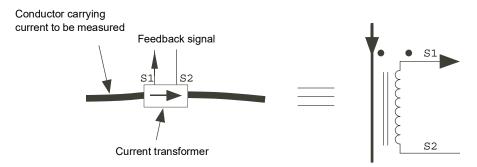



Figure 190 Current Transformer Labelling


The current transformer terminal S1 must be connected to terminal I1 of the relevant power unit; the current transformer terminal S2 must be connected to the power unit terminal I2.

**Note:** S1 and S2 here are not related to the load transformer secondary labels S1 and S2.

The arrow on the current transformer must point towards the load, if the associated voltage tapping is connected to V1; The arrow on the current transformer must point away from the load if the voltage tapping is connected to V2. Figure 191 shows some correct and some incorrect examples.

Arrow must point towards the load, if the associated voltage feedback is connected to V1.

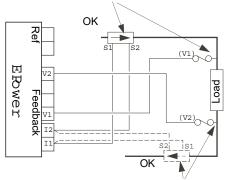

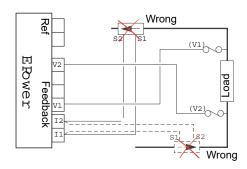

Arrow must point away from the load, if the voltage feedback is connected to V2.

Figure 191 Current Transformer Orientation

# **A** DANGER

#### **HAZARD OF FIRE**

The cables used to connect the remote voltage sensing inputs (if fitted) and the cable used to connect the reference input in 4S, 6D and two-leg configurations must be correctly protected by branch-circuit protection.

It is the responsibility of the user to add branch-circuit protection. Such branch-circuit must comply with applicable local regulations.

UL: The above-mentioned branch-circuit protection is necessary for compliance with National Electric Code (NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

**Note:** In each part of the drawing above, the two positions (i.e. solid and dashed) for the current transformer are alternatives - only one should be used in any one phase.

# Feedback Examples for Typical Three Phase Networks

# **A** DANGER

#### **HAZARD OF FIRE**

This product does not contain any branch-circuit protection or internal safety overload protection. The installer must add branch-circuit protection upstream of the unit, and provide external or remote safety overload protection to the end installation. Branch circuit shall be rated according to maximum current in each phase.

CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.

UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

Failure to follow these instructions will result in death or serious injury.

#### **Notes:**

- The figures below are intended only as theoretical examples. In order to comply
  with CE and NEC requirements, branch circuit protection must be incorporated
  by the user, upstream of the equipment. Such protection is not shown in the
  figures below, for the sake of clarity. The installation, in its entirety, must comply
  with all applicable local safety and emissions regulations.
- 2. For pdf viewers, the colours used in the figures below are used only to improve clarity. No polarity should be inferred (e.g. blue wires are not necessarily neutral; red is not positive etc.).

#### Two Phase Control with Delta-Star Transformer and 3S Load

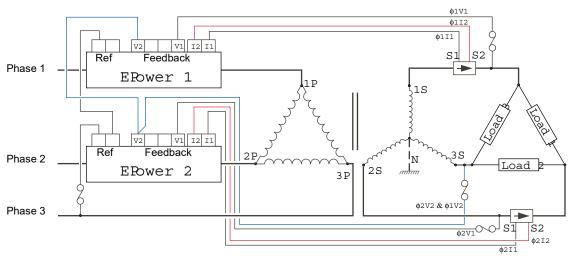


Figure 192 Two Phase Control with Delta-Star Transformer and 3S Load

#### Two Phase Control with Delta-Star Transformer and 3D Load

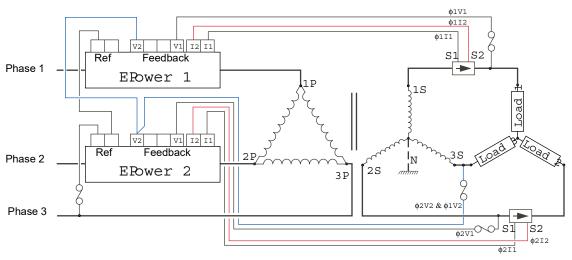


Figure 193 Two Phase Control with Delta-Star Transformer and 3D Load

### Three Phase Control with Delta-Star Transformer and 3S Load

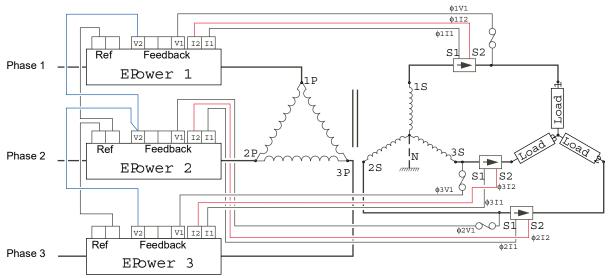


Figure 194 Three Phase Control with Delta-Star Transformer and 3S Load

#### Three Phase Control with Delta-Star Transformer and 3D Load

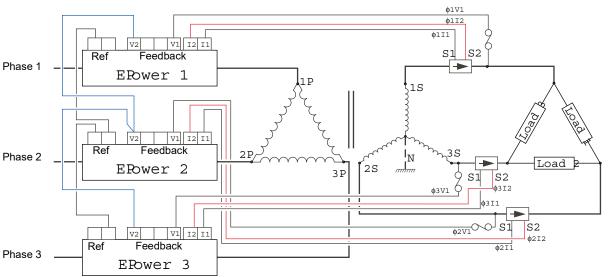


Figure 195 Three Phase Control with Delta-Star Transformer and 3D Load


#### Three Phase Control with Star-Star Transformer and 4S Load

# **A** CAUTION

#### **UNINTENDED EQUIPMENT OPERATION**

In burst mode and primary of transformer load, the star-star configuration is not recommended as it may become unstable, high speed fuse may blow.

Failure to follow these instructions can result in death, serious injury or equipment damage.

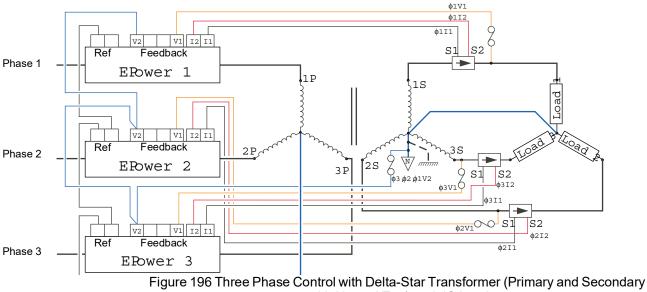

with Neutral Tap) and 4S Load

#### Three Phase Control with Delta-Delta Transformer and 3S Load

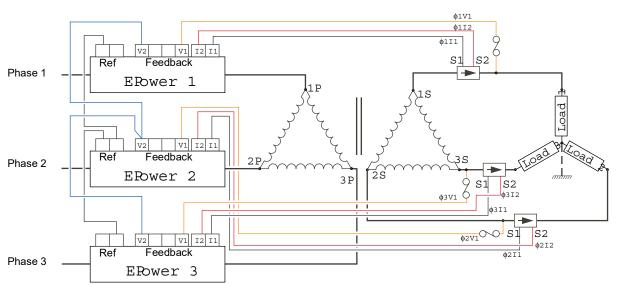


Figure 197 Three Phase Control with Delta-Delta Transformer and 3S Load

# Three Phase Control with 6D Primary and 4S Secondary with 4S Load

Commonly used in salt baths and other heat treatment applications, this configuration results in lower thyristor currents (and therefore costs) at the expense of higher cabling costs.

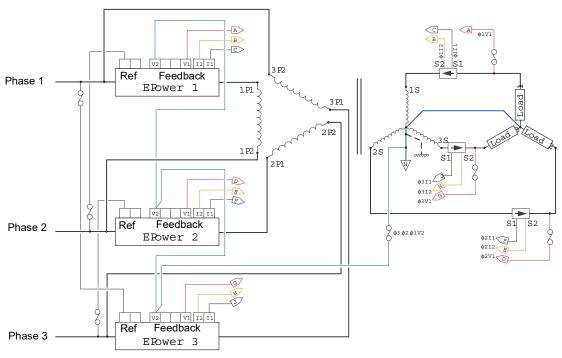


Figure 198 Three Phase Control with Open Delta Primary and Four-Wire Star Secondary, Driving 4S Load.

# Three Phase Control with 6D Primary /Secondary with Three Independent Loads

Rarely used - not recommended because this configuration is not fault tolerant.

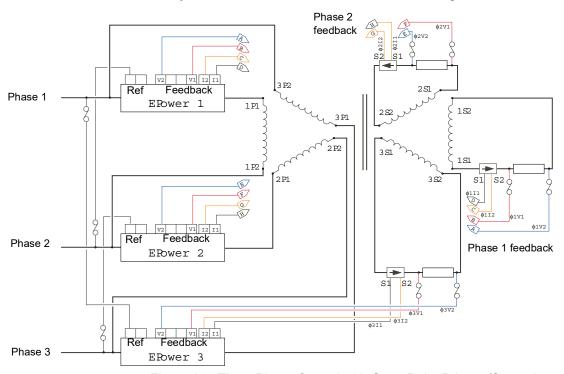


Figure 199 Three Phase Control with Open Delta Primary/Secondary and Four-Wire Star Secondary, Driving Three Independent, Floating Loads

**Eurotherm Ltd** 

Faraday Close, Durrington, Worthing, West Sussex, BN13 3PL United Kingdom Tel: +44 (0) 1903 263333

www.eurotherm.com

HA179769 Issue 16

Scan for local contacts



Watlow, W & Design (W in Diamond) , ADAPTIVE THERMAL SYSTEMS, ASPYRE, ASSURANT, ATS and Design (Signaling Pulse), COMPOSER, Chessell, DIN-A-MITE, Eurotherm, EurothermSuite, EFit, EPack, EPower, Eycon, ECO-HEAT, EHG, E-SAFE, EXACTSENSE, EXSTREAM, EZ-ZONE, EZ-LINK, F4T, FIREBAR, FIREROD, FLUENT, FREEFLEX, HELIMAX, HYDROSAFE, MINICHEF, MULTICELL, Mini8, nanodac, OPTIMAX, piccolo, PM LEGACY, PM PLUS, POWERED BY POSSIBILITY, POWERGLIDE, POWERSAFE, RAYMAX, SELECT, SERV-RITE, SERIES EHG, STREAMLINE, STRETCH-TO-LENGTH, SURETEMP, TRU-TUNE, ULTRAMIC, versadac, VISUAL DESIGNER, WATCONNECT, Watlow.com, XACTPAK, are all trademarks and property of Watlow Electric Manufacturing Company, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

