

# ULTRA SLIMPAK® II MODEL WV448-2000

## Bridge Input Isolating Signal Conditioner

### Installation and Calibration Instructions

**NOTE:** The unit has been shipped with the Power Clips attached. Please remove the clips before installing the module on the DIN rail. If the Power Clips are chosen as the means to route power, they can be installed once the modules are in place on the DIN rail.

#### DIN Rail Mounting

The WV448 mounts on a 35mm TS35 DIN rail, by simply hooking one side of the mounting foot over the rail and pressing the module towards the rail until it locks into place. To remove the unit from the rail, place the tip of a flat-bladed screwdriver under the release clip on either the top or the bottom of the module and pry up until the module releases from the rail. See Figure 1.

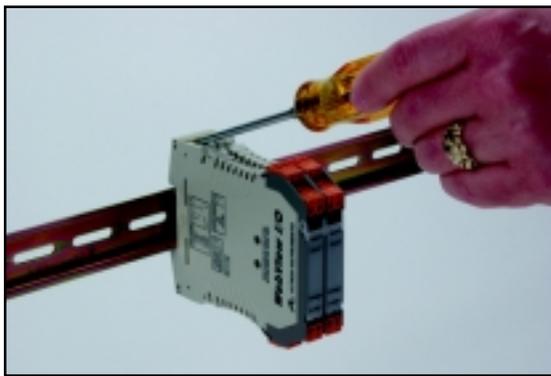


Figure 1

the front side of the upper and lower terminal blocks for a positive fit. The board slides in where the switch and the switch position chart on the case can be viewed together.


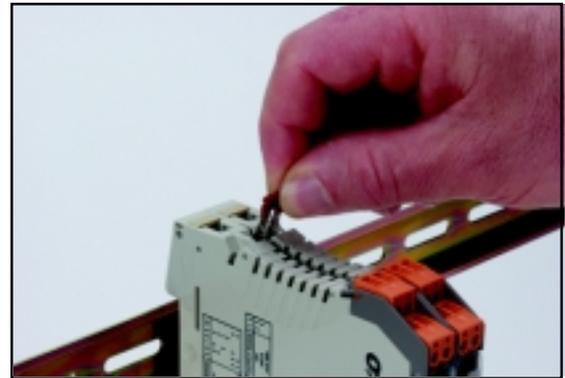


Figure 2

#### Wiring Connections

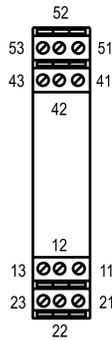

Pin	Description
11	DC Power (+)
12	DC Power (-)
13	No Connection
21	DC Power (+)
22	DC Power (-)
23	No Connection
41	Bridge Input (+)
42	Bridge Input (-)
43	Excitation (+)
51	Output (+)
52	Output (-)
53	Excitation (-)

#### Input Range Configuration

Unless otherwise specified, the factory presets the Model WV448 as follows:

Input: 0-30mV (using the  $\pm 50$ mV range)  
Output: Current  
Range: 4-20mA  
Remote Cal: Off

1. For other ranges, refer to the SWITCH SETTINGS table. Reconfigure switch S1 for the desired input range and output type.
2. Set position 1 of S1 to ON if a WVC16 will be utilized and remote calibration capability is desired.
3. Set position 2 and 3 of S1 for the desired output type.
4. Set positions 4-6 of S1 and 1 for the desired input range.

#### Power Connections

The power jumper clips (see Figure 2) are used to distribute power to a maximum of 16 modules. In applications using more than 16 modules, power wiring must be connected to the first and last module, and distributed to the remaining modules using the power clips. This technique allows for "hot swapping" of a module without interrupting power to the remaining units.

#### Opening the Case

The case can be opened by simultaneously pressing in on the two ribbed tabs located at the top and bottom of the front cap of the case and sliding out the circuit board. This provides easy access to the DIP switch for range selection. To close the case, slide the board back in until the two tabs lock firmly in place. This may require pressing on

Eurotherm®

by Schneider Electric

## Switch Settings

Function	S1					
	1	2	3	4	5	6
<b>Input</b>						
+/- 5mV	-	-	-			■
+/- 10mV	-	-	-		■	
+/- 20mV	-	-	-		■	■
+/- 50mV	-	-	-	■		■
+/- 100mV	-	-	-	■	■	
+/- 200mV	-	-	-	■	■	■
Remote Cal Enable	■	-	-	-	-	-
<b>Output Range</b>						
0 to 10V	-	■	■	-	-	-
0 to 20mA	-	-	■	-	-	-
4 to 20mA	-	-	-	-	-	-

Key: ■ = 1 = ON or Closed; - = n/a

## Diagnostic LEDs

Other than when executing the pushbutton calibration routine, the LEDs blink under the following conditions:

**GREEN:** Flashes at 2Hz when the input is under range.  
Flashes at 8Hz when the input is over range.

**RED:** Flashes at 2Hz when the output is under range.  
Flashes at 8Hz when the output is over range.

An Under Range condition exists when the signal is lower than the operation low value minus 6.25% of operational span. An Over Range condition exists when the signal is higher than the operation high value plus 6.25% of operational span.

A voltage output short circuit can cause an under range condition (RED blinking at 2Hz rate). A current output open circuit can cause an over range condition (RED blinking at an 8Hz rate).

There could be two or more LEDs blinking at the same time, which means the module has more than one error condition. Only when all error conditions have been removed will the LEDs be back to normal (green on, red and yellow off).

## Calibration

For best results, calibration should be performed in the operating environment, mounted to a piece of DIN rail, allowing at least one hour for thermal equilibrium of the system. If pre-calibration on a test bench is desired, then an output load equal to the input impedance of the devices connected to the WV448 output is recommended, along with the warm-up period.

Note: Many applications do not require calibrating the output levels and simply utilize the default operational output ranges of the unit (0-10VDC, 0-20mA or 4-20mA). If the factory default calibration has been changed, the last saved operational output values are utilized. In those applications, the only calibration required is the operational input values. Once the maximum and minimum input values have been set, the Green and Red LEDs will be on. At that point simply press the CAL button rapidly 3 times and you will exit the calibration routine without effecting the last saved calibration for the operational output values.

1. Connect the input to a calibrated AC source and the output to a voltage or current meter. Apply power and allow the system to reach thermal equilibrium. Refer to Figure 3 for a detailed flow chart of the procedure. The section in the dotted-line box is all that is required for the user to calibrate operational input and output, and is all that is described in this procedure.

2. Adjust the input signal to the desired maximum and observe that the Green LED is on or flashing. Push the CAL button and hold for more than 4 seconds. The Yellow and Red LEDs should be on. Push the CAL button momentarily and the Yellow and Green LEDs will be on. From this point on, you can exit the calibration procedure at any step, without saving new data, by holding the CAL button for at least 4 seconds.


3. Apply the maximum input signal level desired and push the CAL button. The Yellow LED should now be on.

4. Apply the minimum input signal level desired and push the CAL button. The Green and Red LEDs should now be on. If you do not wish to change the output calibration, press the CAL button rapidly three times to exit the calibration routine.

5. Adjust the input signal upward until the output is at the desired maximum level (e.g. 20.00mA), and then push the CAL button. The Red LED should be on.

6. Adjust the input signal level downward until the output is at the desired minimum level (e.g. 4.00mA), and then push the CAL button. All three LEDs should now be on.

7. Push the CAL button once more to save the calibration data. The Green LED should be on if the input is within the calibrated range.

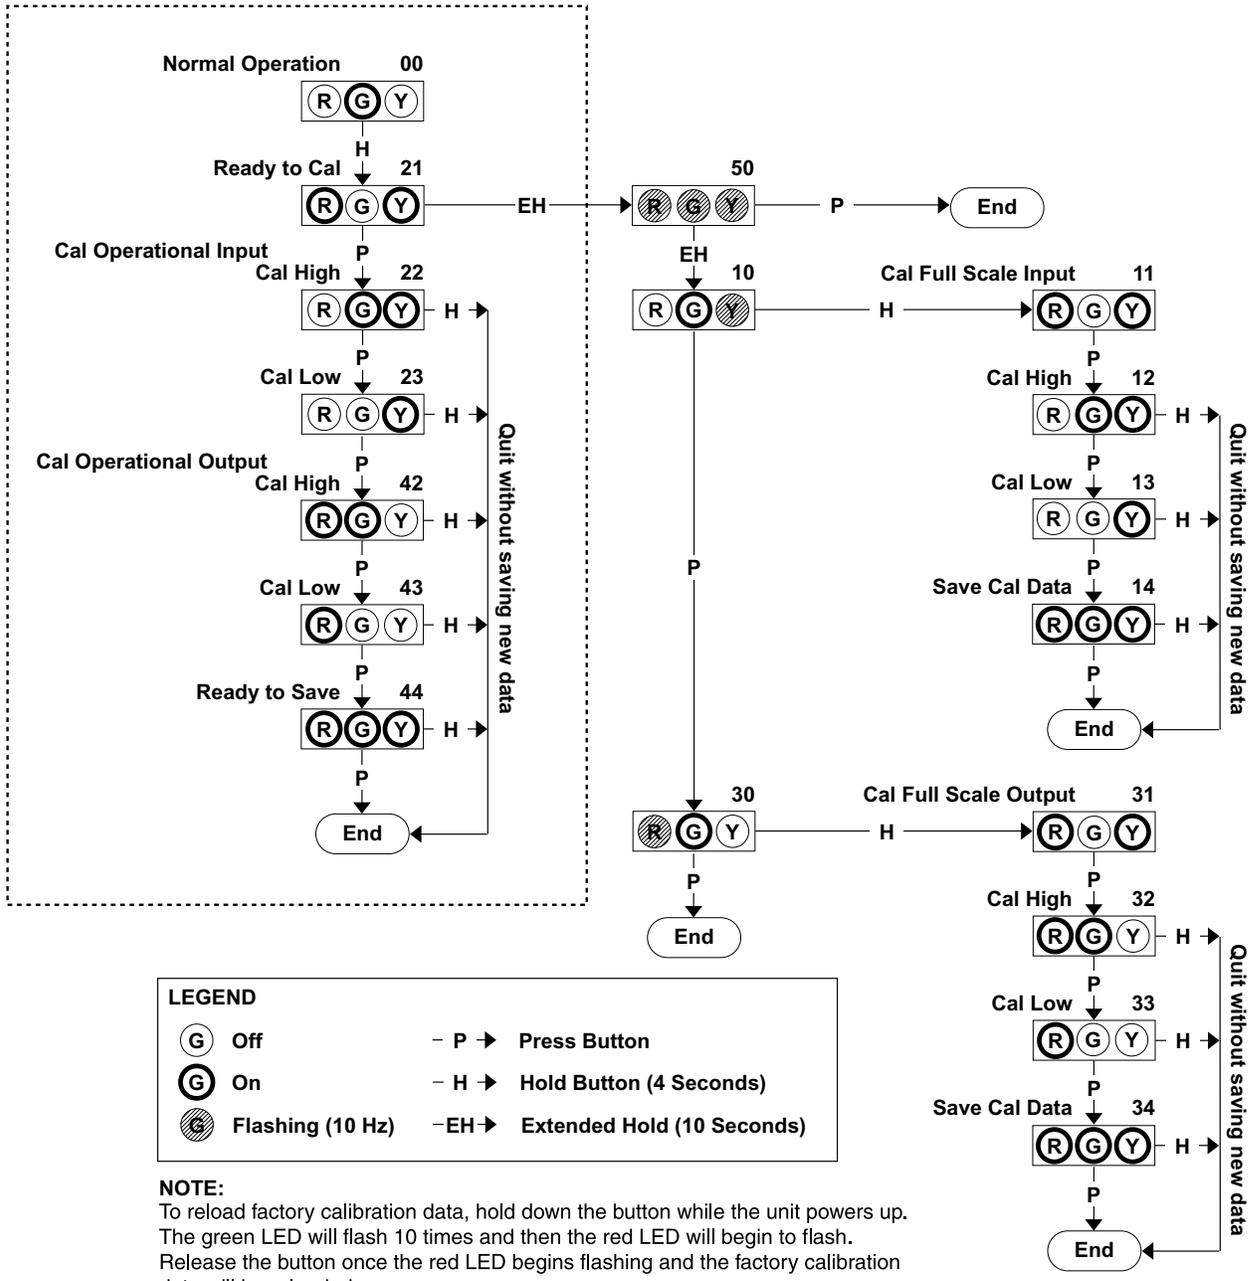

**LEGEND**

	Off	- P →	Press Button
	On	- H →	Hold Button (4 Seconds)
	Flashing (10 Hz)	- EH →	Extended Hold (10 Seconds)

**NOTE:**  
 To reload factory calibration data, hold down the button while the unit powers up. The green LED will flash 10 times and then the red LED will begin to flash. Release the button once the red LED begins flashing and the factory calibration data will be reloaded.

Figure 3: WV448 Calibration Flowchart

## Specifications

### Inputs

$\pm 5\text{mV}$ ,  $\pm 10\text{mV}$ ,  $\pm 20\text{mV}$ ,  $\pm 50\text{mV}$ ,  $\pm 100\text{mV}$ ,  $\pm 200\text{mV}$

### Impedance

$>1\text{M ohms}$

### Over-voltage

400Vrms (intermittent); 264Vrms (continuous)

### Operation

Direct or reverse acting

### Bridge Excitation

1 to 10VDC, 120mA

### Input Accuracy

0.015% of span

### Pushbutton Adjustment

(Inputs  $>10\text{mV}$ )

Effective zero offset:  $\geq 95\%$

Effective span turn down:  $\geq 95\%$

(Inputs  $<10\text{mV}$ )

Effective zero offset:  $\geq 50\%$

Effective span turn down:  $\geq 50\%$

### Local Range Selection

By DIP switch

### Output

#### Voltage:

0 to 10V (pushbutton adjustable to 95% of range)

Source Impedance:  $<10\text{ ohms}$

Drive: 10mA

#### Current:

0 to 20mA (pushbutton adjustable to 95% of range)

(4mA min position available on range switch)

Source Impedance:  $>100\text{k ohms}$

Compliance: 20V @ 20mA (1k ohms max)

### Output Accuracy

0.05% of Full Scale

### Overall Accuracy

0.065% of Full Scale

### Output Ripple

0.03% rms

### Response Time

150 mSec, 10 to 90%

### Stability

$\pm 100\text{ppm}/^\circ\text{C}$

### Common Mode Rejection

120dB @ DC,  $>90\text{dB}$  @ 60Hz, or better

### Isolation

$\geq 1800\text{VDC}$  or peak AC between input, output & power.

### Size

DIN rail case – 0.69" wide (17.5mm), refer to Dimensions drawing

### Environmental

Operating Temperature:  $0^\circ\text{C}$  to  $+60^\circ\text{C}$  ( $32^\circ\text{F}$  to  $140^\circ\text{F}$ )

Storage Temperature:  $-25^\circ\text{C}$  to  $+85^\circ\text{C}$  ( $-13^\circ\text{F}$  to  $185^\circ\text{F}$ )

Operating Relative Humidity (non-condensing): 15% to 95%RH at  $45^\circ\text{C}$

Non-operating Relative Humidity: 90%RH at  $60^\circ\text{C}$  for 24 hours

### Agency Approvals (EMC & Safety)

CE, EN61326, EN61010-1

CSA & UL Combined mark


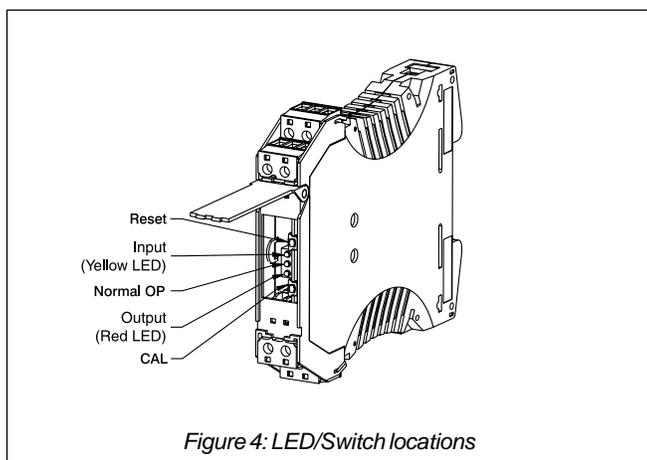


Figure 4: LED/Switch locations

## Dimensions

Dimensions are in mm (inches)

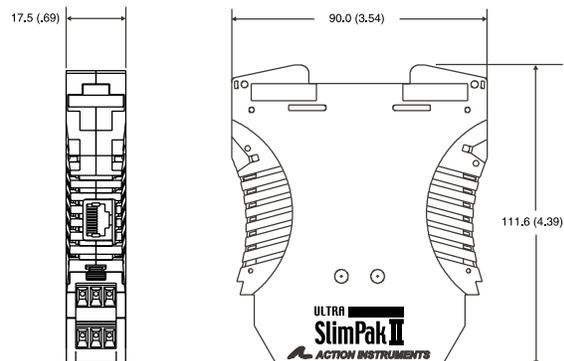

# Eurotherm

by **Schneider Electric**

### Eurotherm

44621 Guilford Dr. Suite 100

Ashburn, VA 20147

703-724-7300

[info.eurotherm.us@schneider-electric.com](http://info.eurotherm.us@schneider-electric.com)

[www.eurotherm.com](http://www.eurotherm.com)

## Factory Assistance

For additional information on calibration, operation and installation contact our Technical Services Group:

**703-724-7300**

[US.Support@schneider-electric.com](mailto:US.Support@schneider-electric.com)

HA136734\_WV\_IC\_09\_00 Copyright © Eurotherm, Inc 2004