



invenSYS  
Eurotherm

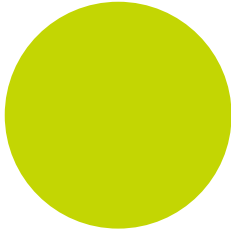

*2132, 2116, 2132i, 2116i*

User  
Manual

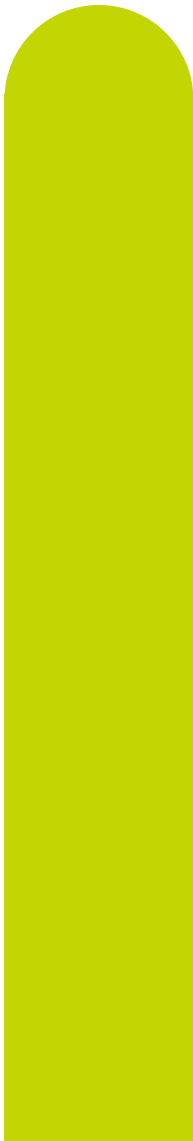

2100 Series Temperature Controller

Part No HA029921

January 2015



## 2100 Series Controllers and Indicators

### User Manual

Models 2132, 2116, controllers and 2132i, 2116i Indicators

#### Contents

<b>1.</b>	<b>DIMENSIONS AND INSTALLATION .....</b>	<b>2</b>
1.1	To Install the Instrument .....	2
1.2	Unplugging the Instrument.....	2
1.3	Recommended Minimum Spacing of Instruments .....	2
<b>2.</b>	<b>ELECTRICAL CONNECTIONS.....</b>	<b>3</b>
2.1	Wire Sizes .....	4
2.2	Typical Controller Wiring Diagram .....	4
<b>3.</b>	<b>OPERATION.....</b>	<b>5</b>
3.1	To Adjust The Required Temperature (Setpoint) - Controller Only .....	5
3.2	To View The Display Units.....	5
3.3	To Acknowledge a New Alarm .....	6
3.4	Alarm Messages .....	6
3.5	To View The Output Power - Controller Only.....	6
3.6	HOME Display Options.....	6
3.7	To Select or Change Other Parameters .....	7
3.8	To Adjust The Alarm Setpoints (Trip Levels) .....	7
3.9	Parameter Lists .....	8
3.9.1	Summary.....	8
3.10	Parameter Tables .....	8
3.11	User calibration .....	10
3.12	To Hide, Reveal and Promote Parameters .....	11
3.12.1	The <i>PROM</i> (Promote) option.....	11
3.12.2	Returning to Operator level.....	11
3.13	Timer - Controller only. ....	12
3.13.1	Opt.1 - Mode 1, Dwell and Switch Off.....	12
3.13.2	Opt.2 - Mode 2, Dwell No Switch Off.....	12
3.13.3	Opt.3 - Mode 3, Time from Cold and Switch Off .....	13
3.13.4	Opt.4 Mode 4, Time from Cold No Switch Off .....	13
3.13.5	Opt.5 Mode 5, Delayed Switch On.....	13
3.13.6	To Program a Ramp-Dwell profile.....	13
3.14	To Select the Timer Mode.....	14
3.15	To Start And Reset The Timer .....	14
<b>4.</b>	<b>CONFIGURING THE INSTRUMENT.....</b>	<b>15</b>
4.1	To select configuration level.....	15
4.1.1	Instrument Configuration.....	15
4.1.2	Input Configuration.....	16
4.1.3	Alarm Configuration.....	16
4.1.4	Relay and Logic input/output Configuration.....	17
4.1.5	To Operate the Relay or Logic output from an alarm or digital function. ....	17
4.1.6	Multiple Alarms on one Output.....	17
4.1.7	To Clear Alarms from an Output.....	17
4.1.8	Passwords.....	18
4.2	To leave Configuration level .....	18
4.3	Diagnostic Alarms .....	18
4.4	Automatic Tuning - Not Applicable to Indicators .....	19
4.4.1	Heating & Cooling Output Cycle Times .....	19
4.4.2	Tuning Procedure.....	19
4.4.3	Typical automatic tuning cycle .....	19
4.4.4	Calculation of the cutback values.....	19
4.5	Manual Tuning - Not Applicable to the Indicator.....	20
4.5.1	Setting the cutback values .....	20
4.5.2	Manual reset.....	20
<b>5.</b>	<b>ORDERING CODE.....</b>	<b>21</b>
<b>6.</b>	<b>TECHNICAL SPECIFICATION .....</b>	<b>22</b>
<b>7.</b>	<b>SAFETY AND EMC INFORMATION.....</b>	<b>23</b>

## 2132 and 2116 PID Temperature Controllers and Indicators

**Note:** 2116 series is no longer available from November 2014 and but 2116 details have been retained in this issue of the manual since they apply to products already supplied.

Models 2132 and 2116 controllers are supplied in 1/32 and 1/16 DIN panel sizes and are designed for accurate, stable control of ovens, chillers, sterilisers and other heating and cooling processes. Two outputs are configurable for heating, cooling and alarms.


Models 2132i/AL and 2116i/AL are *Indicating alarm units* which come with an alarm relay output and logic I/O fitted.

Models 2132i/ND and 2116i/ND are *Indicator only units* which come without the alarm relay output or logic I/O fitted. Alarms can still be configured and flashed as messages in the main display but they will not be able to operate a physical output.

All instruments are supplied configured according to an order code shown in section 5. Check this on the side labels to determine the configuration of your particular instrument.

Where features are common the model number 2132 and 2116 will be used, otherwise the actual model number will be used.

### 1. Dimensions and Installation

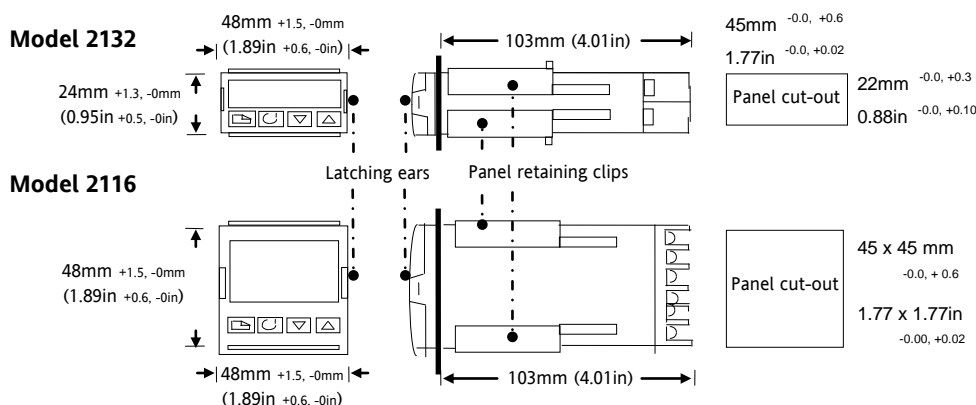

#### 1.1 To Install the Instrument


Please read the safety information in section 7 before proceeding.

1. Prepare the panel cut-out to the size shown
2. Insert the Instrument through the cut-out.
3. Spring the panel retaining clips into place. Secure the Instrument in position by holding it level and pushing both retaining clips forward.
4. Peel off the protective cover from the display

#### 1.2 Unplugging the Instrument


The Instrument can be unplugged from its sleeve by easing the latching ears outwards and pulling it forward out of the sleeve. When plugging it back into its sleeve, ensure that the latching ears click back into place to maintain the IP65 sealing.

#### 1.3 Recommended Minimum Spacing of Instruments

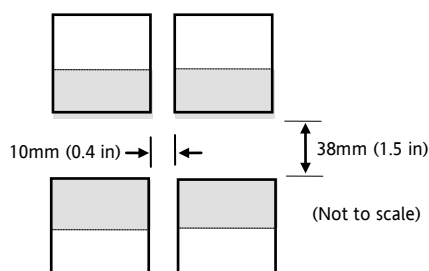


## 2. Electrical Connections

### Controllers

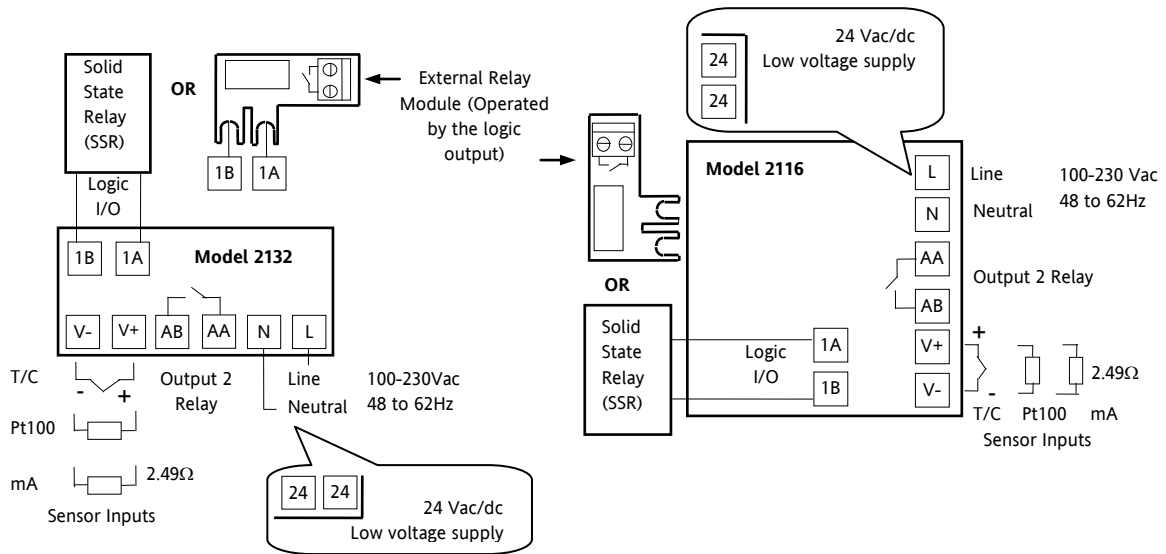

### Indicators

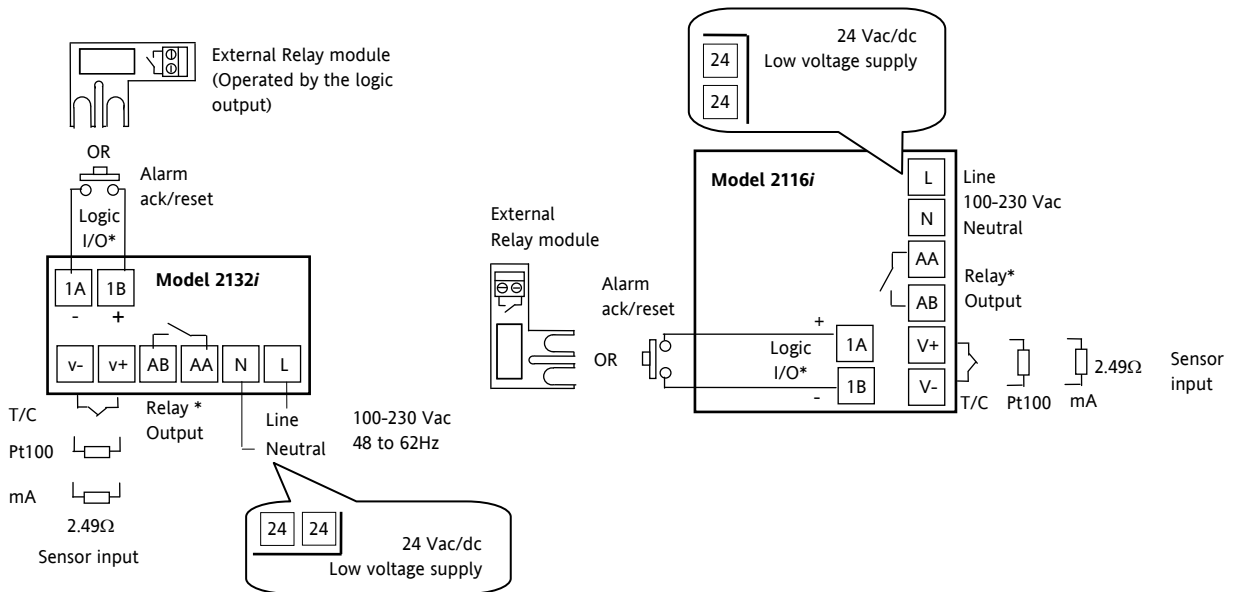

\*Not fitted in indicator only units.

Terminals 1A and 1B are not fitted in indicator only units.

#### Output ratings

Logic Output: 9Vdc, 12mA (non-isolated from sensor input).

Used for: Heating, Cooling or Alarm.

Relay Output: 2A, 264V ac resistive.

Used for: Heating, Cooling or Alarm.

Contact Closure Input (replaces Logic Output).

Used for: Alarm Acknowledge or Timer start/reset


#### Over current protection

Use a maximum 2A fuse for the instrument supply and relay output. A suitable fuse is EN60127 (type T).

## 2.1 Wire Sizes

The screw terminals accept wire sizes from 0.5 to 1.5 mm (16 to 22AWG). Hinged covers prevent hands or metal making accidental contact with live wires. The rear terminal screws should be tightened to 0.4Nm (3.5lb in).

## 2.2 Typical Controller Wiring Diagram

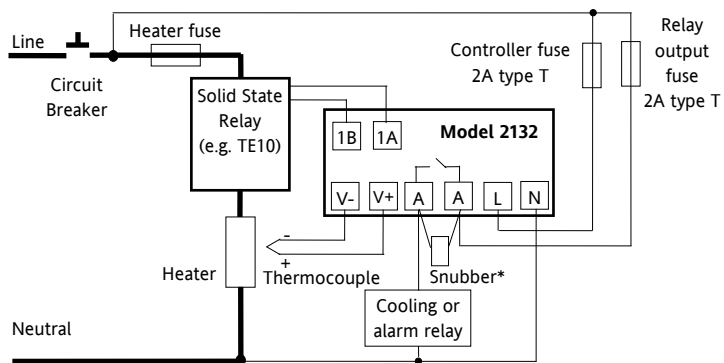

\* When switching inductive loads such as contactors or solenoid valves, wire the 22nF/100Ω 'snubber' supplied across relay terminals AA & AB. This will prolong contact life and reduce interference.



### WARNING


**Snubbers pass 0.6mA at 110V and 1.2mA at 230Vac, which may be sufficient to hold on high impedance loads. Do not use in these installations.**

Safety requirements for permanently connected equipment state:

- A switch or circuit breaker shall be included in the building installation
- It shall be in close proximity to the equipment and within easy reach of the operator
- It shall be marked as the disconnecting device for the equipment

### 3. Operation

Switch on the instrument. Following a 3 second self-test sequence, you will see the display shown below. It is called the HOME display.

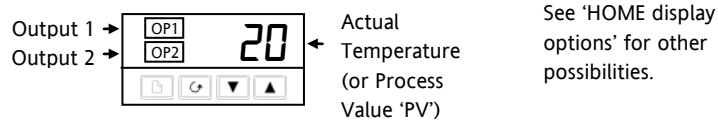

**OP1** illuminates in the controller when the logic output is ON (normally heating).

**OP2** illuminates in the controller when the relay output is ON (normally cooling or alarm).

If **OP1** or **OP2** are configured as alarm outputs (instead of heating and cooling), they will flash when a new 'unacknowledged' alarm occurs and go steady when the alarm is acknowledged but still true.


The indicator has three internal 'soft' alarm setpoints which can be attached to either the logic or relay outputs.

**OP1** will flash when an alarm attached to the logic output becomes true. (This is normally alarm 1). It will go steady when the alarm is acknowledged but still true.

**OP2** will flash when an alarm attached to the relay output becomes true. (This is normally alarm 2 or 3). It will go steady when the alarm is acknowledged but still true.


#### 3.1 To Adjust The Required Temperature (Setpoint) - Controller Only

Press and release quickly the or button. The setpoint will be displayed for 2 seconds.

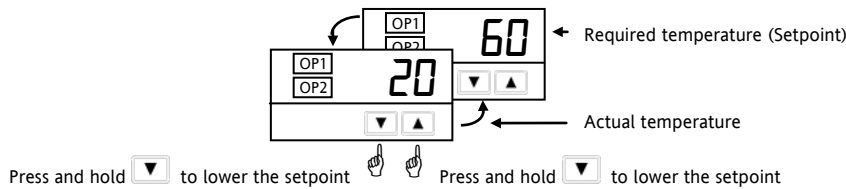

#### 3.2 To View The Display Units

Press and release quickly the or button. The display units will be flashed for 0.5 sec.

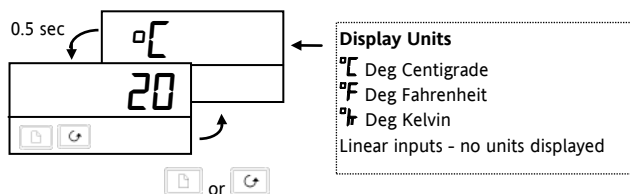

If you get lost, pressing and together will always return you to the HOME display.

If, at any time, no key is pressed within 45 seconds, the display will always return to the HOME display.


### 3.3 To Acknowledge a New Alarm

Press and together. This will also reset any latched alarms that are no longer true.

### 3.4 Alarm Messages

If an alarm occurs a message will be flashed in the display. This alternates with the measured temperature as shown below:


Possible messages		
-FSH	Alarm - Full Scale High	In place of the dash the alarm number is shown - Alarm 1 or 2 or 3.
-FSL	Alarm - Full Scale Low	
-dEU	Alarm - Deviation	
-dH	Alarm - Deviation High	
-dLo	Alarm - Deviation Low	
Sbr	Sensor Break	
Lbr	Loop Break	Controller only
LdF	Load Fail	
End	End of Timing	

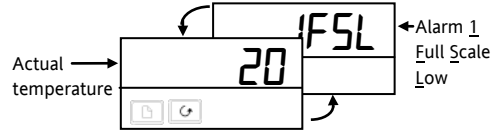

### 3.5 To View The Output Power - Controller Only

Do this if you want to see how much heating or cooling energy is being demanded by the controller. Note: This is not a measure of actual power.

HOME display

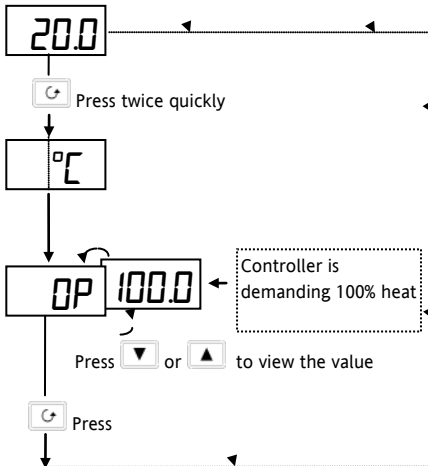


### Warning!

In manual standby mode (see 'To Use The Timer') the output power can be adjusted by the operator, causing heating or cooling to be permanently applied. To prevent this make the OP parameter read only (see 'To Hide, Reveal And Promote Parameters')

### 3.6 HOME Display Options

Quickly press twice

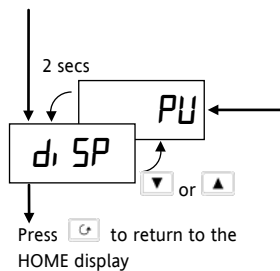

Press to return to the HOME display


To protect this option, see "To Hide Parameters".


- Press or to select:-
- Std Not used by the indicator
  - OP Not used by the indicator. (In the controller OP applies to software version 1.4)
  - nonE The HOME display will be blank and only alarm messages will be flashed
  - PU The Process value will be displayed
  - AL SP Alarm 2 setpoint will be displayed and can be adjusted by or
  - PUAL The Process value will be displayed with Alarm 2 setpoint viewed and adjusted by or



### 3.7 To Select or Change Other Parameters

Parameters are settings in the instrument which you can change to suit the process. They are found under list headings.

Press the  button to step through the list headings as shown below.

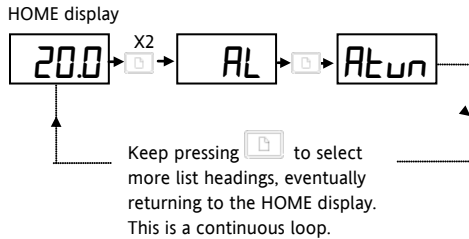


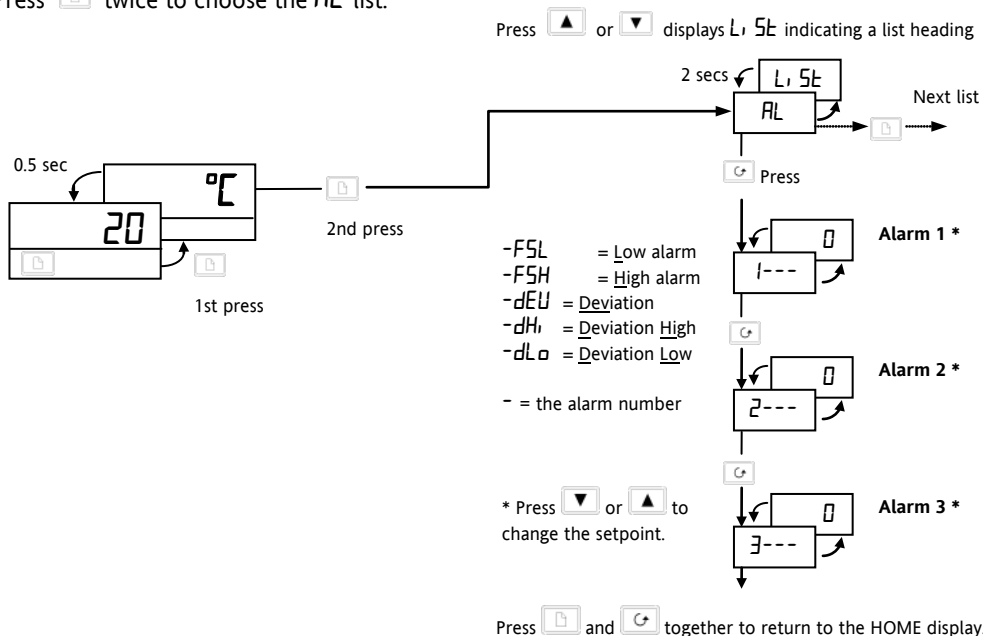
Turn to paragraph 3.9 to see all of the list headings.

These lists are used to:

- Change alarm setpoints
- Tune the controller to the process
- Manually select PID values
- Change setpoint limits and access the in-built timer
- Change input and output limits

### 3.8 To Adjust The Alarm Setpoints (Trip Levels)


Press  twice to choose the AL list.



There are three Alarms. The setpoint for each alarm is found under the AL list. If an alarm has been disabled, it will not appear in this list.

Note: The other parameters listed in section 3.9 are accessed and adjusted in exactly the same way as this example.

### 3.9 Parameter Lists

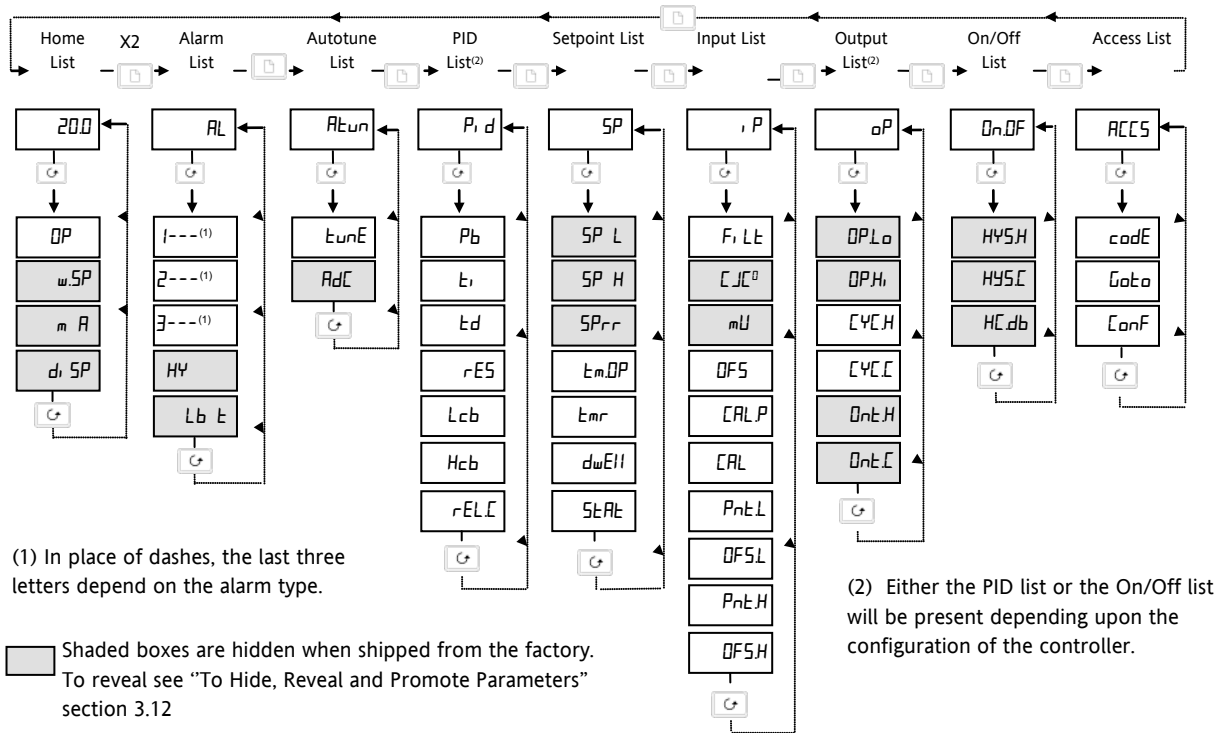

The above diagram shows parameters for a controller. For indicators the Autotune, PID, Output and On/Off Lists are not available.

#### 3.9.1 Summary

1. Press **[Left]** to step across list headings. Hold down to scroll continuously.
2. Press **[Down]** to step down parameters. Hold down to scroll continuously.
3. Press **[Down]** to view the value of a parameter. Keep pressing to decrease the value.
4. Press **[Up]** to view the value of a parameter. Keep pressing to increase the value

### 3.10 Parameter Tables

	Home List	Adjustable Range		Default setting	Customer setting
OP	Output Power	-100% = max cooling, 100.0% = max heating.			
wSP	Working Setpoint	Only appears when setpoint rate limit enabled.		Read only	Read only
m-A	Manual/ Auto Select	Auto	Automatic control selected	Auto	
		Man	Manual standby selected		
di SP	Home Display Options	Std	Standard - Shows the process value with the setpoint accessed by pressing the <b>[Down]</b> and <b>[Up]</b> buttons.	Std	
		OP	Displays the output power - for use as a manual station. (Only applies to software version 1.4)		
		None	Blank Display (only alarm messages flashed)		
		PU	Displays the Process Value only		
		AL SP	Displays the Alarm 2 Setpoint only		
		PUAL	Displays the Process Value with Alarm 2 Setpoint accessed by <b>[Down]</b> and <b>[Up]</b> .		

AL	Alarm List (See section 3.8)		Adjustable Range	Default Setting	Customer setting
1---	Alarm 1 Setpoint	In place of dashes, the last three letters indicate the alarm type:	Between low and high setpoint limits	0	
2---	Alarm 2 Setpoint			0	
3---	Alarm 3 Setpoint			0	
		-FSL	Full Scale Low		
		-FSH	Full Scale High		
		-dE <sub>L</sub>	Deviation		
		-dH <sub>L</sub>	Deviation High		
		-dL <sub>o</sub>	Deviation Low		
HY	Alarm Hysteresis	1 to 9999 in display units (This value is common to all alarms) Hysteresis is used to prevent the alarm output 'chattering' by setting a difference between the alarm switch ON and switch OFF points		1	
Lb t	Loop Break Time	OFF to 9999 minutes		Controller only.	OFF

ALun	Automatic Tuning List (See section 4.4).	Controller only.	Adjustable Range	Default Setting	Customer setting
E <sub>un</sub> E	Automatic Tune Enable		OFF or on	OFF	
Rdc	Automatic Manual reset calculation (when P+D control)		mAn or cALC	mAn	

P, d	PID List (See section 4.4).	Controller only.	Adjustable Range	Default Setting	Customer setting
Pb	Proportional Band		1 to 999.9 display units	20	
t <sub>i</sub>	Integral Time		OFF to 9999 seconds	360	
t <sub>d</sub>	Derivative Time		OFF to 9999 seconds	60	
rES	Manual Reset Value (only present if t <sub>i</sub> = OFF)		-100 to 100.0 %	0.0	
Lcb	Low Cutback		A <sub>u</sub> t <sub>o</sub> to 999.9 display units	A <sub>u</sub> t <sub>o</sub>	
Hcb	High Cutback		A <sub>u</sub> t <sub>o</sub> to 999.9 display units	A <sub>u</sub> t <sub>o</sub>	
rELC	Relative Cool Gain		0.0 1 to 10.00	1.00	

SP	Setpoint List	Adjustable Range	Default Setting	Customer setting
SP L	Setpoint Low Limit	-1999 to 999.9	As per order	
SP H	Setpoint High Limit	-1999 to 999.9	As per order	
SPrr	Setpoint Rate Limit	OFF to 999.9 display units per minute	OFF	
t <sub>o</sub> DP	Timer Operating Mode	0PE. 1 to 0PE.5	Controller only.	0PE. 1
t <sub>o</sub> r	Time Remaining	0 to 9999 minutes		0
d <sub>o</sub> ELL	Dwell Time	OFF to 9999 minutes		OFF
S <sub>t</sub> ALt	Timer Status	OFF or on		OFF

, P	Input List (See also 'User Calibration' section 3.11)	Adjustable Range	Default Setting	Customer setting
F <sub>i</sub> Lt	Input Filter Time Constant	OFF to 999.9 seconds	1.6	
CJL <sup>o</sup>	Cold Junction Temperature measured at rear terminals		Read only	
mV	Millivolt Input measured at the rear terminals		Read only	
OFFS	Process value Offset	-1999 to 9999 display units	0	
CALP	Calibration Password	0 to 9999	3	
CAL	User Calibration Enable	FACt Re-instates factory calibration USEr Re-instates user calibration	FACt	
PnEL	Low Calibration Point	-1999 to 9999 display units	0	
OFFSL	Low Point Calibration Offset		0	
PnEH	High Calibration Point		100	
OFFSH	High Point Calibration Offset		0	

<b>oP</b>	<b>Output List.</b>	<b>Controller only.</b>	Adjustable Range	Default Setting	Customer setting
<b>oPLo</b>	Low Output Power Limit		- 100 to 100.0 %	0	
<b>oPHi</b>	High Output Power Limit		- 100 to 100.0 %	100.0	
<b>CYCH</b>	Heating Output Cycle Time		0.2 to 999.9 seconds	1.0 Lgc 20 Rly	
<b>CYCL</b>	Cooling Output Cycle Time		0.2 to 999.9 seconds	5.0 Lgc 20 Rly	
<b>onLH</b>	Heating Output Minimum On Time		Auto to 999.9 seconds (Auto = 50ms)	Auto	
<b>onLC</b>	Cooling Output Minimum On Time		Auto to 999.9 seconds (Auto = 50ms)	Auto	


<b>onOF</b>	<b>On Off Output List</b>	<b>Controller only.</b>	Adjustable Range	Default Setting	Customer setting
<b>hYSH</b>	Heating Hysteresis		1 to 9999 display units	1	
<b>hYSC</b>	Cooling Hysteresis		1 to 9999 display units	1	
<b>HLdb</b>	Heat/Cool Deadband		0 to 9999 display units	0	

<b>ACCESS</b>	<b>Access List</b> (See also "To Hide, Reveal and Promote" parameters section 3.12)	Adjustable Range	Default Setting	Customer setting
<b>code</b>	Access Pass Number	0 to 9999	1	
<b>GoTo</b>	Go To Required Access Level	OPER, Full, Edit, CONF	OPER	
<b>CONF</b>	Configuration Pass Number	0 to 9999	2	

### 3.11 User calibration


Your instrument has been calibrated for life against known reference sources in the factory. User calibration allows you to apply offsets to compensate for sensor and other system errors. The parameter **oFS** in the **oP** list applies a fixed offset over the whole display range. You may also apply a 2-point calibration as follows:

- Press **[ ]** until you reach the **oP** list
- Press **[ ]** until you reach the **CALP** parameter
- Press **[ ]** or **[ ]** to enter the password. The factory default is 3. **PASS** will be displayed when correct.
- Press **[ ]** to reach the **CAL** parameter
- Press **[ ]** or **[ ]** to select **USER** (**FACT** will restore the factory calibration)
- Apply 2-point calibration as below:

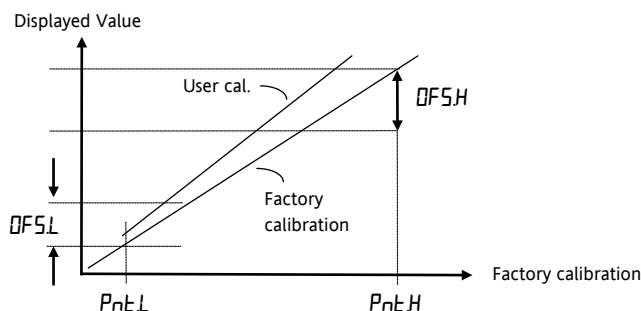


### 3.12 To Hide, Reveal and Promote Parameters

Select Edit level as follows:

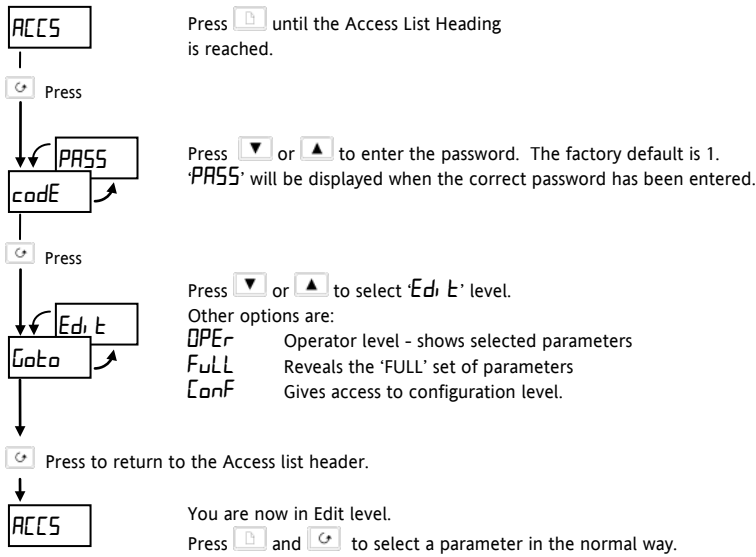


**Example:**

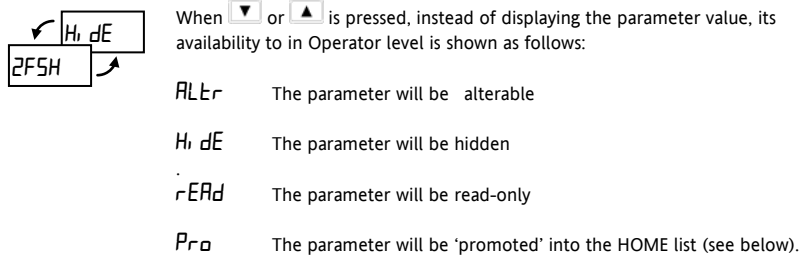

#### 3.12.1 The Prom (Promote) option

Up to twelve commonly used parameters can be 'promoted' into the HOME list. This will give the operator quick access to them by simply pressing the button. This feature, used in combination with 'hide' and 'read only', allows you to organise the way in which you want your controller formatted.

**Example:**




The parameter **Time** will now appear in the HOME list. Repeat the procedure for any other parameters you wish to promote.

To remove a parameter go to **Edit** level, select the parameter from the relevant list and change the choice from **Prom** back to **ALTER**, **rEAd** or **Hi dE**.

#### 3.12.2 Returning to Operator level


Repeat the above procedure for all the parameters you wish to hide, promote, or make read-only then return to operator level:

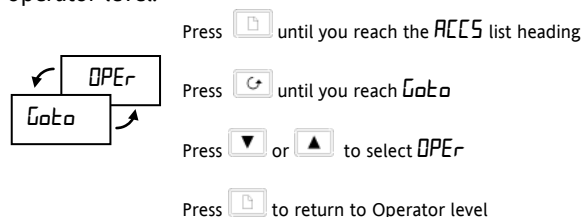

### 3.13 Timer - Controller only.

The timer is not applicable to indicators. In controllers there are five modes of operation:-


#### 3.13.1 Opt.1 - Mode 1, Dwell and Switch Off

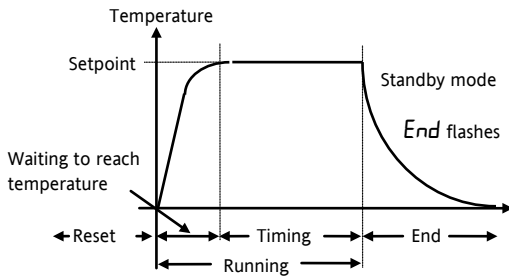

#### In reset

In reset, you can switch between automatic control and standby mode, using the parameter  $m-A$  in the HOME list.

The controller is supplied with the  $m-A$  parameter hidden. You must first reveal it. See 'To Hide, Reveal and Promote Parameters'.

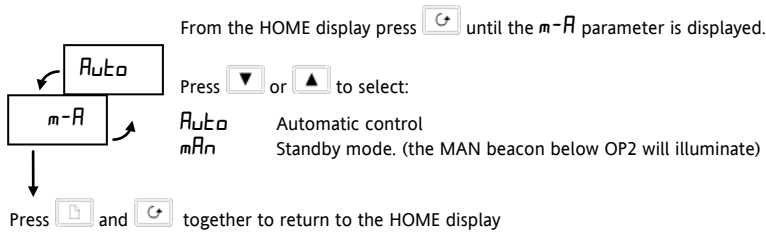

'Automatic control' means control at setpoint, with heating (and cooling) being applied.

'Standby mode' means: the controller is in manual with zero output power. See 'Warning!' in section 0.

#### During Running

The controller will always switch to automatic control. Heating (or cooling) will be applied and the temperature will rise (or cool) to the setpoint. When the temperature is within 1°C of setpoint, the timer will start counting down.


#### During End

When the timer times out, the controller will switch to standby mode. The MAN beacon will light and  $End$  will be flashed in the main display. The process will cool down. The timer will remain indefinitely in this state until reset.

#### When Reset


$End$  will stop flashing. The controller will return to reset in standby mode. It can be returned to automatic control by setting the parameter  $m-A$  in the HOME list to  $Auto$ .

#### 3.13.2 Opt.2 - Mode 2, Dwell No Switch Off

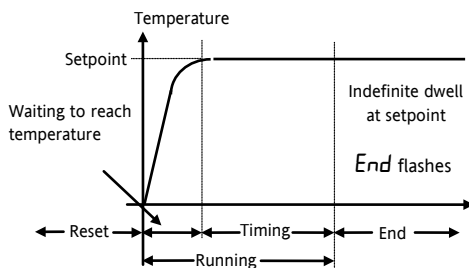


This is the same as mode 1 except that at the end of the timing period the controller will continue indefinitely in automatic control.

### 3.13.3 Opt.3 - Mode 3, Time from Cold and Switch Off

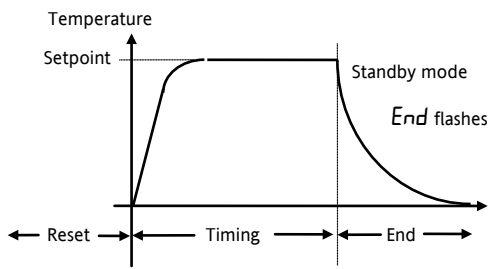


This is the same as mode 1 except that the timer will start counting down immediately without waiting for the temperature to reach setpoint.

### 3.13.4 Opt.4 Mode 4, Time from Cold No Switch Off

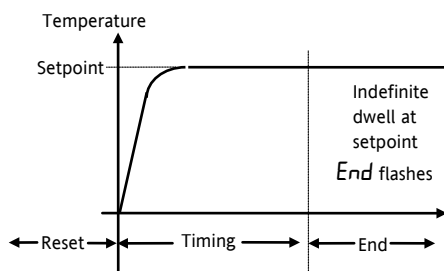

This is the same as mode 2 except that the timer will start counting down without waiting for the controller to reach setpoint.

### 3.13.5 Opt.5 Mode 5, Delayed Switch On

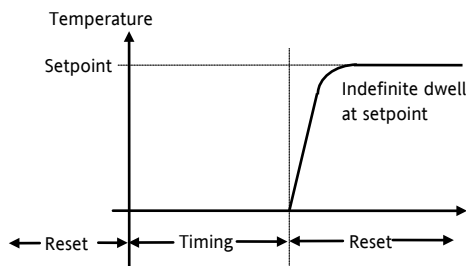

This mode applies a time delay before turning on the heating (or cooling). When the timer is started, the controller will always switch to standby mode and start counting down. When the timer has timed out, the controller will switch into automatic control, apply heating (or cooling) and control indefinitely at the setpoint.

### 3.13.6 To Program a Ramp-Dwell profile





A simple ramp-dwell profile can be programmed using  $SP_{rr}$  (setpoint rate limit) in combination with the timer. To use this feature, first reveal  $SP_{rr}$  and  $wSP$  (the working setpoint) using the method described in "To Hide, Reveal and Promote" parameters.  $wSP$  will then appear in the HOME list.

Set  $SP_{rr}$  to the required ramp rate. It is adjustable in 1/10<sup>th</sup> of the least significant display units per minute. That is if the display is configured 0 to 1000°C, setpoint rate limit can be adjusted between 0.1 and 999.9 °C per minute.

When setpoint rate limit has been enabled and the timer is started, the working setpoint,  $wSP$ , will first step to the measured temperature and then ramp at the setpoint rate limit,  $SP_{rr}$ , to the target setpoint.

In modes 1 and 2 timing will start when the measured temperature is within 1°C of the target setpoint. In modes 3 and 4 it will start when  $wSP$  is within 1°C of the target setpoint.

### 3.14 To Select the Timer Mode



- Press  until you reach the *SP* list
- Press  until you reach the *Em.OP* parameter
- Press  or  to select the timer operating mode, *OP.L.1* to *OP.L.5* as follows:


### 3.15 To Start And Reset The Timer

There are two methods:

#### Method 1.

This is the simplest method to control the timer.

- Press  until you reach the *SP* list
- Press  until you reach the *Emr* parameter (time remaining).

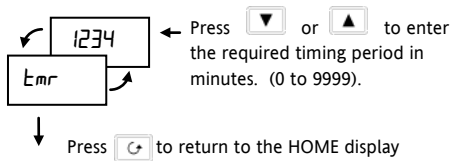

TIP: Promote *Emr* to the HOME list for quick access, as described in 'To Hide, Revealing and Promote Parameters.'

As soon as a value is entered into *Emr* timing will commence. *Emr* will count down towards zero. During the timing period *Emr* can be increased or decreased according to the demands of the process. Setting the value to zero will end the timing period.


When *Emr* reaches zero, 'End' will flash in the main display. The timer will remain indefinitely in this state until a new value is entered, when the timer will restart.

To reset the timer, press  and  together. 'End' will stop flashing.

To restart the timer, enter a new value into *Emr*.

#### Method 2.

Use this method if you want to set a fixed time and use the *SEAL* parameter to start and stop the timer.

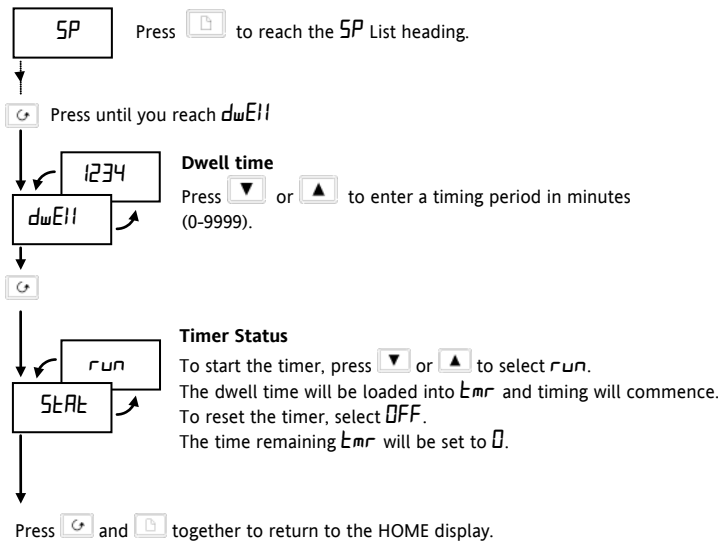

The *SEAL* parameter can also be switched between *OFF* and *run* by configuring the logic I/O as a Off/run contact closure input.


Open the external contact to select *run*. This is an edge triggered action. Close the contact to select *OFF*. *OFF* is forced whenever the contact is closed.



## 4. Configuring the Instrument

Select configuration level to change: • The type of control • The display units • The input sensor type • The scaling of linear inputs • The alarm configuration • The passwords.

### 4.1 To select configuration level

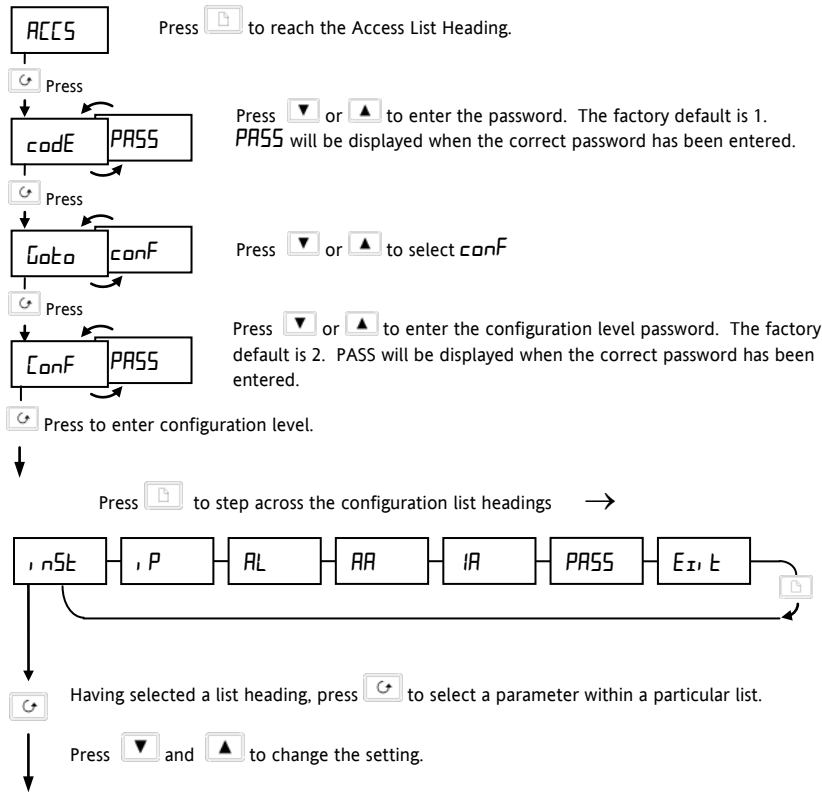

To Instrument Configuration Tables

#### 4.1.1 Instrument Configuration

Inst	Instr Conf	Options	Description
unit	Display units	C	Centigrade
		F	Fahrenheit
		K	Kelvin
		NONE	None
dECP	Decimal places in display	0000	None
		0000	One
		0000	Two
Ctrl	Control type	PID	PID Control
		ON/OFF	On/off Control
		AL	Convert to an alarm unit. If an indicator is supplied this parameter will always be set to <i>AL</i> .
Act	Control action	REV	Reverse (normal action for temperature control)
		DIR	Direct (output decreases as PV falls below SP)
PdtR	Manual reset tracking (PD control)	HoLd	In Auto holds manual reset value
		trAc	In Auto tracks output for bumpless A/M transfer
PwrF	Power feedback.	OFF	Supply voltage fluctuations may cause a change in temperature. The controller will compensate for these changes but may be delayed by the process time constants.
		ON	The controller will immediately compensate for supply voltage fluctuations when the controller is connected to the same phase as the heater.

*Act, PdtR* and *PwrF* are not used in indicators

### 4.1.2 Input Configuration

<i>i P</i>	Sensor Input	Options	Meaning
<i>i nPTE</i>	Input type	<i>JTE</i>	<u>J</u> thermocouple
		<i>KTE</i>	<u>K</u> thermocouple
		<i>LTE</i>	<u>L</u> thermocouple
		<i>RETE</i>	<u>R</u> thermocouple
		<i>BTE</i>	<u>B</u> thermocouple
		<i>NTE</i>	<u>N</u> thermocouple
		<i>ITE</i>	<u>I</u> thermocouple
		<i>SETE</i>	<u>S</u> thermocouple
		<i>PL 2</i>	<u>P</u> latinell II
		<i>rEd</i>	100Ω PRT
		<i>mU</i>	Linear <u>mV</u>
		<i>CTC</i>	<u>C</u> ustom input C=default
<i>CTC</i> (TC only)	Cold junction compensation	<i>Auto</i>	<u>A</u> utomatic
		<i>0°C</i>	0°C external ref.
		<i>45°C</i>	45°C external ref.
		<i>50°C</i>	50°C external ref.

Linear input scaling (Range -12 to +80mV)			
<i>i nPL</i>	mV input low		
<i>i nPH</i>	mV input high		
<i>U RL L</i>	Displayed value low		
<i>U RL H</i>	Displayed value high		
<i>i mP</i>	Sensor break input impedance	<i>OFF</i>	Off (Linear inputs only)
		<i>Auto</i>	1.5KΩ
		<i>H<sub>i</sub></i>	5KΩ
		<i>H<sub>i</sub> H<sub>i</sub></i>	15KΩ,

### 4.1.3 Alarm Configuration

The *AL* list configures the three internal ‘soft’ alarms and causes the appropriate alarm message to be flashed in the HOME display.

At this stage the alarm is indication only (known as a ‘soft alarm’). To make the alarms operate the relay or logic outputs, follow the instructions under “Relay and Logic input/output Configuration.

<i>AL</i>	Alarm	Type	Meaning
<i>AL 1</i>	Alarm 1	<i>OFF</i>	The alarm is disabled
		<i>FSL</i>	Full Scale Low alarm
		<i>FSH</i>	Full Scale High alarm
	Deviation alarms are not used in indicators	<i>dEu</i>	Deviation band alarm
		<i>dHi</i>	Deviation high alarm
		<i>dLo</i>	Deviation low alarm
<i>Ltch</i>	Alarm latching	<i>no</i>	Non-latching
		<i>YES</i>	Latched with automatic* resetting.
		<i>mAn</i>	Latched with manual** resetting.
<i>bLoc</i>	Alarm blocking	<i>no</i>	No blocking
		<i>YES</i>	Blocked until first good
The above sequence is repeated for: <i>AL 2</i> (Alarm 2) and <i>AL 3</i> (Alarm 3)			
<i>SPL<sub>i</sub></i>	Alarm setpoint limits	<i>d<sub>i</sub> S</i>	Limited by display range
		<i>Con</i>	Limited by setpoint limits

\* Automatic resetting means that, once the alarm has been acknowledged, it will automatically clear when it is no longer true.

\*\* Manual resetting means that the alarm must first clear before it can be reset

#### 4.1.4 Relay and Logic input/output Configuration

The logic I/O can be configured as an output or a contact closure input for alarm acknowledge, keylock, or timer run/reset. The internal soft alarms may be attached to the relay and logic outputs.

<i>RR</i>	Relay	Options	Meaning
<i>IR</i>	Logic I/O		
<i>i d</i>	Identity of output	<i>rELY</i>	Relay
		<i>LOG</i>	Logic
<i>Func</i>	Function	<i>di G</i>	Digital (alarm) output
		<i>HEAT</i>	Heating output
		<i>COOL</i>	Cooling output
	These functions only appear for the logic I/O	<i>SSr. 1</i>	PDSIO mode 1
		<i>Locb</i>	Keylock digital input
		<i>rrES</i>	Run/reset timer
		<i>AcAL</i>	Alarm Acknowledge
<i>di GF</i>	Digital output functions	<i>noch</i>	No change
		<i>CLr</i>	Clear all alarms
	See 'To Operate the Relay or Logic Output from an Alarm or Digital Function section 4.1.5'	<i>1FSL</i>	Alarm 1 (Note 1)
		<i>2FSL</i>	Alarm 2 (Note 1)
		<i>3FSL</i>	Alarm 3 (Note 1)
		<i>nw *</i>	New alarm
		<i>Sbf *</i>	Sensor break
		<i>Lbf *</i>	Loop break
		<i>Ldf *</i>	Load fail alarm
		<i>mAn *</i>	Man mode active
		<i>End *</i>	End of timing
		<i>tmG 1 *</i>	Timer running
		<i>tmG 2 *</i>	Timer counting down
	(Note 2)	<i>tmG 3 *</i>	Timer running
		<i>tmG 4 *</i>	Timer counting down
<i>SEnS</i>	Sense of the output	<i>nor</i>	Normal (Note 3)
		<i>inu</i>	Inverted (Note 3)

\* Alarms always non-latching. Process alarms 1, 2 and 3 are configurable as alarm latching or non-latching, see the *AL L, SE*

Note 1: The last three letters will correspond to the alarm type configured in the *AL* list. If the alarm is disabled, *AL 1* or *AL 2* or *AL 3* will be shown.

Note 2: If *tmG 3* and *tmG 4* are selected, they illuminate the logic or relay output beacons, OP1 and OP2, without operating the actual output. They are used to indicate that timing is in progress while leaving the actual outputs to be operated by the other digital functions such as the END condition which can be used to operate an external klaxen.

Note 3: Normal is the usual setting for heating or cooling.

Inverted is the normal setting for alarms - de-energise in alarm.

#### 4.1.5 To Operate the Relay or Logic output from an alarm or digital function.

1. Press  until you reach *Func*
2. Press  or  to select *Func = di G*
3. Press  to reach *di GF*
4. Press  or  to select a alarm or digital function
5. Leave for 2 seconds. The display returns to *di GF* and connects the selected alarm or digital function to the relay or logic output.
6. Press  or  again. Two decimal points will appear in the function that has been added to the output.

#### 4.1.6 Multiple Alarms on one Output

Any number of alarms or digital functions can be added to the relay or logic output by repeating steps 4, 5 and 6 above. Two decimal points will appear in those functions that has been added to the output.


#### 4.1.7 To Clear Alarms from an Output


1. Press  until to reach *di GF*
2. Press  or  to select *CLr*
3. Leave for 2 seconds. The display returns to *di GF* which disconnects all alarms from the relay.



### 4.1.8 Passwords

PASS	Passwords	Range	Default
RECP	Full and Edit level password	0-9999	1
ENFP	Configuration level password	0-9999	2
CALP	User calibration password	0-9999	3

### 4.2 To leave Configuration level

Press  to reach the 'exit' display



Press  or  to select 'YES'. After 2 seconds the display will blink and return to the HOME display in Operator level.

### 4.3 Diagnostic Alarms

In addition to the normal process alarms, the following diagnostics alarm messages are provided.

Message	Meaning and (Action)
EEEr	<i>Electrically Erasable Memory Error:</i> A parameter value has been corrupted. Contact Eurotherm.
HwEr	<i>Hardware error:</i> (Return for repair)
LLLL	<i>Low display range exceeded:</i> (Check input signal)
HHHH	<i>High display range exceeded:</i> (Check input signal)
Err 1	<i>Error 1: ROM self-test fail.</i> (Return for repair)
Err2	<i>Error 2: RAM self-test fail.</i> (Return for repair)
Err3	<i>Error 3: Watchdog fail.</i> (Return for repair)
Err4	<i>Error 4: Keyboard failure.</i> Stuck button, or a button was pressed during power up.
Err5	<i>Error 5: Input circuit failure.</i> (Return for repair)
PwrF	<i>Power failure.</i> The line voltage is too low.
UEr	<i>Tune Error.</i> Appears if auto-tuning exceeds 2 hours. Not applicable to indicators.

#### 4.4 Automatic Tuning - Not Applicable to Indicators

In PID control, the output from the controller is the sum of three terms: **Proportional**, **Integral** and **Derivative**. These three terms deliver just the right amount of power to hold the temperature at setpoint without oscillation. For stable control, the PID values must be 'tuned' to the characteristics of the process being controlled. In the 2132 and 2116 this is done automatically using advanced tuning techniques.

Automatic tuning is performed by switching the output of the controller On and Off to induce an oscillation in the measured temperature. From the amplitude and period of the oscillation, the PID values, shown in the table below, are calculated.

Parameter	Display	Meaning or Function
Proportional band	$Pb$	The bandwidth in $^{\circ}C$ or $^{\circ}F$ over which the output power is proportioned between minimum and maximum.
Integral time	$I_t$	Determines the time taken by the controller to remove steady-state error signals.
Derivative time	$D_t$	Determines how strongly the controller will react to the rate-of-change of temperature.
Low cutback	$Lcb$	The number of $^{\circ}C$ or $^{\circ}F$ below setpoint at which the controller will cutback the output power to prevent overshoot on heat up.
High Cutback	$Hcb$	The number of $^{\circ}C$ or $^{\circ}F$ above setpoint at which the controller will increase the output power to prevent undershoot on cool down.
Relative cool gain	$rELC$	Only present if cooling has been configured. Sets the cooling proportional band by dividing the $Pb$ value by the $rELC$ value.

If the process cannot tolerate 100% heating or cooling during tuning, the power can be restricted by the heating and cooling limits in the Output list. However, the measured value *must* oscillate to some degree for the tuner to determine values.

Tuning is normally performed only once during the initial commissioning of the process. However, if the process under control subsequently becomes unstable (because its characteristics have changed), you can re-tune again at any time.

It is best to tune starting with the process at ambient temperature. This allows the tuner to calculate more accurately.

##### 4.4.1 Heating & Cooling Output Cycle Times

Before commencing a tuning cycle, set the values of  $CYCH$  (heating output cycle time) and  $CYCL$  (cooling output cycle time) in the  $OP$  (output) list.

For a logic heating output (switching a SSR), set  $CYCH$  to  $10$  sec.

For a relay output, set  $CYCH$  to  $200$  sec.


For a logic cooling output used to control a solenoid valve, set  $CYCL$  to  $50$  sec.

##### 4.4.2 Tuning Procedure

1. Set the setpoint to the value at which you will normally operate the process.
2. In the  $ALUN$  list, select  $tunE$  and set it to  $on$
3. Press the Page and Scroll buttons together to return to the HOME display. The display will flash  $tunE$  to indicate that tuning is in progress.
4. The controller will induce an oscillation in the temperature by turning the heating on and then off.
5. After two cycles of oscillation the tuning will be completed and the tuner will switch itself off.
6. The controller will then calculate the tuning parameters and resume normal control action.

If you want 'Proportional only' or 'P+D' or 'P+' control, you should set the  $I_t$  or  $D_t$  parameters to  $OFF$  before commencing the tuning cycle. The tuner will leave them off and will not calculate a value for them.

##### 4.4.3 Typical automatic tuning cycle

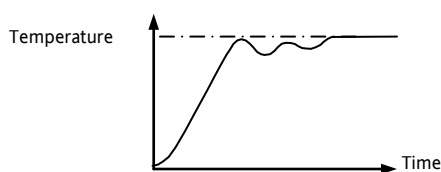

##### 4.4.4 Calculation of the cutback values

When low cutback or high cutback is set to  $Auto$  their values will be fixed at three times the proportional band, and will not be altered during automatic tuning. If set to any other value, they will be calculated as part of the tuning process.

### 4.5 Manual Tuning - Not Applicable to the Indicator

If for any reason automatic tuning gives unsatisfactory results, you can manually tune the controller.

Proceed as follows:

With the process at its normal running temperature:

1. Set the *Integral Time* ' $t_i$ ' and *Derivative Time* ' $t_d$ ' to *OFF*.
2. Set *High Cutback* ' $H_{cb}$ ' and *Low Cutback* ' $L_{cb}$ ', to '*Auto*'
3. Ignore the fact that the temperature may not settle precisely at the setpoint
4. Reduce the *proportional band* ' $P_b$ ' until the temperature just starts to oscillate. If the temperature is already oscillating, increase the proportional band until it just stops oscillating. Allow enough time between each adjustment for the temperature to stabilise. Make a note of the proportional band value 'B' and the period of oscillation 'T'.
5. Set the PID parameter values according to the formula below:

Type of control	Proportional band ' $P_b$ '	Integral time ' $t_i$ '	Derivative time ' $t_d$ '
Proportional only	2xB	OFF	OFF
P + I	2.2xB	0.8xT	OFF
P + I + D	1.7xB	0.5xT	0.12xT



#### 4.5.1 Setting the cutback values

The above procedure sets up the parameters for optimum steady state control. If unacceptable levels of overshoot or undershoot occur during start-up or for large step changes in temperature, then manually set the cutback parameters  $L_{cb}$  and  $H_{cb}$ .

**Proceed as follows:**

1. Set the low and high cutback settings to 3 x the proportional band (that is to say,  $L_{cb} = H_{cb} = 3 \times P_b$ ).
2. Note the level of overshoot or undershoot that occurs for large temperature changes (see the diagrams below).

In example (a) increase  $L_{cb}$  by the overshoot value. In example (b) reduce  $L_{cb}$  by the undershoot value.

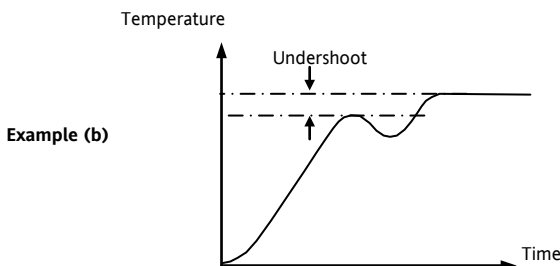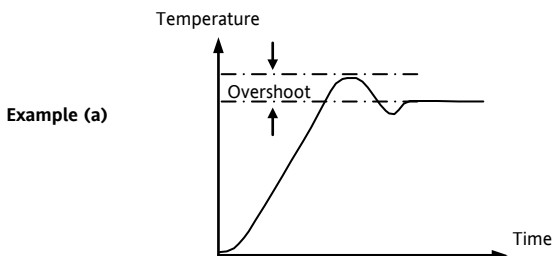

When the temperature approaches the setpoint from above, you can set  $H_{cb}$  in a similar manner.

#### 4.5.2 Manual reset

When  $t_i = OFF$  manual reset (*rES*) appears in the *P, d, L, SE*. This parameter sets the output power when the error signal is zero. It can be manually adjusted to remove steady state error - the function normally performed by the Integral term.

### 5. Ordering Code

**Note: 2116 series is no longer available from November 2014 and but 2116 details have been retained in this issue of the manual since they apply to products already supplied.**

**Controllers** are supplied configured according to the ordering code shown below:-

Model number	Function	Supply voltage	Manual	Logic I/O	Output 2 (Relay)
<b>Model Number</b>		<b>Supply voltage</b>		<b>Manual</b>	
2132	1/16 DIN	VH	100-230 Vac	XXX	None
2116	1/8 DIN	VL	24 Vdc or ac	ENG	English
<b>Function</b>		<b>Manual</b>		<b>Logic I/O</b>	
CC	PID controller	FRA	French	XX	Disabled
NF	On/Off controller	GER	German	<b>Logic output</b>	
TC	PID controller + timer	NED	Dutch	LH	Heating
TN	On/Off controller + timer	SPA	Spanish	LC	Cooling
		SWE	Swedish	M1	PDSIO mode 1
		ITA	Italian	FH	High alarm 1
				FL	Low alarm 1
				DB	Dev band alarm 1
				DL	Dev. low alarm 1
				DH	Dev. high alarm 1
				NW	New alarm
				<b>Logic input</b>	
				AC	Alarm ack/reset
				KL	Keylock
				TM	Timer Run/Reset
				<b>Output 2: Relay</b>	
				XX	Disabled
				RH	Heating
				RC	Cooling
				FH	High alarm 2
				FL	Low alarm 2
				AL	High alarm 2 & low alarm 3
				DB	Dev band alarm 2
				DL	Dev. low alarm 2
				DH	Dev. high alarm 2
				NW	New alarm

**Indicators** are supplied configured according to the ordering code shown below:-

Model number	Function	Supply voltage	Manual	Logic I/O	Output 2 (Relay)
<b>Model Number</b>		<b>Supply voltage</b>		<b>Manual</b>	
2132i	1/8 DIN indicator	VH	100-230 Vac	XXX	None
2116i	1/4 DIN indicator	VL	24 Vdc or ac	ENG	English
<b>Function</b>		<b>Manual</b>		<b>Logic I/O</b>	
ND	Indicator only*	FRA	French	XX	Disabled*
AL	Indicating alarm unit	GER	German	<b>Logic input</b>	
		NED	Dutch	AC	Alarm ack/reset
		SPA	Spanish	KL	Keylock
		SWE	Swedish	<b>Non-latched alarms</b>	
		ITA	Italian	FH	High alarm 1
				FL	Low alarm 1
				<b>Latched alarms</b>	
				HA	High alarm 1
				LA	Low alarm 1
				NW	New alarm
				<b>Alarm Relay Output</b>	
				XX	Disabled*
				<b>Non-latched alarms</b>	
				FH	High alarm 2
				FL	Low alarm 2
				AL	High alarm 2 & low alarm 3
				<b>Latched alarms</b>	
				HA	High alarm 2
				LA	Low alarm 2
				AA	High alarm 2 & low alarm 3
				NW	New alarm

\* If 'Function' = ND; Logic I/O and Output 2 Relay = XX

The following code is applicable to both **controllers** and **indicators**:-

Sensor input	Setpoint min	Setpoint max	Units	Ext relay module	Input adaptor
<b>Sensor input</b>		<b>Display range and Setpoint min &amp; max limits</b>		<b>Custom downloaded inputs</b>	
<b>Thermocouples</b>				C	Type C -W5%Re/W26%Re (default custom sensor)
		°C	°F	D	Type D - W3%Re/W25%Re
J	Type J	-210 to 1200	-340 to 2192	E	E thermocouple
K	Type K	-200 to 1372	-325 to 2500	1	Ni/Ni18%Mo
T	Type T	-200 to 400	-325 to 750	2	Pt20%Rh/Pt40%Rh
L	Type L	-200 to 900	-325 to 1650	3	W/W26%Re (Engelhard)
N	Type N	-200 to 1300	-325 to 2370	4	W/W26%Re (Hoskins)
R	Type R	-50 to 1768	58 to 3200	5	W5%Re/W26%Re (Engelhard)
S	Type S	-50 to 1768	-58 to 3200	6	W5%Re/W26%Re(Bucose)
B	Type B	0 to 1820	32 to 3308	7	Pt10%Rh/Pt40%Rh
P	Platinell II	0 to 1369	32 to 2496	8	Exegen K80 I.R. Pyrometer
<b>Resistance thermometer</b>				Process inputs (linear) Scaleable -999 to 9999	
Z	Pt100	-200 to 850	-325 to 1562	M	-9.99 to +80mV
				Y	0 to 20mA
				A	4 to 20mA
				V	0 to 10Vdc (input adaptor required)
<b>Units</b>		<b>External relay module</b>		<b>Input Adaptor</b>	
C	°C	XX	Not fitted	XX	None
F	°F	R7	Fitted (Operated by the logic output)	V1	0-10Vdc
K	Kelvin			A1	0-20mA sense resistor (2.49Ω, 0.1%)
X	Linear I/P				

## 6. Technical Specification

Panel sealing	IP65 (EN 60529)
Operating ambient	0 to 55°C. Ensure that the enclosure is adequately ventilated. 5 to 95%RH, non condensing
Storage temperature	-10°C to +75°C. (Protect from humidity and dust)
Atmosphere	Not suitable for use above 2000m or in explosive or corrosive atmospheres
Power supply	High voltage unit: 100 to 230Vac $\pm$ 15%, 48-62Hz, 5 Watts maximum consumption Low voltage unit: 24Vac, -15%/+10%, 48-62Hz or 24dc, -15%/+20% 5 Watts maximum consumption
Relay rating (isolated)	Maximum: 264Vac, 2A resistive. Minimum: 12Vdc, 100mA Mechanical life > 10 <sup>7</sup> operations. Electrical life at 1A, 240vac resistive load > 5 x10 <sup>6</sup> operations
Wire sizes	Use a minimum of 0.5mm <sup>2</sup> or 16awg wire for plant connections.
Over current protection	Use independent 2A fuses for the supply and relay output. Suitable fuses are EN60127 (type T)
Logic I/O rating	9V at 12mA, non-isolated from sensor input
Electrical safety	Meets EN 61010 (Voltage transients on the power supply must not exceed 2.5kV). Installation category II. Pollution degree 2.
Isolation:	All isolated inputs and outputs have reinforced insulation to protect against electric shock. (See live sensor note, section 7)
Cold Junction Compensation	>30 to 1 rejection of ambient temperature changes in automatic mode. Uses INSTANT ACCURACY™ sensing technology to reduce warm up drift and respond quickly to ambient temperature changes.



## 7. Safety and EMC Information

This instrument is intended for industrial temperature and process control applications when it will meet the requirements of the European Directives on Safety and EMC. Use in other applications, or failure to observe the installation instructions of this handbook may impair safety or EMC. The installer must ensure the safety and EMC of any particular installation.

### Safety

This instrument complies with the European Low Voltage Directive 2006/95/EC by the application of the safety standard EN 61010.

### Electromagnetic compatibility

It conforms with the essential protection requirements of the EMC Directive 2004/108/EC, by the application of a Technical Construction file. It satisfies the general requirements of the industrial environment defined in EN 61326. For more information on product compliance refer to the Technical Construction File.

### General

The information contained in these instructions is subject to change without notice. While every effort has been made to ensure the accuracy of the information, Eurotherm shall not be held liable for errors contained herein.

### Unpacking and storage

The packaging should contain an instrument mounted in its sleeve, two mounting brackets for panel installation and an Installation & Operating guide. Certain ranges are supplied with an input adapter.

If on receipt, the packaging or the instrument is damaged, do not install the product but contact your supplier. If the instrument is to be stored before use, protect from humidity and dust in an ambient temperature range of -10°C to +70°C.

### Service and repair

This instrument has no user serviceable parts. Contact your supplier for repair.

#### Caution: Charged capacitors

Before removing the instrument from its sleeve, switch off the supply and wait at least two minutes to allow capacitors to discharge. Failure to observe this precaution may damage the indicator or cause some discomfort to the user.

#### Electrostatic discharge precautions


When the instrument is removed from its sleeve, it is vulnerable to damage by electrostatic discharge from someone handling the instrument. To avoid this, before handling the unplugged instrument discharge yourself to ground.

#### Cleaning

Do not use water or water based products to clean labels or they will become illegible. Isopropyl alcohol may be used to clean labels. A mild soap solution may be used to clean other exterior surfaces of the product.

#### Safety Symbols

The following safety symbol is used on the instrument:

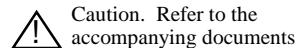

#### Personnel

Installation must only be carried out by qualified personnel in accordance with instructions given in this handbook.

#### Enclosure of live parts

The instrument must be installed in an enclosure to prevent hands or metal tools touching parts that may be electrically live.

#### Caution: Live sensors

The logic input/output is electrically connected to the sensor input (e.g. thermocouple). In some installations the temperature sensor may become live. The instrument is designed to operate under these conditions, but you must ensure that this will not damage other equipment connected to the logic input/output and that service personnel do not touch this connection while it is live. With a live sensor, all cables, connectors and switches for connecting the sensor and non-isolated inputs and outputs must be mains rated for use in 240V ac CATII.

#### Wiring

Wire the instrument in accordance with the wiring data given in these instructions. Take particular care not to connect AC supplies to the low voltage sensor input or other low level inputs or outputs. Only use copper conductors for connections, (except thermocouple). Ensure that the installation complies with local wiring regulations. In the UK use the latest version of the IEE wiring regulations (BS7671) and in USA use NEC Class 1 wiring methods.

**Power Isolation**

The installation must include a power isolating switch or circuit breaker. This device should be in close proximity to the instrument, within easy reach of the operator and marked as the disconnecting device for the instrument.

**Voltage rating**

The maximum continuous voltage applied between any of the following terminals must not exceed 230Vac  $\pm 15\%$ :

- relay output to logic, dc or sensor connections;
- any connection to ground.

The instrument must not be wired to a three phase supply with an unearthed star connection. Under fault conditions such a supply could rise above 240Vac with respect to ground and the product would not be safe

**Conductive pollution**

Electrically conductive pollution must be excluded from the cabinet in which the instrument is mounted. For example, carbon dust is a form of electrically conductive pollution. To secure a suitable atmosphere in conditions of conductive pollution, fit an air filter to the air intake of the cabinet. Where condensation is likely, for example at low temperatures, include a thermostatically controlled heater in the cabinet.

This product has been designed to conform to BSEN61010 installation category II, pollution degree 2. These are defined as follows:-

**Installation Category II (CAT II)**

The rated impulse voltage for equipment on nominal 230V supply is 2500V.

**Pollution Degree 2**

Normally only non conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

**Grounding of the temperature sensor shield**

In some installations it is common practice to replace the temperature sensor while the controller is still powered up. Under these conditions, as additional protection against electric shock, we recommend that the shield of the temperature sensor is grounded. Do not rely on grounding through the framework of the machine.

**Over-temperature protection**

When designing any control system it is essential to consider what will happen if any part of the system should fail. In temperature control applications the primary danger is that the heating will remain constantly on. This could damage the product, the machinery being controlled, or even cause a fire.

Reasons why the heating might remain constantly on include:

- the temperature sensor becoming detached from the process
- thermocouple wiring becoming short circuit;
- the controller failing with its heating output constantly on
- an external valve or contactor sticking in the heating condition
- The controller setpoint too high

Where damage or injury is possible, we recommend fitting a separate over-temperature protection unit, with an independent temperature sensor, which will isolate the heating circuit.

Please note that the alarm relays within the controller will not give protection under all failure conditions.

**Installation requirements for EMC**

- For general guidance refer to Eurotherm Controls EMC Installation Guide, HA025464.
- It may be necessary to fit a filter across the relay output to suppress conducted emissions. The filter requirements will depend on the type of load.
- If the unit is used in table top equipment which is plugged into a standard power socket, then it is likely that compliance to the commercial and light industrial emissions standard is required. In this case to meet the conducted emissions requirement, a suitable mains filter should be installed.

**Routing of wires**

To minimise the pick-up of electrical noise, the sensor input wiring should be routed away from high-current power cables. Where this is impractical, shielded cables should be used for the signal wiring. Where signal wiring is carrying (or could carry, under fault conditions) hazardous voltages\*, double insulation should be used.

\* A full definition of 'Hazardous' voltages appears under 'Hazardous Live' in BS EN61010. Briefly, under normal operating conditions Hazardous voltage levels are defined as >30V RMS (42.2V peak) or >60V dc.



Contact Information

**Eurotherm Head Office**

Faraday Close, Durrington,  
Worthing, West Sussex,  
BN13 3PL

**Sales Enquiries**

T +44 (01903) 695888  
F 0845 130 9936

**General Enquiries**

T +44 (01903) 268500  
F 0845 265982

**Worldwide Offices**

[www.eurotherm.com/global](http://www.eurotherm.com/global)



Scan for local contacts

*Represented by:*

©Copyright Invensys Eurotherm Limited 2013

Invensys, Eurotherm, the Eurotherm logo, Chessell, EurothermSuite, Mini8, Eycan, Eyris, EPower, EPack nanodac, piccolo, Foxboro, and Wonderware are trademarks of Invensys plc, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.

All rights are strictly reserved. No part of this document may be reproduced, modified or transmitted in any form by any means, neither may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior written permission of Invensys Eurotherm Limited.

Eurotherm Limited pursues a policy of continuous development and product improvement. The specifications in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only.

Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.

